


ONE UPHOLSTERED BED FULL/QUEEN ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD PANEL

1 PC

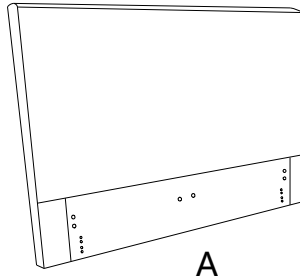

A

HARDWARE PACKED IN BOX#1

1	ALLEN BOLT(1/4"x1")		8 PCS
2	FLAT WASHER(5/16")		8 PCS
3	LOCK WASHER(5/16")		8 PCS
4	ALLEN KEY(1/4")		1 PC

HARDWARE PACKED IN BOX#2

1	ALLEN BOLT(5/16"x1")		4 PCS
2	ALLEN BOLT(5/16"x2-1/2")		2 PCS
3	FLAT WASHER(5/16")		6 PCS
4	LOCK WASHER(5/16")		6 PCS
5	ALLEN KEY(5/16")		1 PC

BOX#2

B. LEFT SIDE RAIL

1 PC

C. RIGHT SIDE RAIL

1 PC

D. FOOTBOARD

1 PC

E. SLAT

26 PCS

F. CENTER SLAT SUPPORT

1 PC

G. SIDE RAIL SLAT CLIP

26 PCS

H. CENTER SUPPORT SLAT CLIP

13 PCS


I. SLAT SUPPORT LEG

2 PCS


HARDWARE SET




B




C

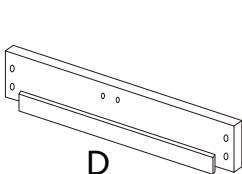


D

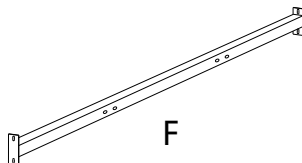


F



E



H





G



I


ONE UPHOLSTERED BED ASSEMBLED

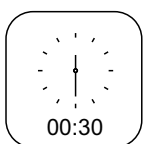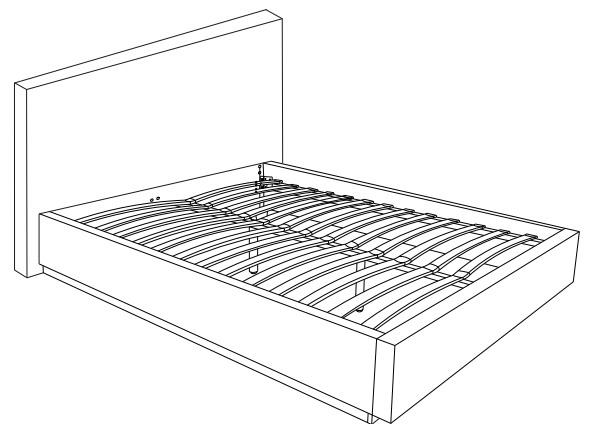


ONE UPHOLSTERED BED FULL/QUEEN ASSEMBLY INSTRUCTIONS



STEP 1

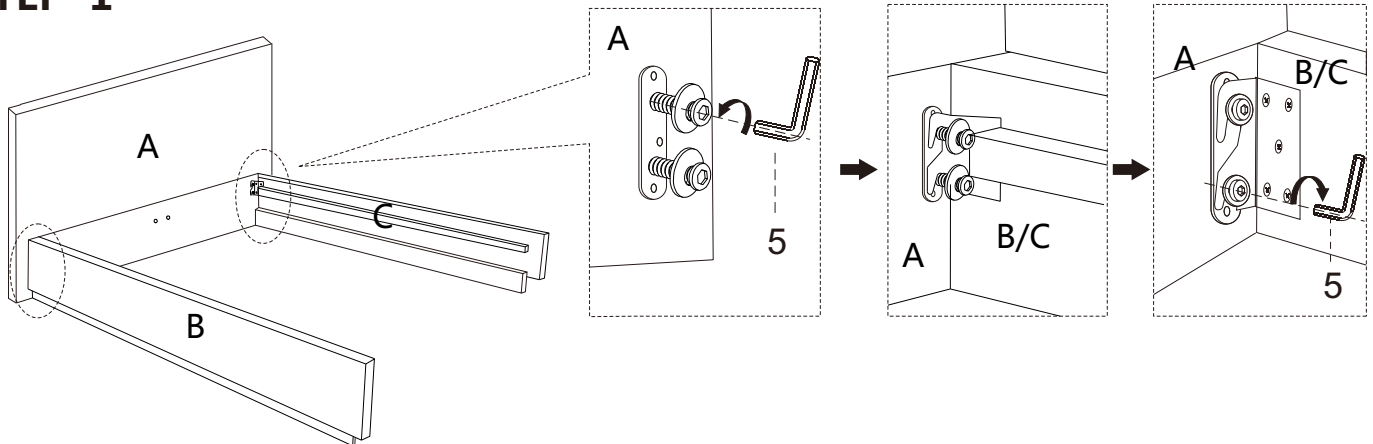


STEP 2

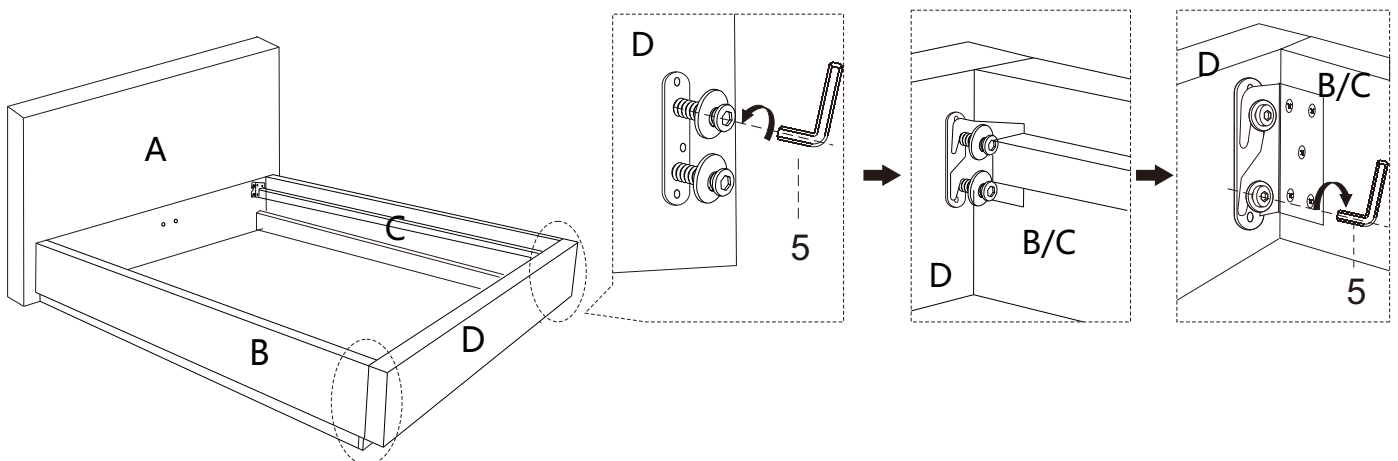

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 3, 4, 5&6 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 3.


STEP 3 NOTE: USE HARDWARE PACKED IN BOX #2 FOR STEPS 3 & 4.

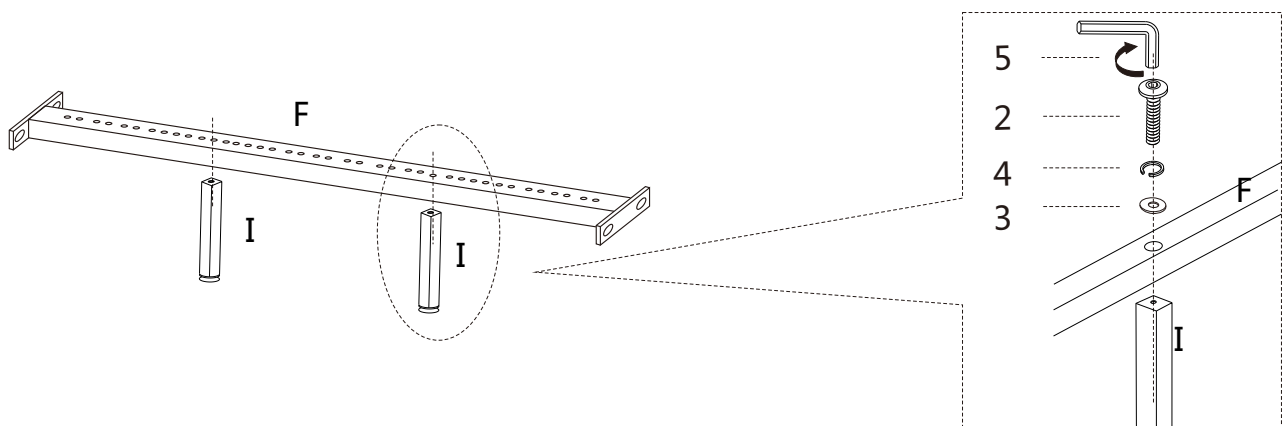


ONE UPHOLSTERED BED FULL/QUEEN ASSEMBLY INSTRUCTIONS




STEP 4

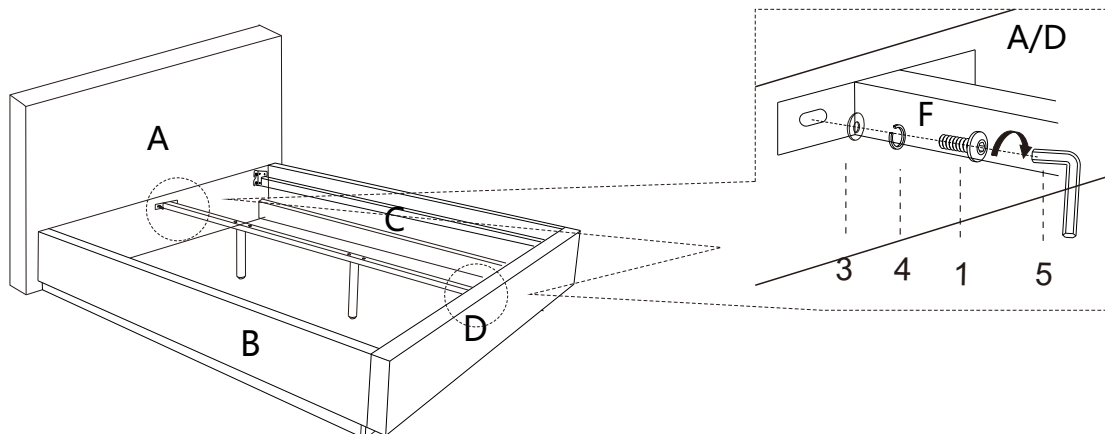


STEP 5: STARTING FROM HEADBOARD

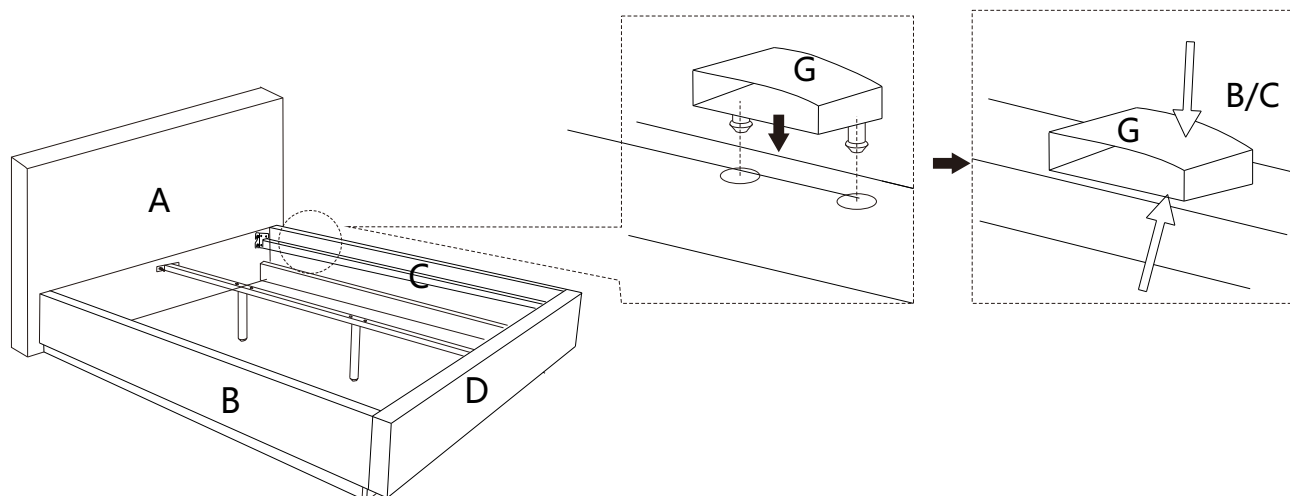

STEP 6

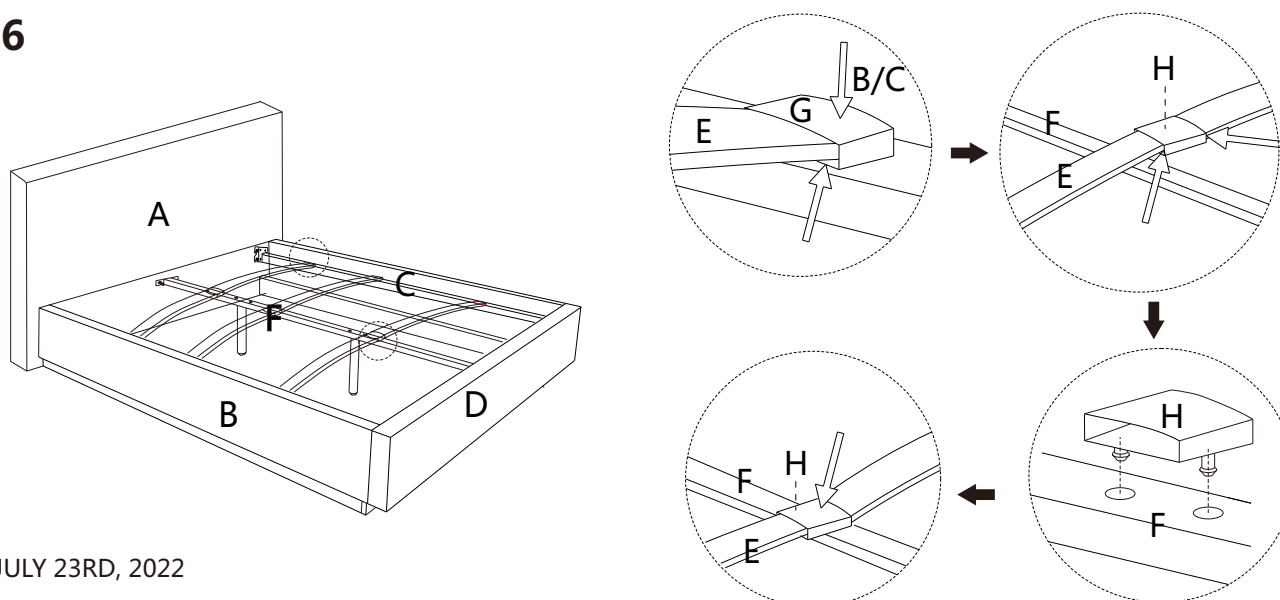

ONE UPHOLSTERED BED FULL/QUEEN ASSEMBLY INSTRUCTIONS

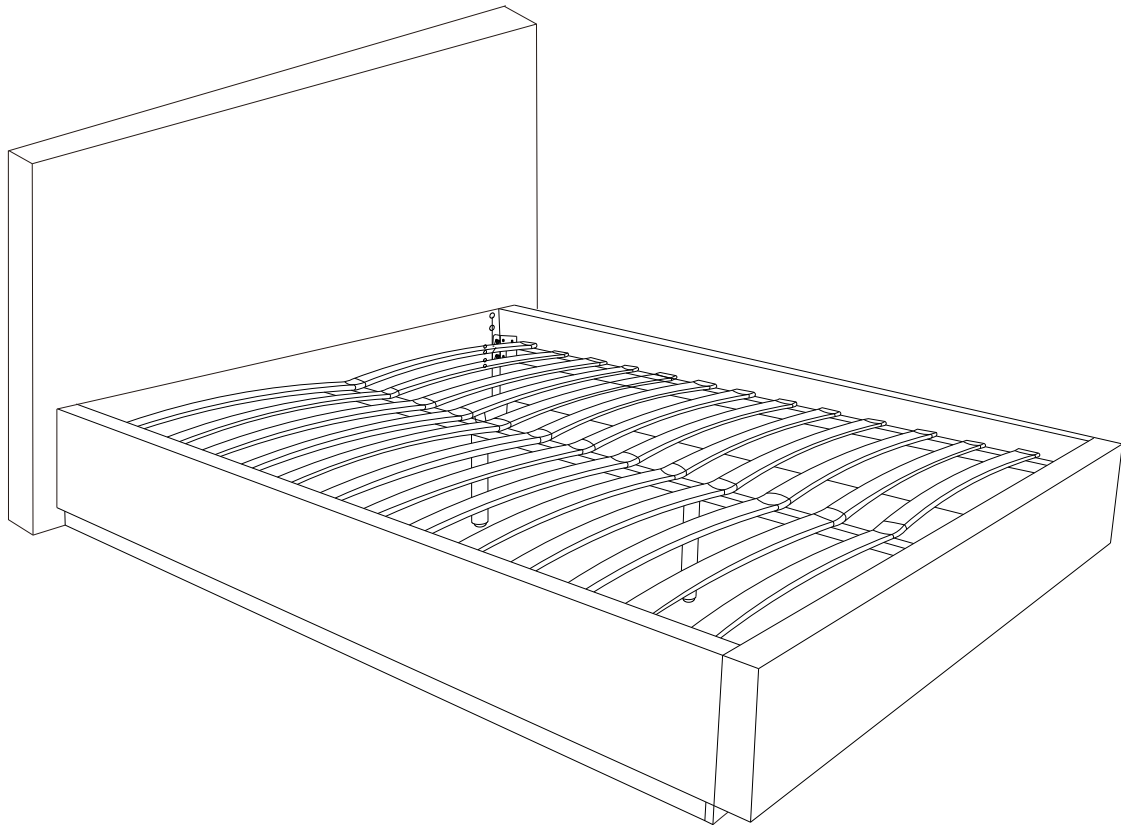


ASSEMBLY COMPLETE.

INSTRUCTIONS FOR ADJUSTING LEVELERS:

POSITION THE BED IN YOUR ROOM.
LOCATE LEVELERS UNDER EACH
SUPPORT LEG (I).

TURN COUNTER-CLOCKWISE TO
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG
SUPPORT IS APPLYING EQUAL UPWARD
PRESSURE ON THE CENTER SLAT.

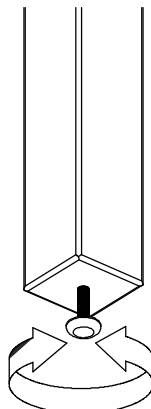

UPDATED: JULY 23RD, 2022

MAINTENANCE INSTRUCTIONS:

- REMOVE BOX SPRING AND MATTRESS
BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.
DRAGGING CAN DAMAGE
CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING
YOUR BED.

ONE UPHOLSTERED BED FULL/QUEEN ASSEMBLY INSTRUCTIONS



APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.



WARNING!

SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT	26 PCS
F. CENTER SLAT SUPPORT	1 PC
G. SIDE RAIL SLAT CLIP	26 PCS
H. CENTER SUPPORT SLAT CLIP	13 PCS
I. SLAT SUPPORT LEG	2 PCS

STEP 1 :

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO UNSCREW THE PHILLIPS SCREWS AND REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

