
KINCAID
SOLID WOOD SINCE 1946


ASSEMBLY INSTRUCTION

430 - 324/326 LINEAGE PANEL BED HEADBOARD

www.kincaidfurniture.com
Phone : 828-728-3261.

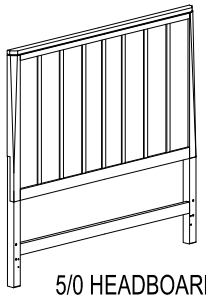

5/0 HEADBOARD

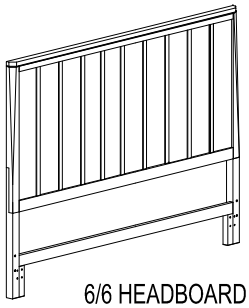

6/6 HEADBOARD

3) Assembly is completed.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

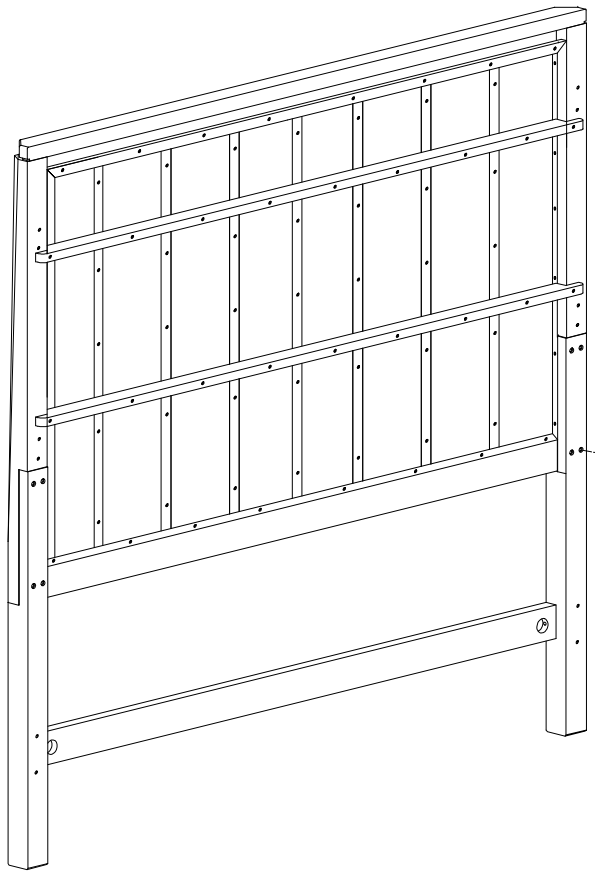

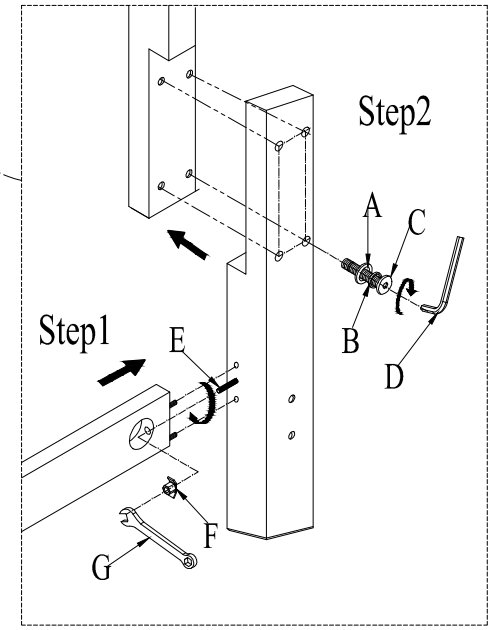

NO.	Dimension	Shape	Quantity
A	Flat Washer Ø5/16"*19mm		8pcs
B	Lock Washer Ø5/16"		8pcs
C	Bolt 5/16"*45mm		8pcs
D	Allen Key 4mm		1pc
E	Thread Rod 5/16"*88mm		2pcs
F	Curved Slotted Washer 5/16"		2pcs
G	Wrench 12mm		1pc