
KINCAID®

SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTIONS

112-910 BUNCHING COFFEE TABLE
112-916 CHAIRSIDE TABLE
112-915 END TABLE

www.kincaidfurniture.com
Phone : 828-728-3261

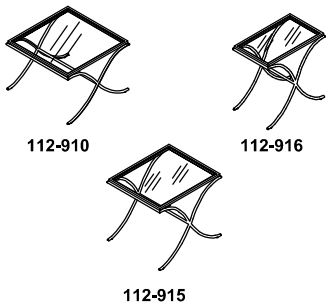

IMPORTANT NOTES :

. Place all parts on the clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
. Check to be sure that you have all parts and hardware.
. Remove all wrapping materials, including staples and packing straps before you start to assemble.
. Do not tighten all screws and bolts untill completely assembled.
. Keep all hardware out of the reach of children.

Note:

1. Attach the Glass Pads (A) to the top frame then insert the glass to metal frame (as shown Fig.1)
2. Adjust levelers on the bottom of table legs to make table flat (as shown Fig.2)

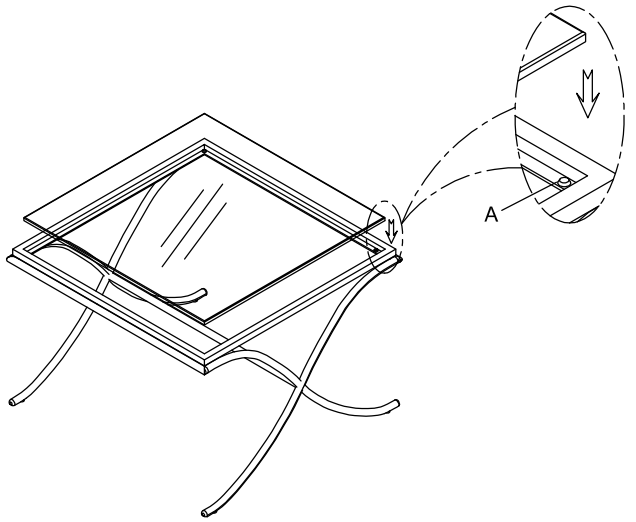


Fig.1

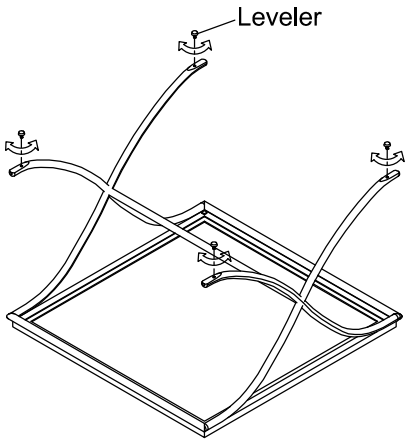


Fig.2

HARDWARE LIST			
ITEM	DRAWING	DESCRIPTION	Q' TY
A		Glass Pad	4PCS

MADE IN VIETNAM