


Installation Guide

Deck and Wall-Mount Handle Kit

K-7744

K-7751

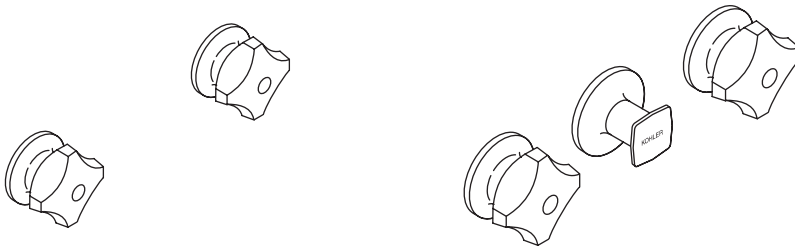

M product numbers are for Mexico (i.e. K-12345**M**)


Los números de productos seguidos de **M** corresponden a México (Ej. K-12345**M**)

Français, page " Français-1"
Español, página " Español-1"

113433-2-BB

THE BOLD LOOK
OF **KOHLER**®

Tools and Materials

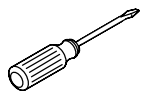

Screwdrivers



Hex Wrenches



Plumbers
Putty


Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems, please don't hesitate to contact us. Our phone numbers and website are listed on the back cover. Thanks again for choosing Kohler Company.

Before You Begin


NOTE: One style of handle is shown in each installation type. The same installation procedures apply to other handle styles.

- Please read all instructions before you begin.
- Observe all local plumbing and building codes.
- Kohler Co. reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

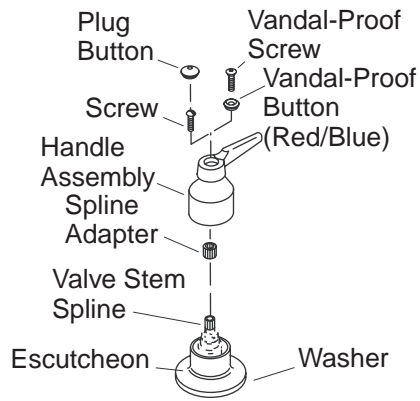


1. Install Deck-Mount Handles

- Close the valves (hot = clockwise, cold = counterclockwise).
- Install the washer into the escutcheon base.
- Thread the escutcheon onto the valve body.
- Install the spline adapter about halfway onto the valve stem spline.
- Press the handle loosely onto the spline adapter, and check the alignment of the handle.
- For further alignment, remove the handle, and reposition the spline adapter on the valve stem until the handle alignment is correct.
- Secure the handle with the screw, and press the plug button in place.
- For vandal-proof configurations, insert the applicable red or blue vandal-proof button, and secure it with the screw.
- Repeat for the other handle.

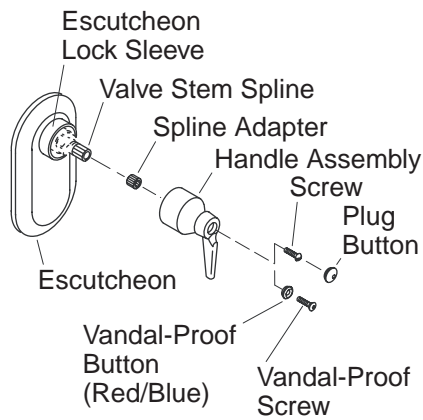


2. Installing Wall-Mount Handle - With Stops

- Position the escutcheon on the valve body.
- Thread the escutcheon lock sleeve onto the valve body until it contacts the escutcheon. The sleeve will hold the escutcheon in place.
- Install the spline adapter about halfway onto the valve stem spline.
- Partially install the handle to the spline adapter, and check the alignment of the handle. Lever handles should point down.
- For further alignment, remove the handle, and reposition the spline adapter on the valve stem spline until the handle alignment is correct.
- Secure the handle with the screw, and press the plug button in place.
- For vandal-proof configurations, insert the applicable red or blue vandal-proof button, and secure it with the screw.
- Repeat for the other handle.

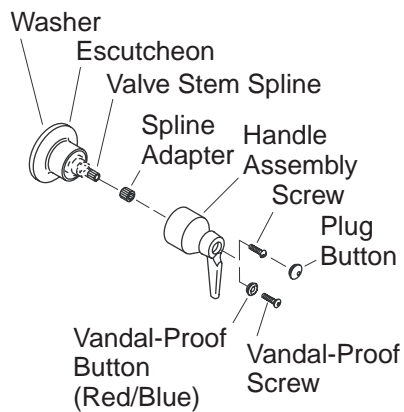

3. Installing Wall-Mount Handles - Without Stops

- Install the washer into the base of the escutcheon, and thread the escutcheon onto the valve body.
- Install the spline adapter about halfway onto the valve stem spline.
- Press the handle loosely onto the spline adapter, and check the alignment of the handle.
- For further alignment, remove the handle, and reposition the spline adapter on the valve stem spline until the handle alignment is correct. Lever handles should point down.
- Secure the handle with the screw, and press the plug button in place.
- For vandal-proof configurations, insert the applicable red or blue vandal-proof button, and secure with the screw.
- Repeat for the other handle.

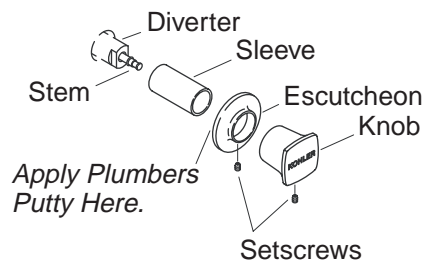

4. Installing the Diverter Handle

- Remove the thread protector if it is installed on the diverter.
- Thread the sleeve onto the diverter.
- Apply a ring of plumbers putty or other sealant to the back of the escutcheon according to the manufacturer's instructions.
- Slide the escutcheon onto the sleeve until it is tight against the finished wall.
- Tighten the setscrew.
- Press the knob onto the diverter stem, and tighten the setscrew.