a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

ASSEMBLY INSTRUCTIONS

Tel: 828-728-3261
www.americandrew.com

TOOLS REQUIRED:

Allen key (supplied, part # E)



929-916

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Lay table top upside down on a soft, flat surface . attach three legs on table top by using bolts (A), lock washer (B), flat washers (C) and with Allen key (E). (see Figure 1).

2. Attach the other leg to the iron frame and table top by using bolts (A), lock washer (B) , flat washers (C) and with Allen key (E). (see Figure 2).

3. To assemble iron frame with the legs, use wood screws (D) to tighten legs, to tighten iron frame by phillips head screw driver (not included) . (see Figure 3).

Figure 1

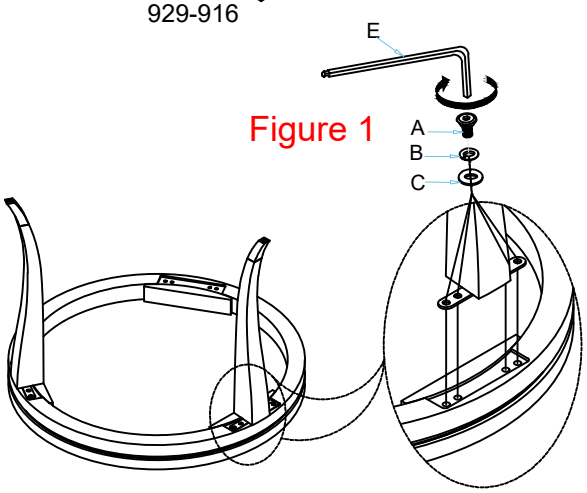


Figure 2


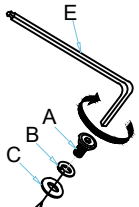


Figure 3

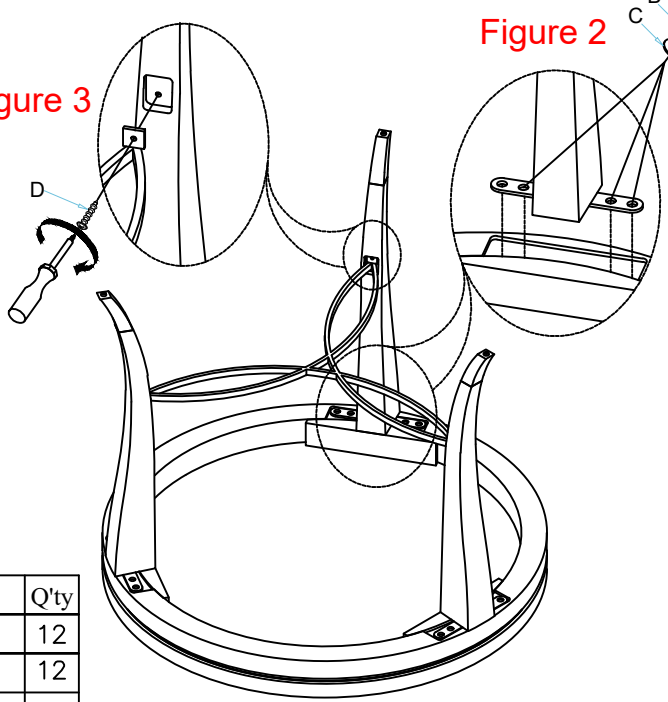

No.		Hardware List	Q'ty
A		Bolt Ø5/16 x L3/4"	12
B		Lock Washer Ø5/16"	12
C		Flat Washer Ø5/16"	12
D		Round head screw 8 x L3/4"	3
E		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!