


PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D319

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

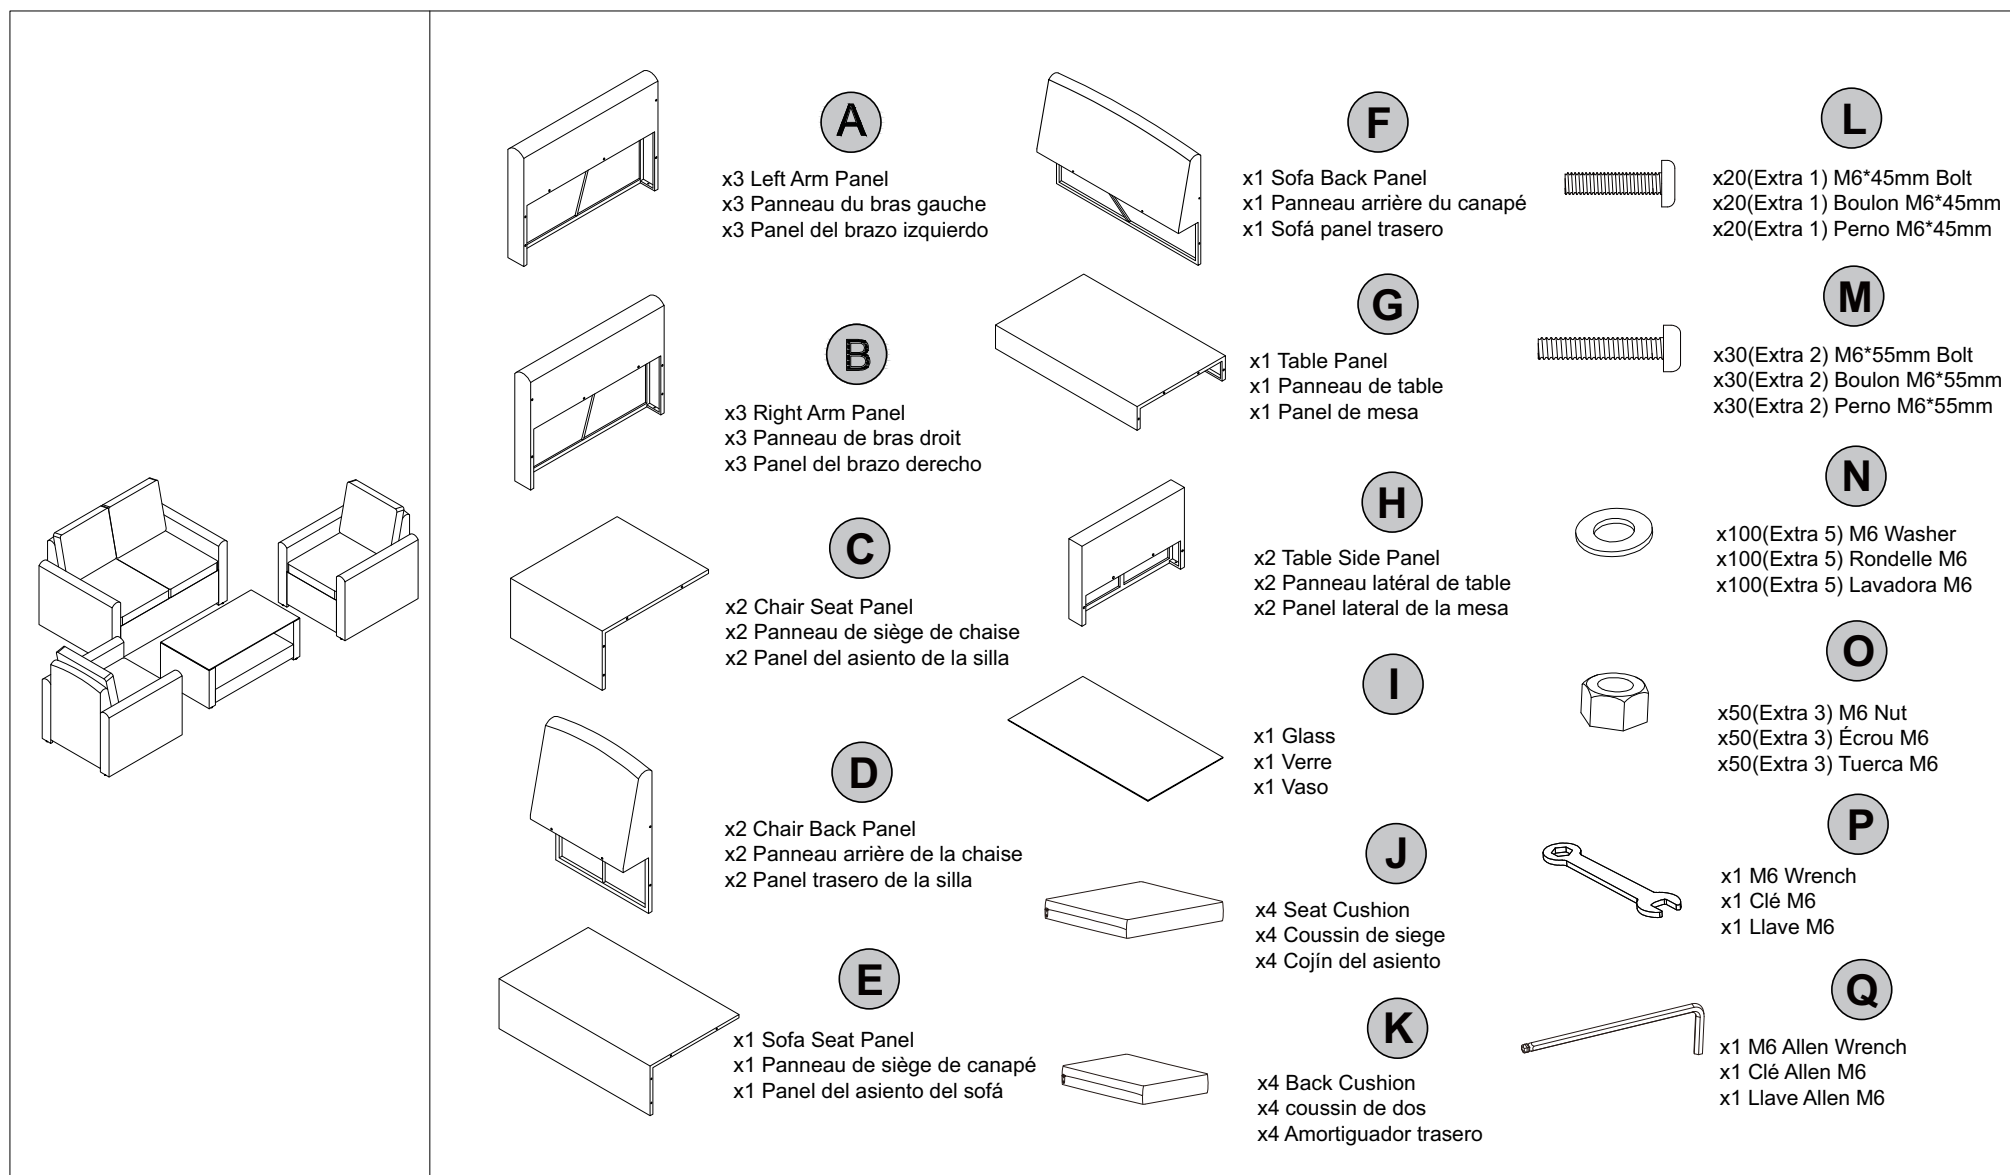


ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D319

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

Chair Assembly:


Lay Left Arm Panel (A) on a soft dry surface and align the bolt holes on Chair Back Panel (D) with those on the arm panel. Add Washer (N) to Bolt (M) and insert through the bolt holes as shown in the diagram. Add another Washer (N) and then Nut (O) and finger tighten. Use the provided Wrench (P) and Allen Wrench (Q) to tighten, but do not tighten completely. Now add Seat Panel (C) aligning the boltholes, and repeat the bolt process as in step 1. Now add Right Arm Panel (B) repeating the bolt process. Make sure all of the panels are aligned properly and tighten all bolts completely.

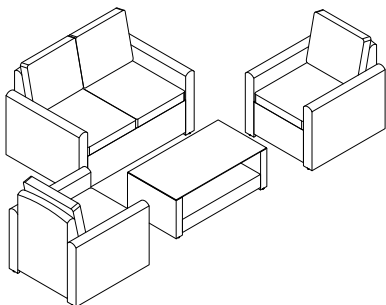


Sofa Assembly:

Lay Left Arm Panel (A) on a soft dry surface and align the bolt holes on Sofa Back Panel (F) with those on the arm panel. Add Washer (N) to Bolt (M) and insert through the bolt holes as shown in the diagram. Add another Washer (N) and then Nut (O) and finger tighten. Use the provided Wrench (P) and Allen Wrench (Q) to tighten, but do not tighten completely.


Step1

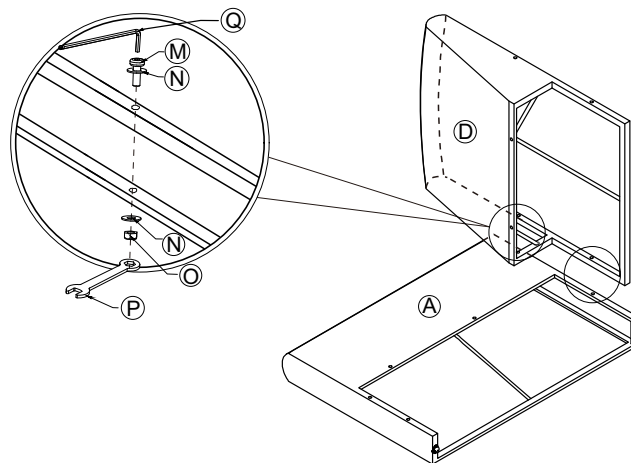


Step2

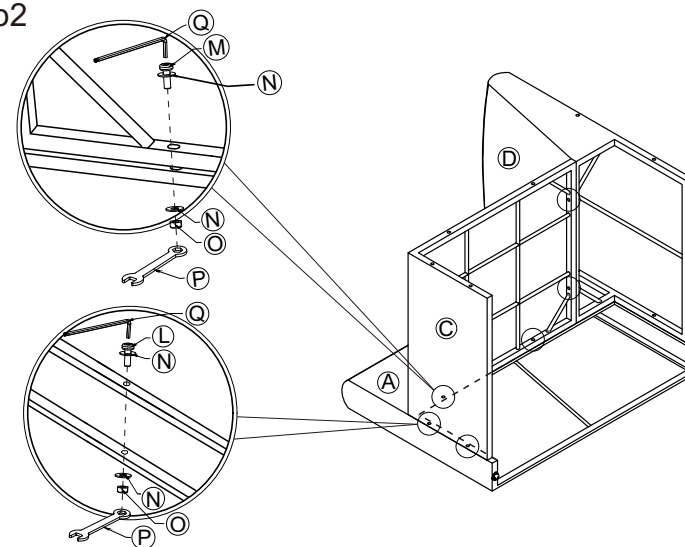

Step3

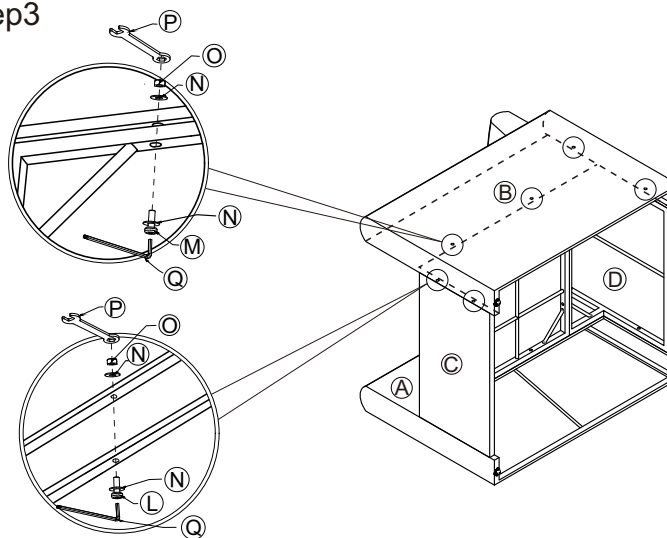

Step4

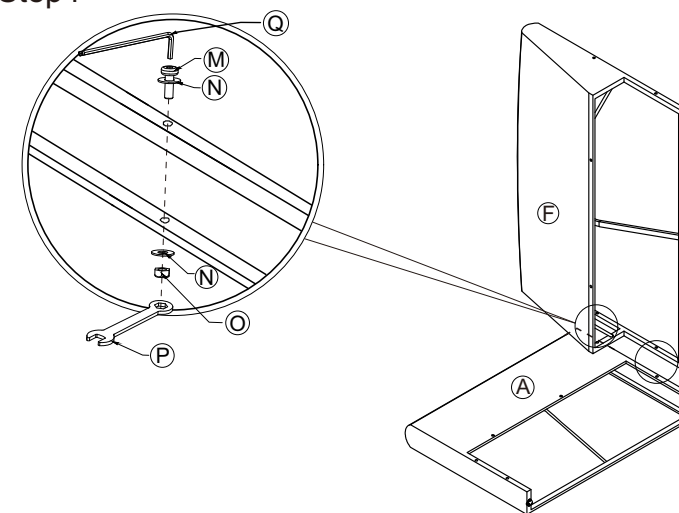

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE

ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D319

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

Sofa Assembly continued:

Now add Seat Panel (E) aligning the bolt holes, and repeat the bolt process as in step 1. Now add Right Arm Panel (B) repeating the bolt process. Make sure all of the panels are aligned properly and tighten all bolts completely.


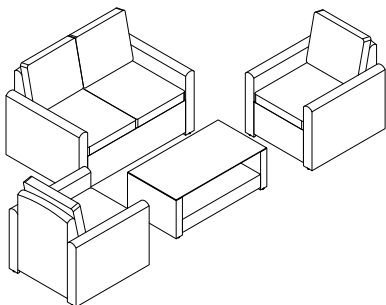



Table Assembly:

Lay Table Side Panel (H) on a soft surface. Add Table Panel (G) aligning the holes for the bolts with those on the side panel. Add Washer (N) to Bolt (L) and insert through the bolt holes as shown in the diagram. Add another Washer (N) and then Nut (O) and finger tighten. Use the provided Wrench (P) and Allen Wrench (Q) to tighten, but do not tighten completely. Now add Table Side Panel (H) repeating the bolt process. Make sure all of the panels are aligned properly and tighten all bolts completely.


Step5

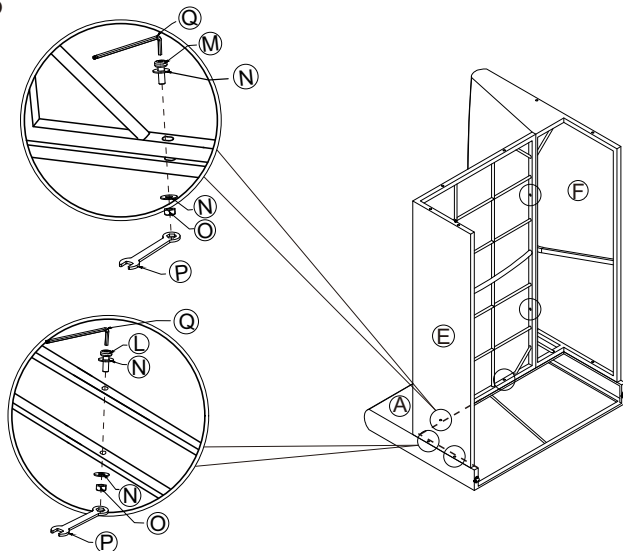


Step6

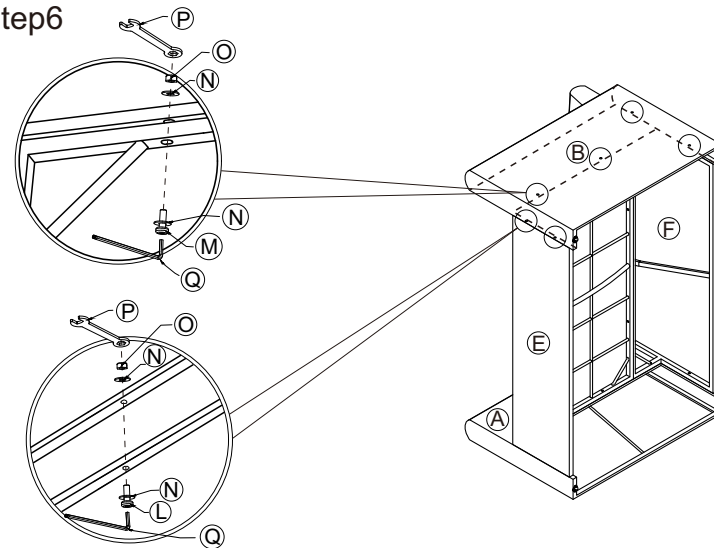

Step7

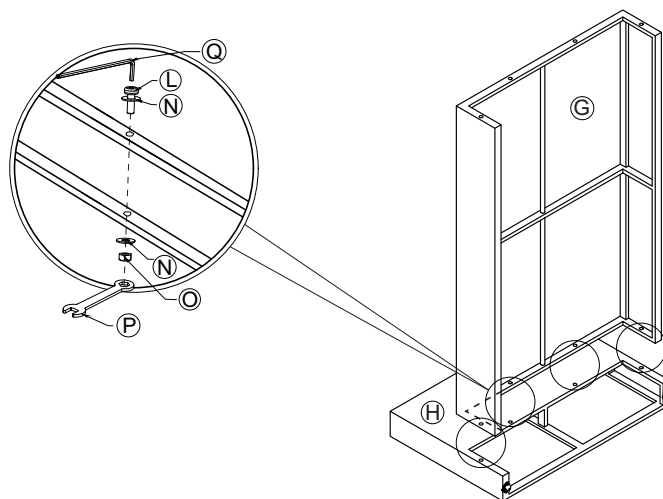

Step8

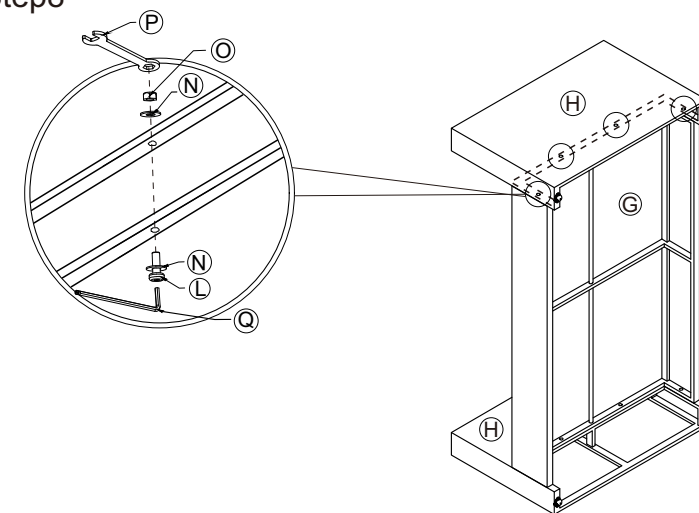

ASSEMBLY INSTRUCTIONS / NOTICE DE MONTAGE / INSTRUCCIONES DE MONTAJE


ITEM NO. / ARTICLE NO. / ARTICULO NO : DS-D319

DESCRIPTION / DESCRIPCIÓN : Modern Weave Outdoor Set / Ensemble d'extérieur à armure moderne / Conjunto al aire libre de tejido moderno

Completing Assembly:

Place the assembled furniture in the desired location. Add Glass Top (I) to the table, and Seat & Back Cushions (J & K) to complete the assembly process.

ENJOY!

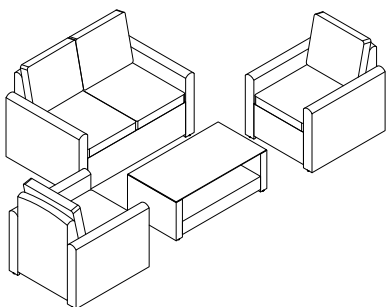

Step9

