
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

430-855 SUMMIT DISPLAY CABINET

www.kincaidfurniture.com
Phone : 828-728-3261.

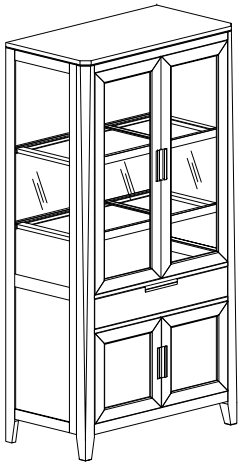

2) Assembly is completed.

IMPORTANT NOTES :

. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

