

88 5522 70


Vanity with Mirror

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home
Styles

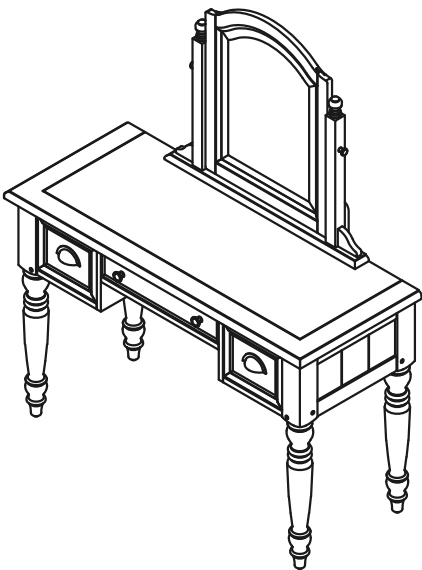

Part List

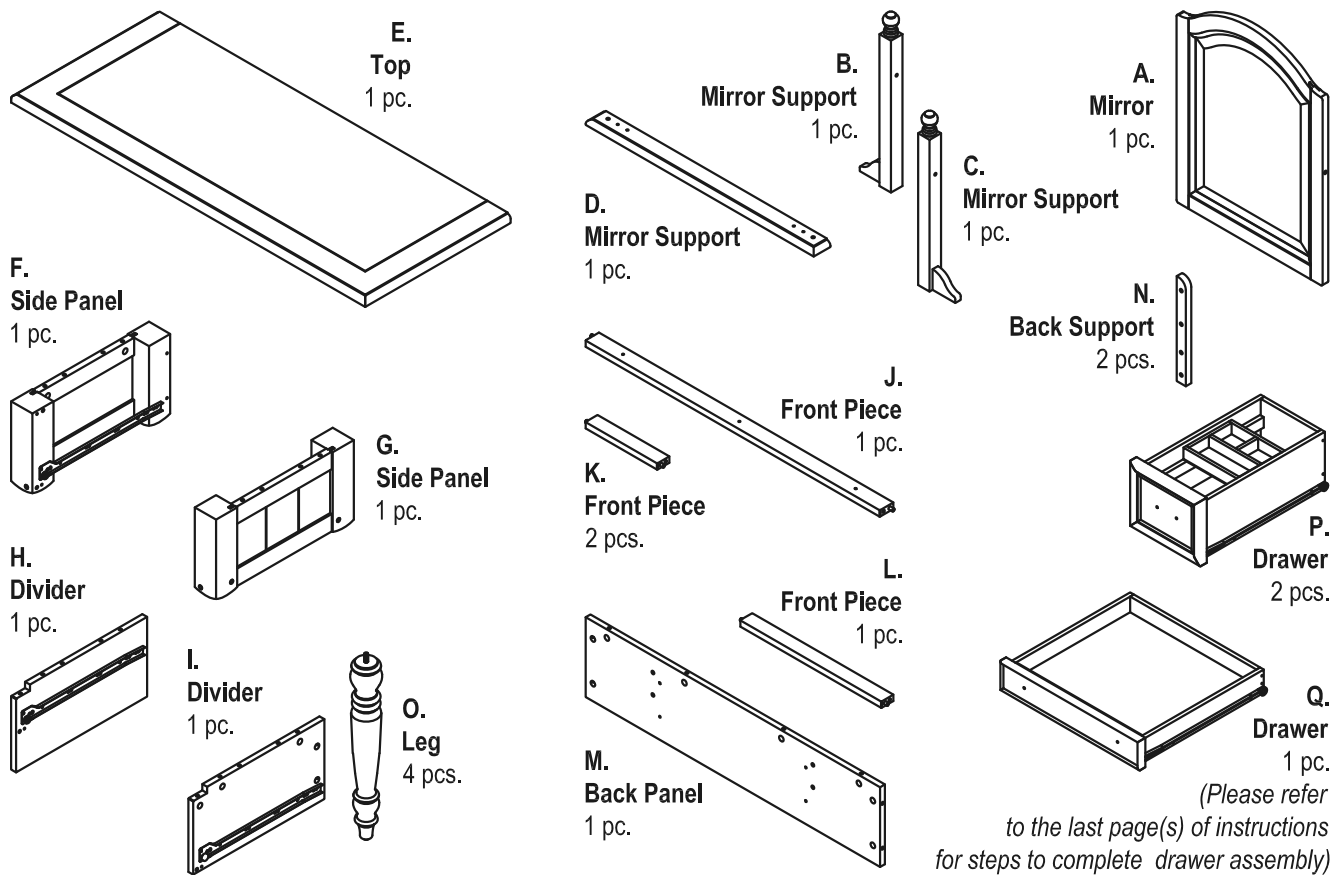

Hardware List

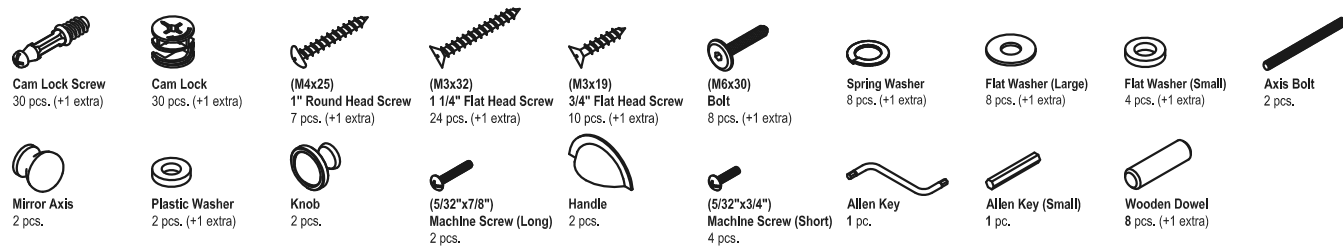

Tools required for assembly : Phillips screwdriver

Tools recommended for assembly : Level


Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/9

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Allen Key in a safe place as you may need to tighten up the Bolts in the future.
- * After assembly, item must be level to work properly. use the included adjustable levelers to level
- * Use a soft cloth between these parts and the floor.

STEP 1

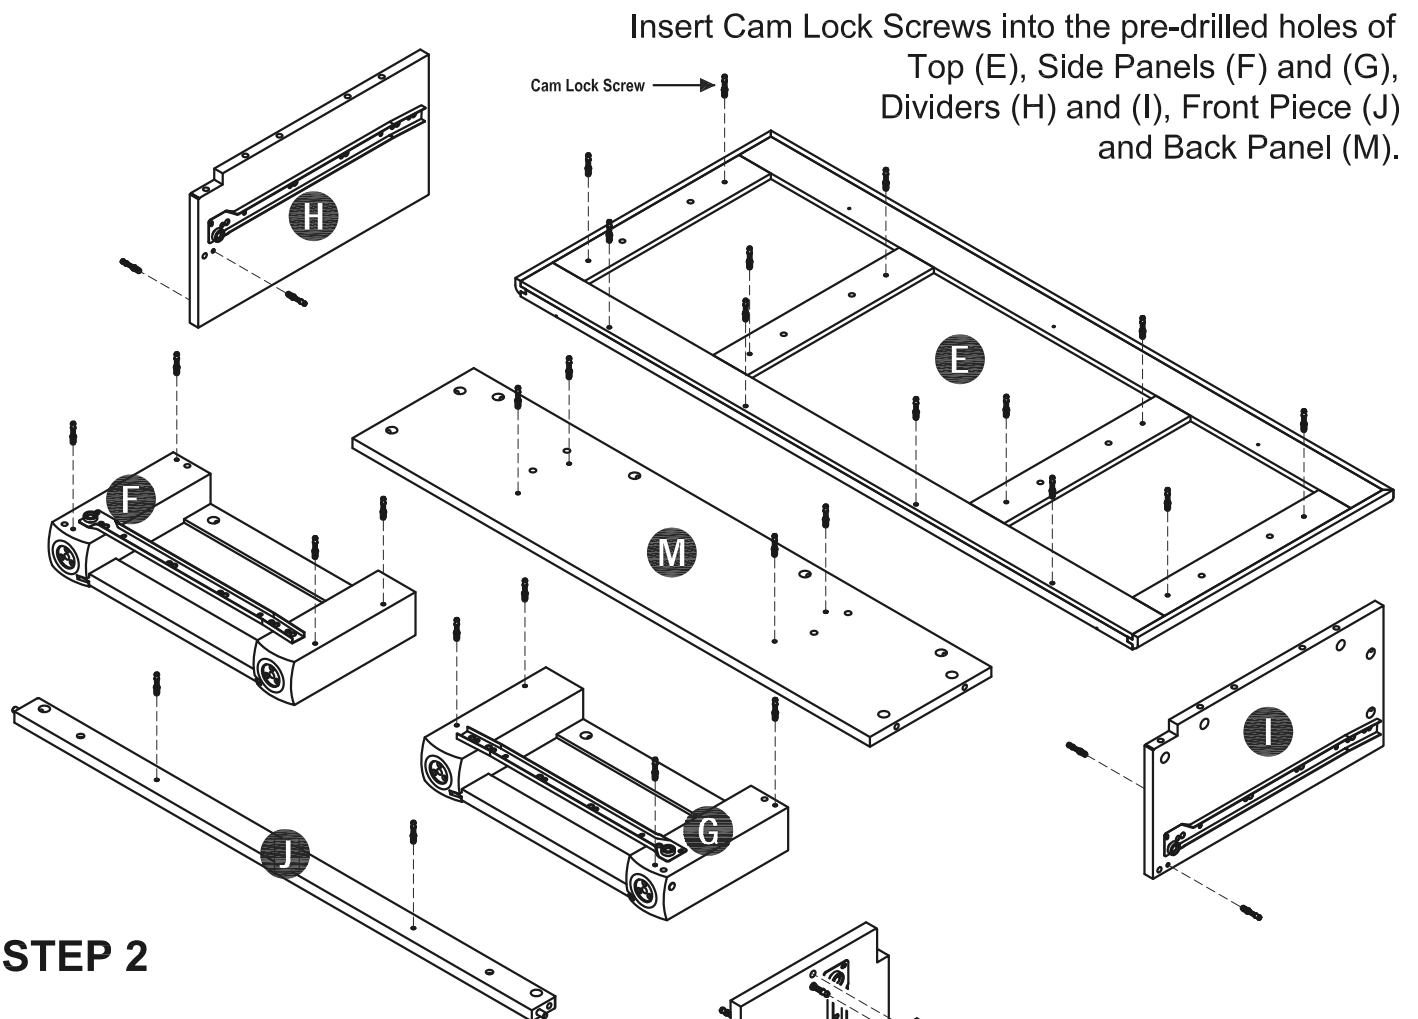

STEP 2

Attach Front Piece (L) to Dividers (H) and (I) with Cam Locks.
(See Figure 1)


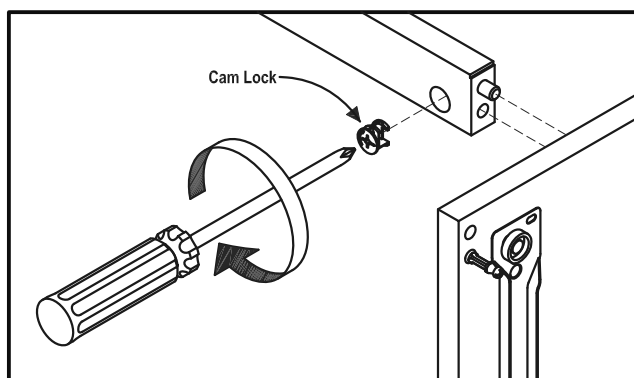



Figure 1

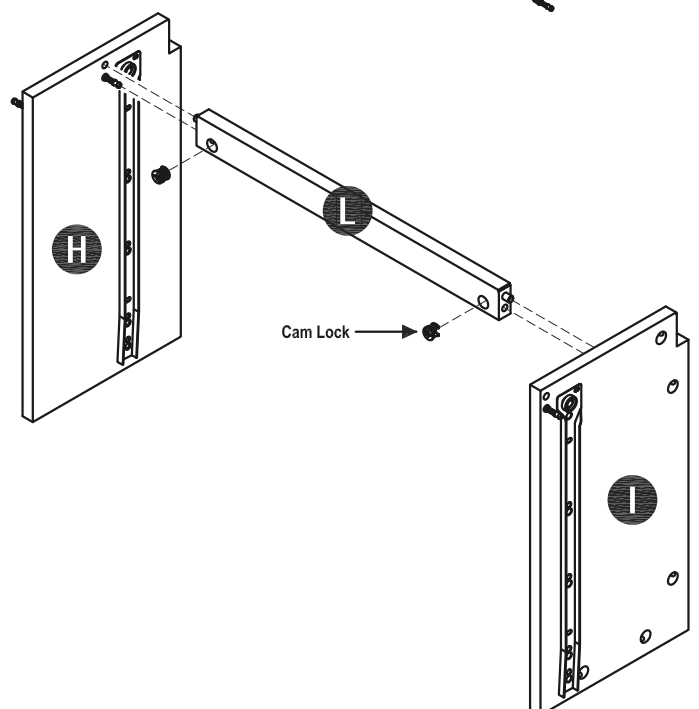

STEP 3

Attach unit to Back Panel (M)
with Cam Locks.

Attach Front Pieces (J) and (K)
to unit with Cam Locks.

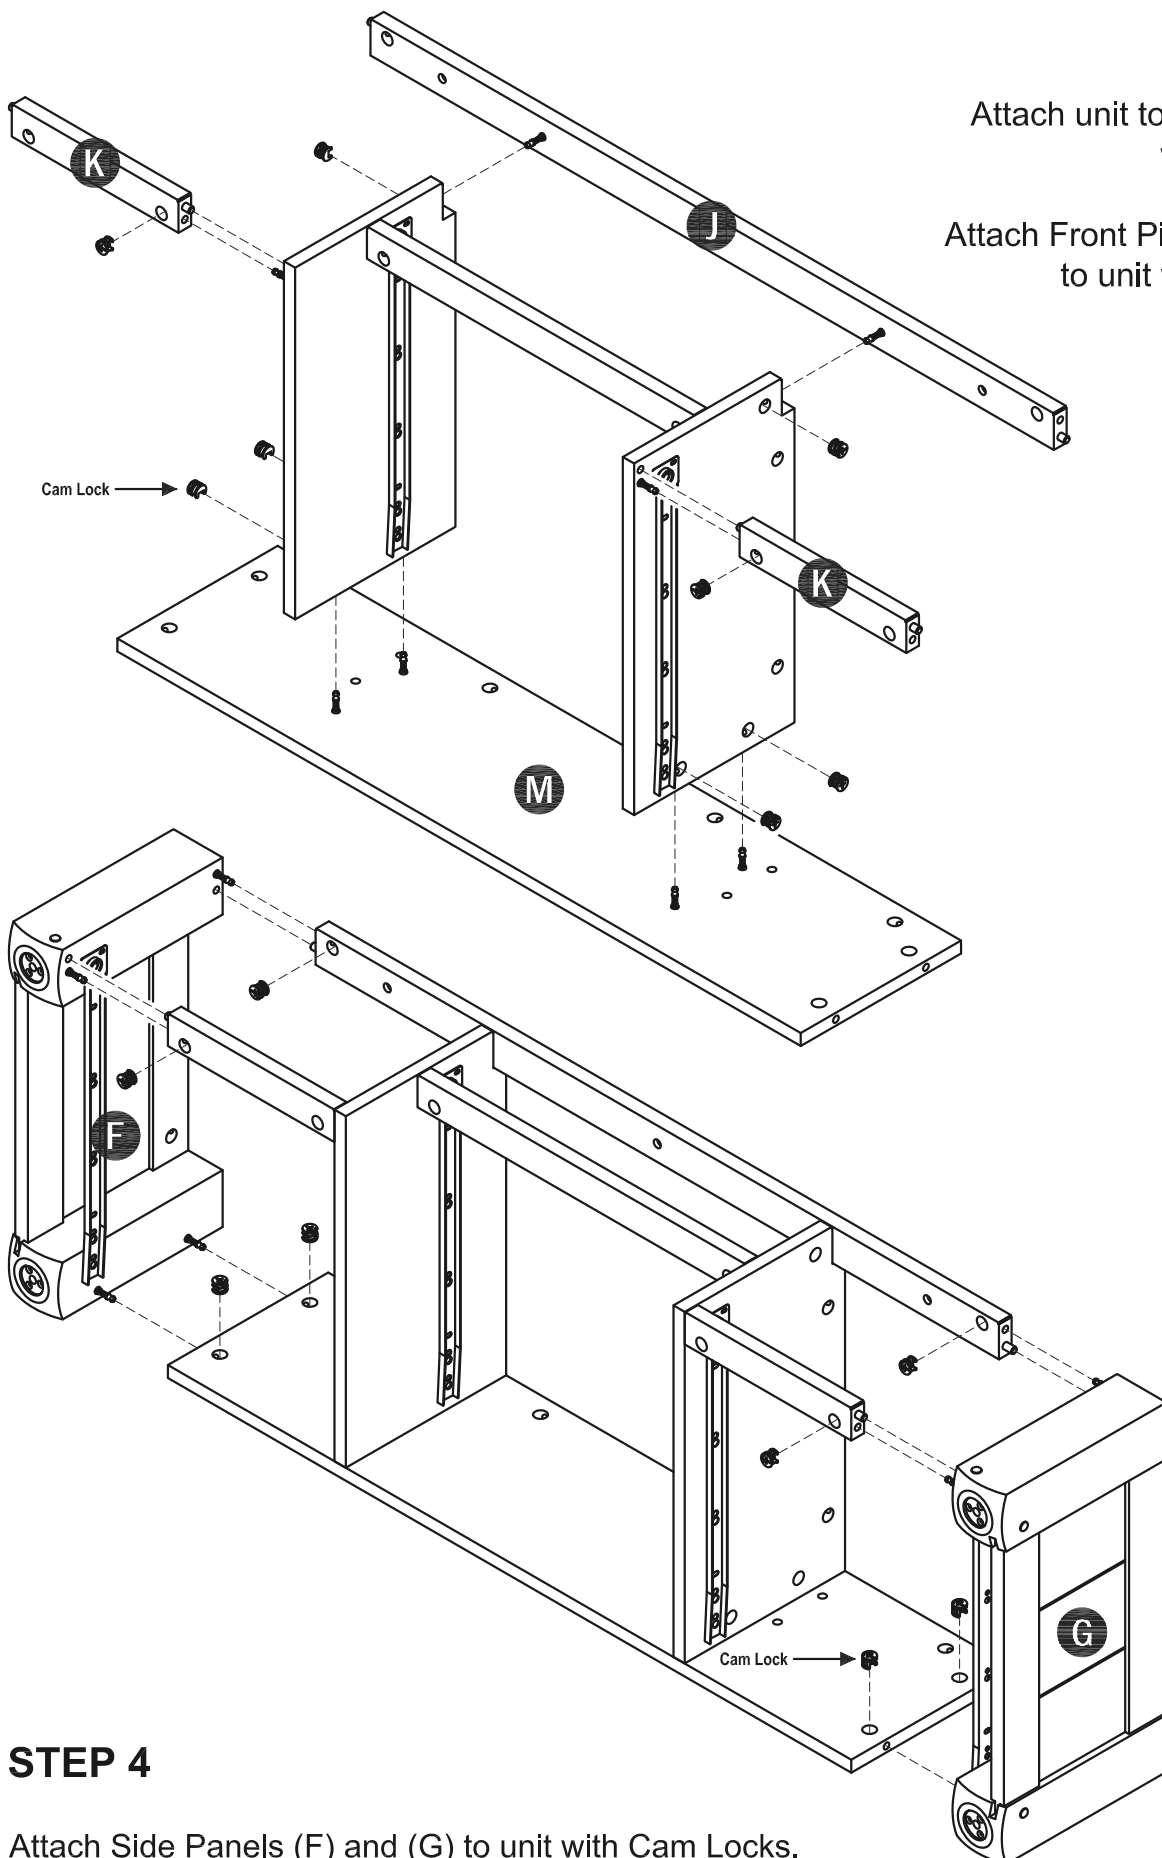



STEP 4

Attach Side Panels (F) and (G) to unit with Cam Locks.

STEP 5

Attach Top (E) to unit with Cam Locks, Wooden Dowels and 1" Round Head Screws.

Note: A Philips screwdriver 5" or less in length is recommended.

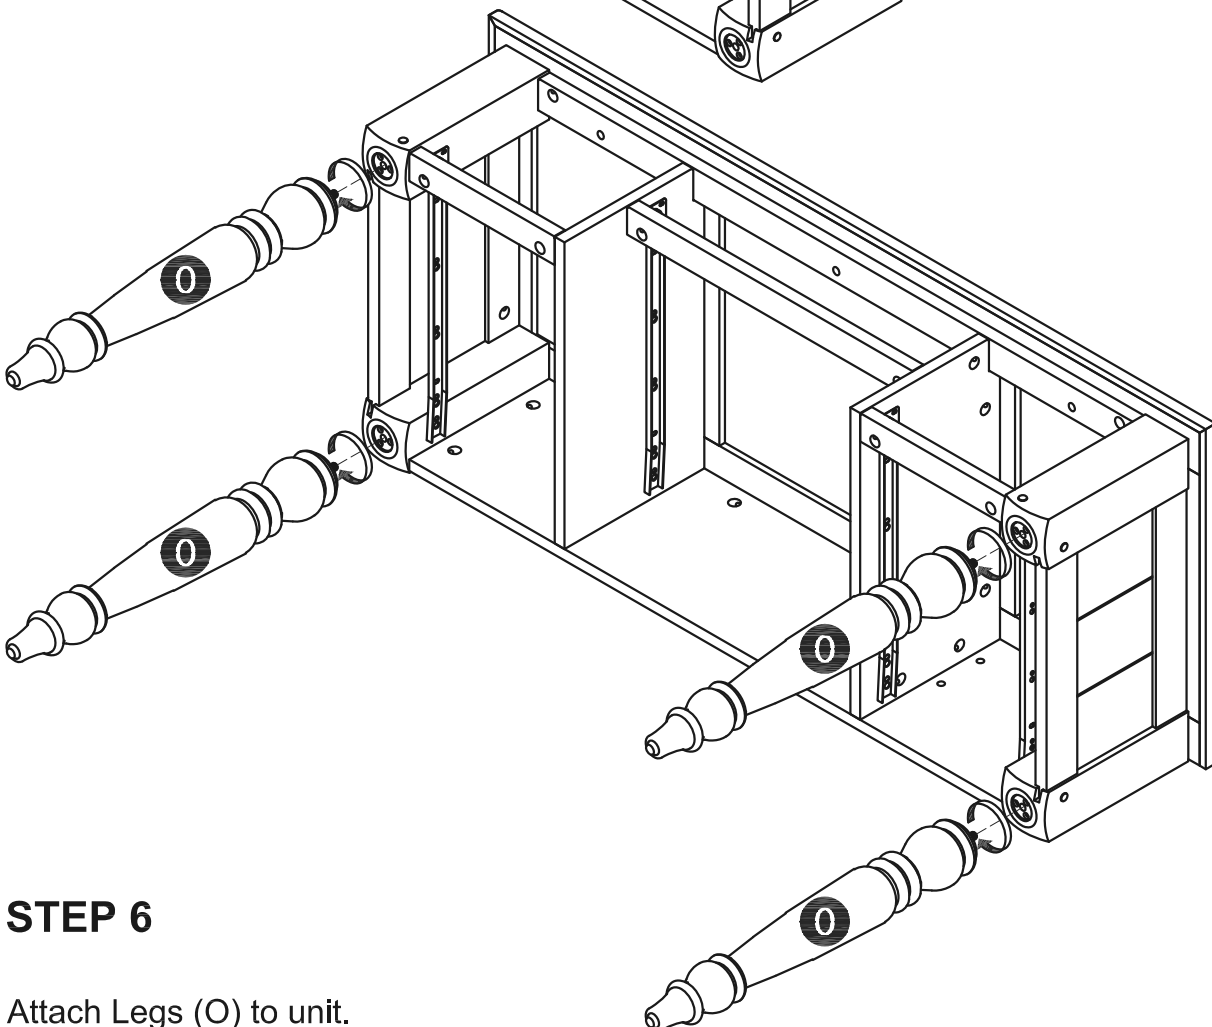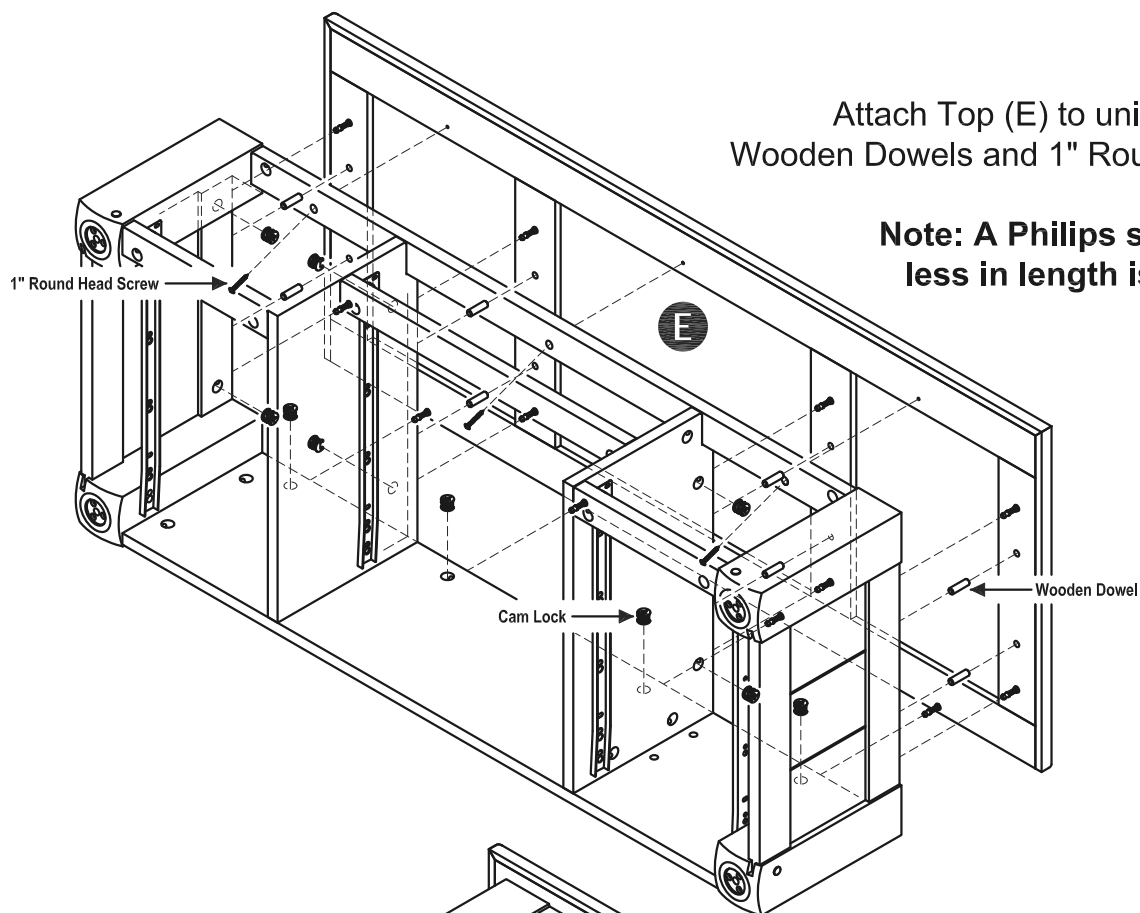


STEP 6

Attach Legs (O) to unit.

STEP 7

Attach Mirror Supports (B) and (C) to Mirror Support (D) with 1" Round Head Screws.

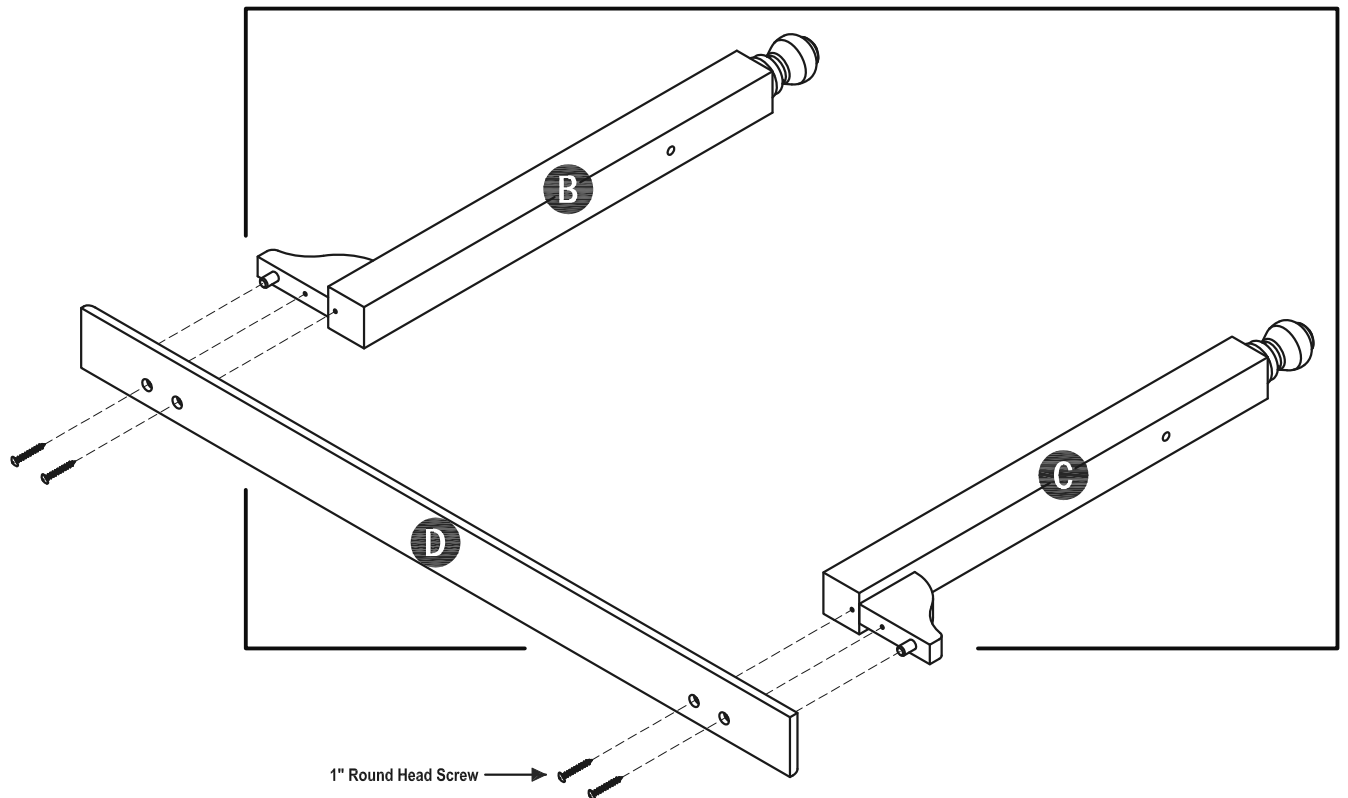

STEP 8

Attach Mirror (A) to unit with Axis Bolts, Mirror Axis and Plastic Washers. (See Figure 2)


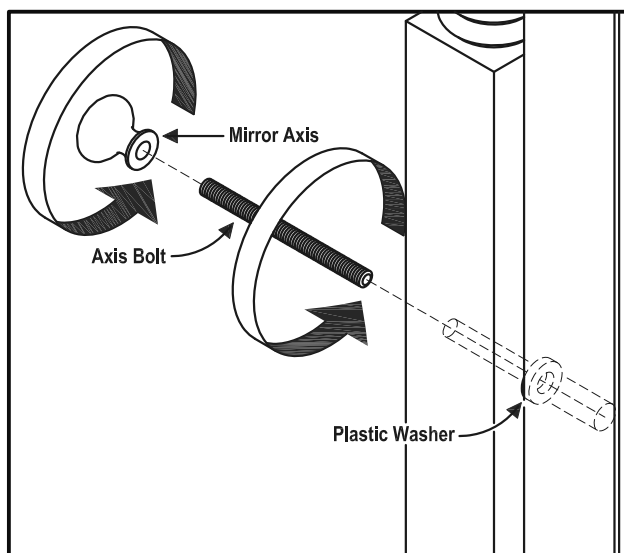


Figure 2

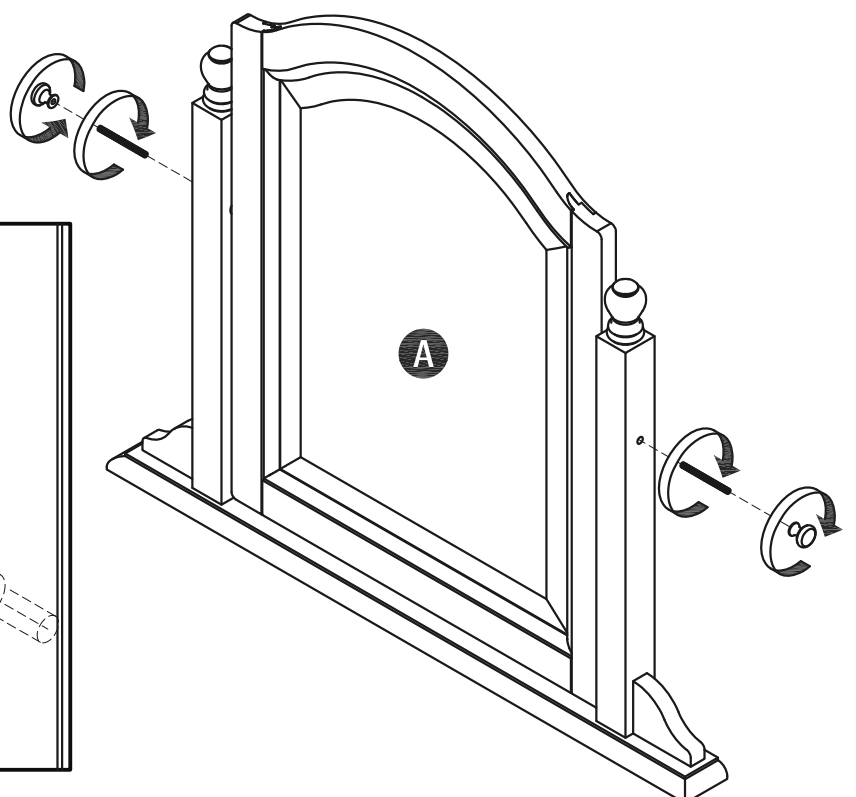

STEP 9

Attach Mirror Supports (B), (C) and (E) to unit with Bolts, Flat Washers (Large) and Spring Washers.

Tighten with Allen Key.
(See Figure 3)

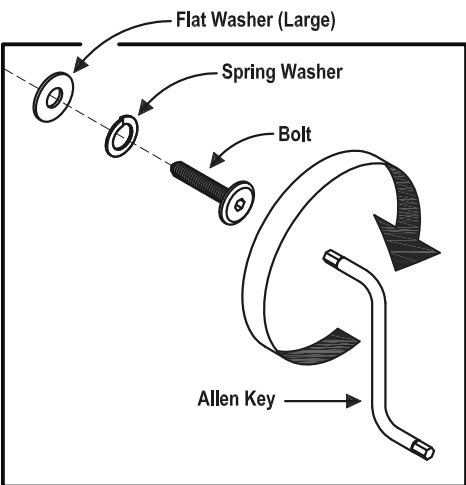


Figure 3

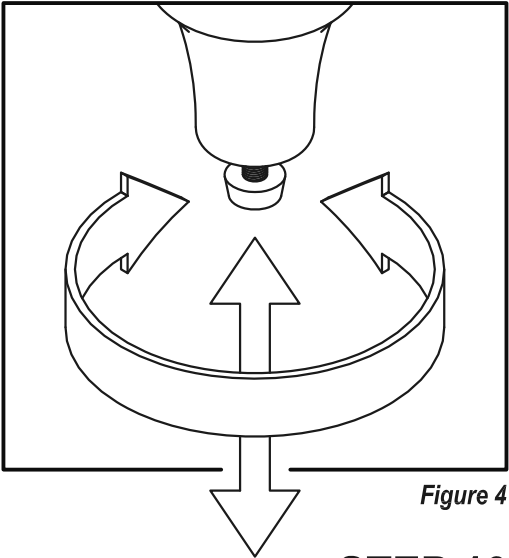
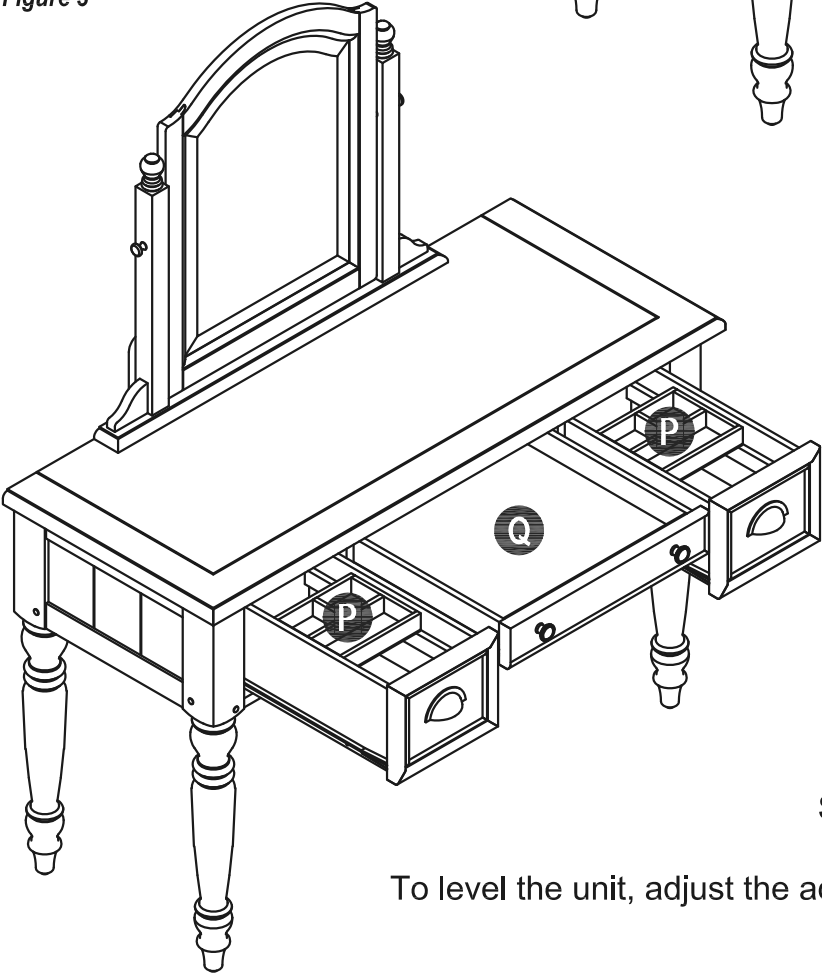
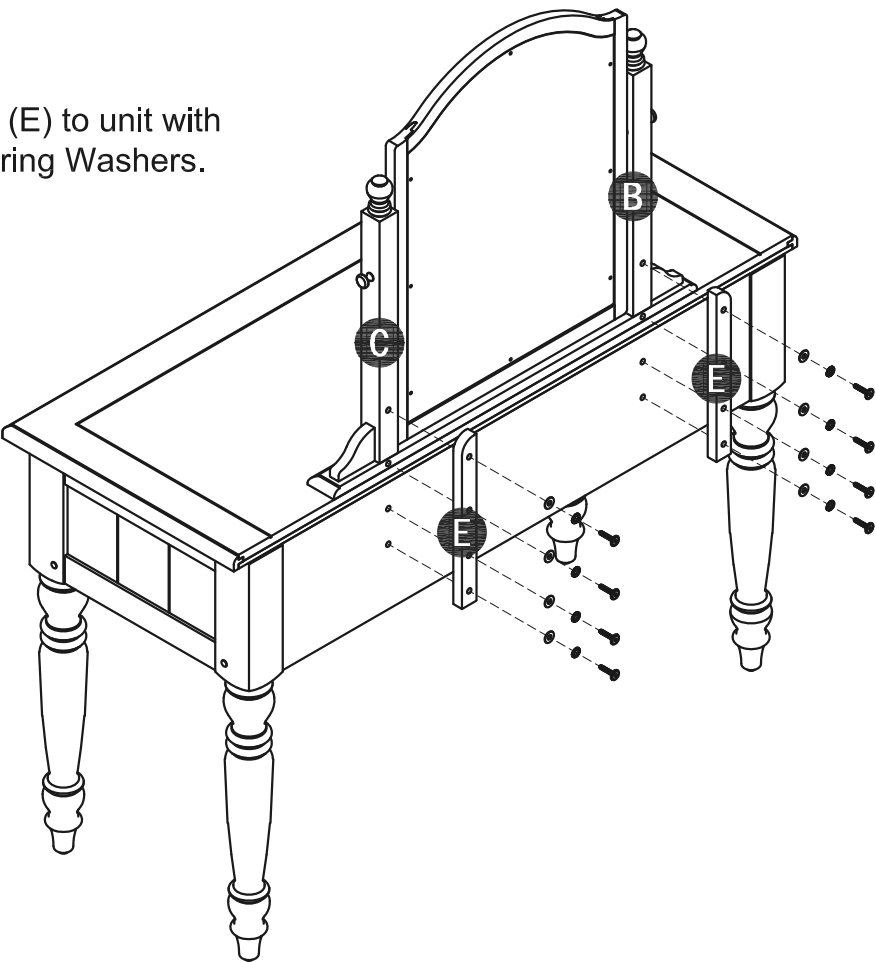


Figure 4

STEP 10



Slide Drawers (P) and (Q) into position.

To level the unit, adjust the adjustable levelers on the bottom of unit.
(See Figure 4)

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 11

Loosen slightly the two screws pre-installed on the back of the drawer fronts.

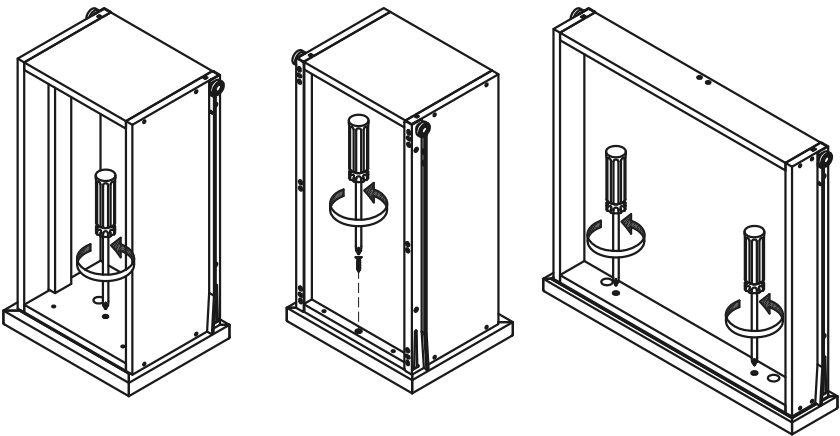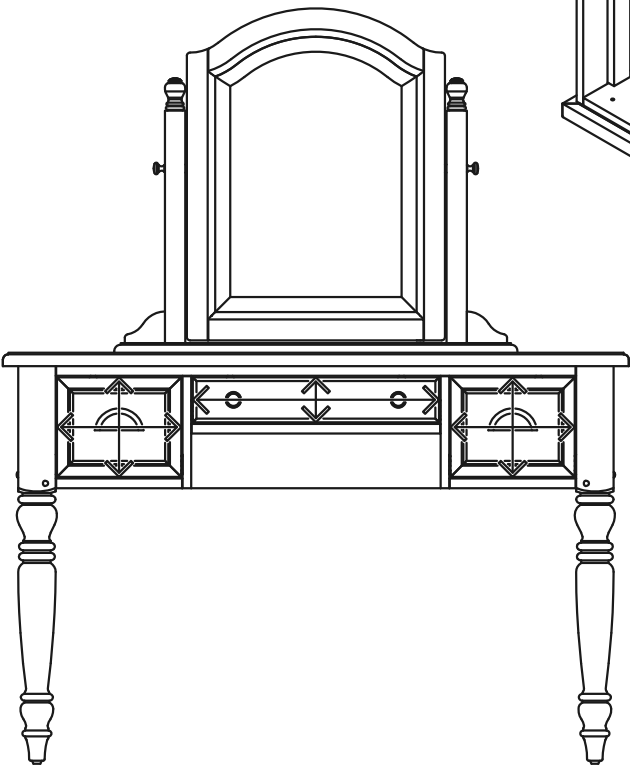


STEP 12

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down until the drawer gaps look proportional.


STEP 13

Pull the drawer open slowly and re-tighten the screws from Step 11. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

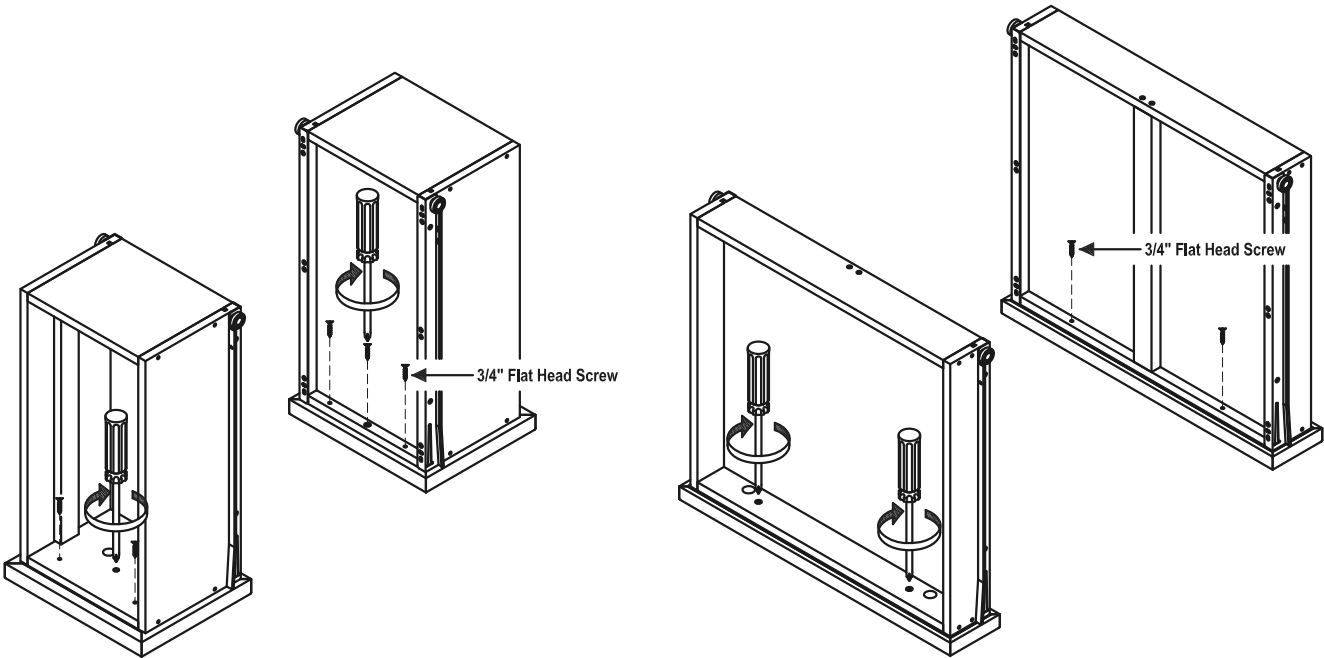


Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

Drawer (P)

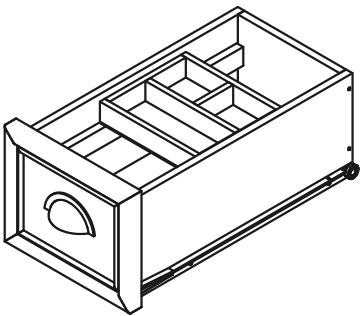

STEP 1


Attach Side Parts (P3) and (P4) to Back Part (P2) with 1 1/4" Flat Head Screws.

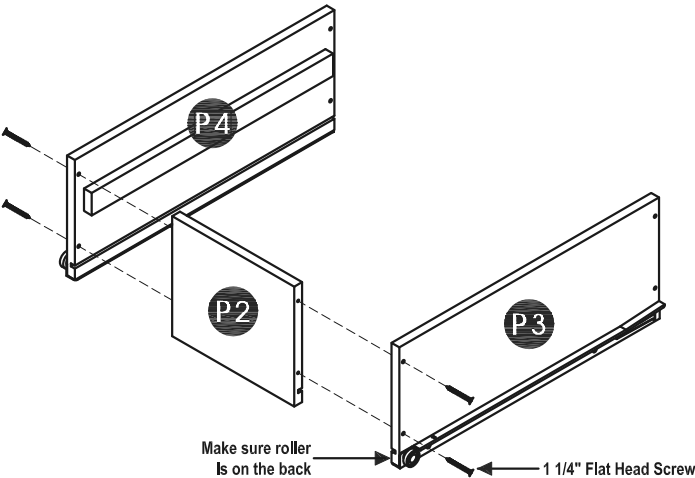

STEP 2


Insert Base Part (P5) into the groove.

Attach Front Part (P1) to unit with 1 1/4" Flat Head Screws.

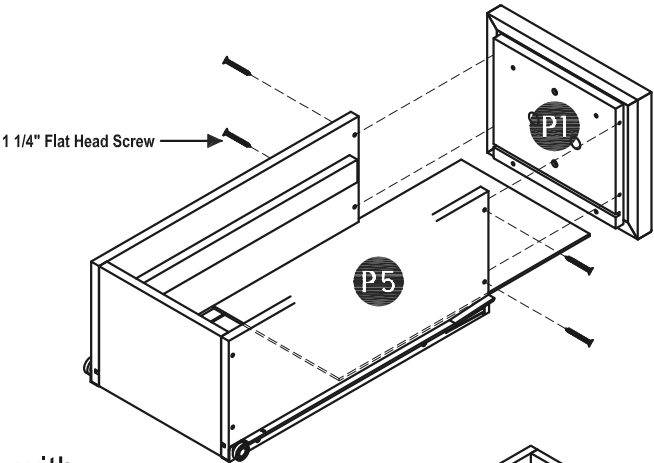


STEP 3

Attach Handle with Flat Washer (Small) and Machine Screws (Short).

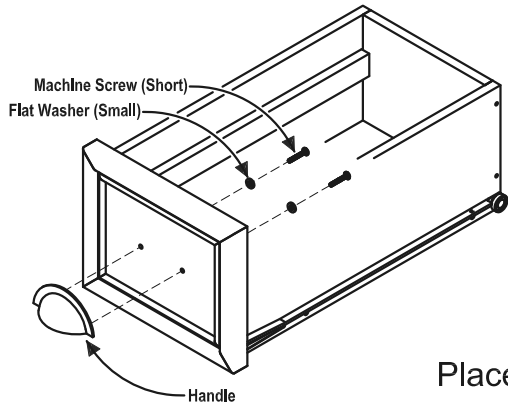







STEP 4

Place Jewelry Box (P6) into position.

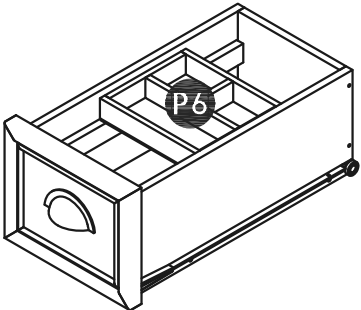


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List
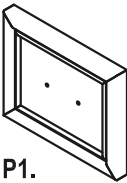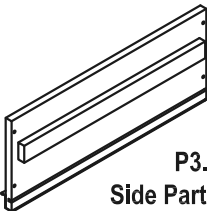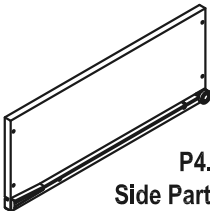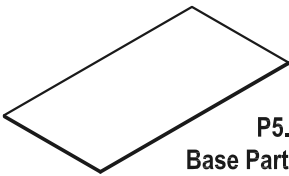
| | | | | | |
|---|--|--|--|---|--|
|  P1. Front Part 2 pcs. |  P2. Back Part 2 pcs. |  P3. Side Part 2 pcs. |  P4. Side Part 2 pcs. |  P5. Base Part 2 pcs. |  P6. Jewelry Box 2 pcs. |
|---|--|--|--|---|--|

Drawer (Q)

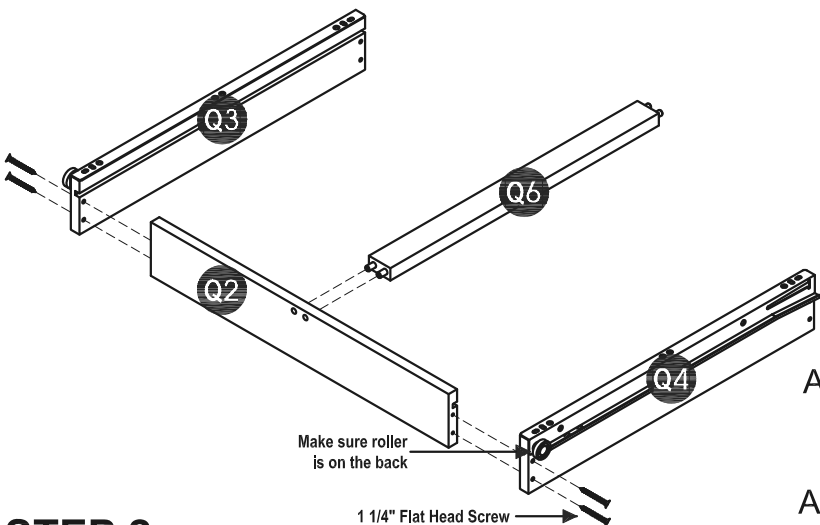

STEP 1



Attach Side Parts (Q3) and (Q4) to Back Part (Q2) with 1 1/4" Flat Head Screws.

Attach Base Part (Q6) to Back Part (Q2).

STEP 2

Insert Base Part (Q5) into the groove.

Attach Front Part (Q1) to unit with 1 1/4" Flat Head Screws.




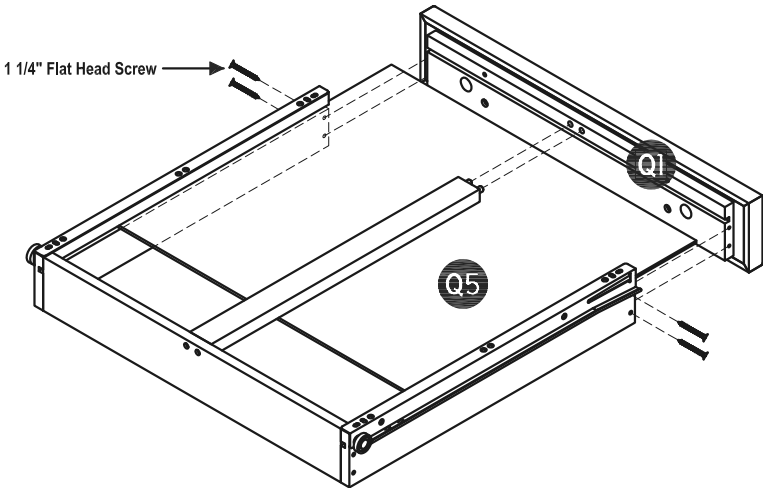
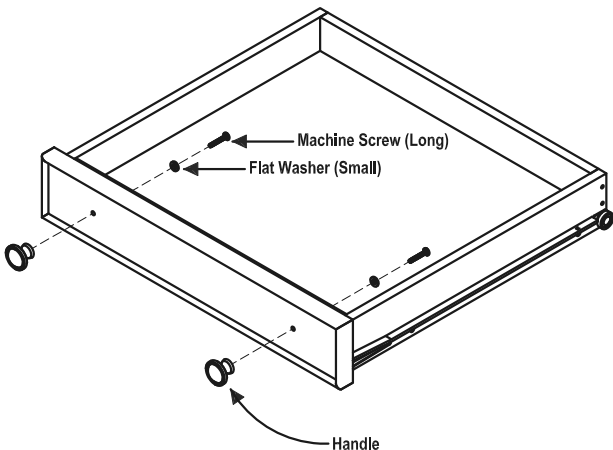



STEP 3

Attach Handles with Flat Washer (Small) and Machine Screws (Long).

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List
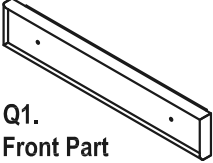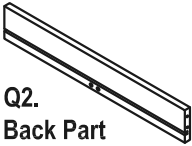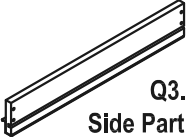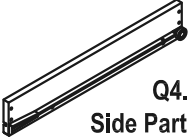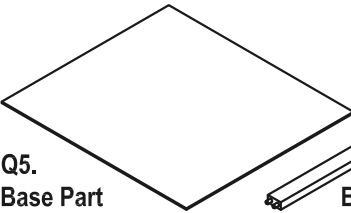
| | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| Q1. Front Part 1 pc. | Q2. Back Part 1 pc. | Q3. Side Part 1 pc. | Q4. Side Part 1 pc. | Q5. Base Part 1 pc. | Q6. Base Part 1 pc. |

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer_service

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319