




DESIGNED IN CALIFORNIA

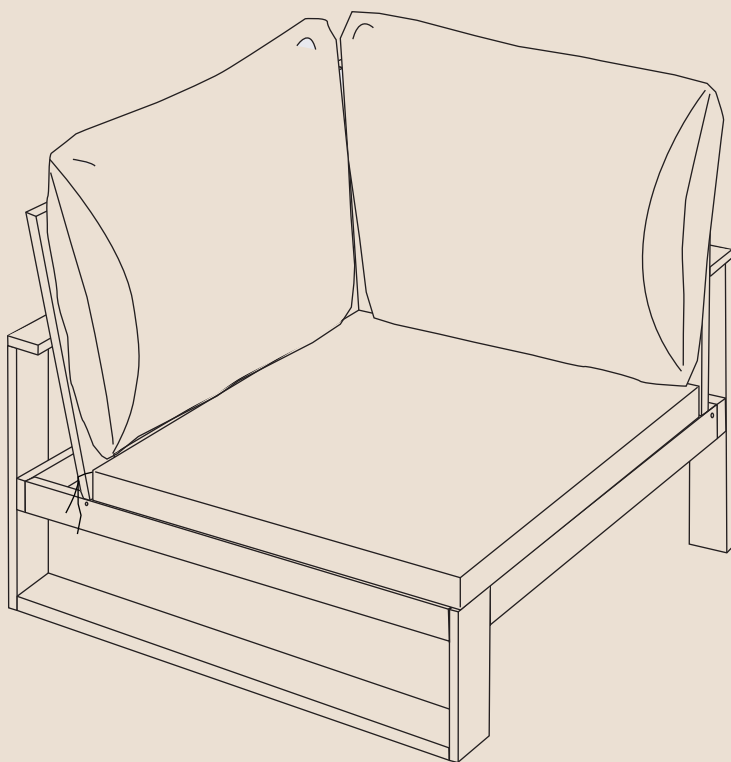

PATIO DEEP SEATING CORNER
CHAIR WITH CUSHION

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

[***https://westintrends.com/welcome***](https://westintrends.com/welcome)



QUESTIONS OR COMMENTS?

If you have questions reach out to
[**cs@westintrends.com**](mailto:cs@westintrends.com)

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

[***https://westintrends.com/apps/product-registration***](https://westintrends.com/apps/product-registration)



ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

! CARE & MAINTENANCE

Please keep this instruction for your future reference.

- Be careful when assembly, avoid hurting the top surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tighten screws.)
- Please do not exceed the weight limitations of this item.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



CHAIR
300 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

SCREW
M6.3 x 40mm



18 PCS

2

SCREW
M6.3 x 80mm



1 PC

3

SCREW
M4 x 30mm



4 PCS

4

BOLT
M6 x 55mm



8 PCS

5

M6 WASHER



12 PCS

6

M6 NUT



12 PCS

7

BOLT
M6 x 80mm



2 PCS

8

BOLT
M6 x 60mm



2 PCS

9

ALLEN
WRENCH



1 PC

10

WRENCH



1 PC

PARTS

A

CHAIR SEAT



1 PC

B


BACKREST I



1 PC

C

BACKREST II



1 PC

PARTS

D


BOTTOM BAR



1 PC

E


REAR LEG I



1 PC

F


REAR LEG II



1 PC

G


REAR LEG III



1 PC

H

REAR LEG IV



1 PC

I

FRONT LEG



1 PC

J

BACK SUPPORT I



1 PC

K

BACK SUPPORT II




1 PC

CUSHION

Z2


SEAT CUSHION



1 PC

Z3


BACK CUSHION

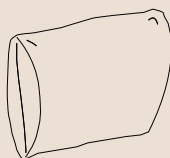

2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this chair and learn the exact position of each part to be assembled.

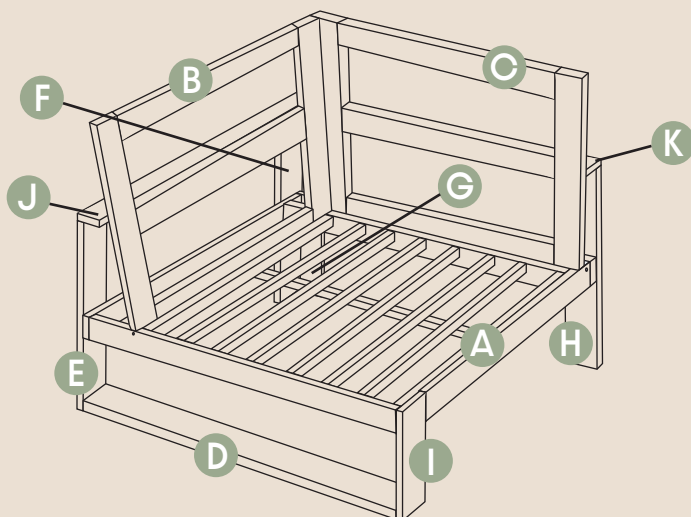

PRODUCT ASSEMBLY

1


Attach **Part D Bottom Bar** to **Part I Front Leg** with 2 pcs of **Hardware #3 Screw**.

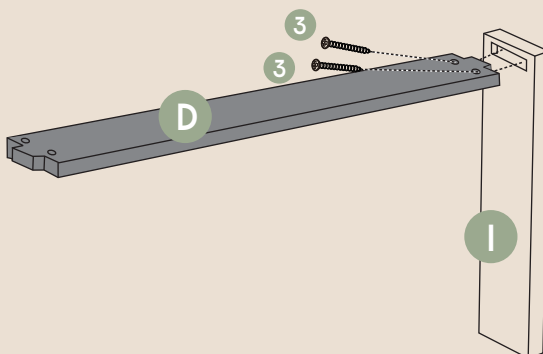

PRODUCT ASSEMBLY


2

Attach **Part E Rear Leg I** to **Part D Bottom Bar** with 2 pcs of **Hardware #3 Bolt**.

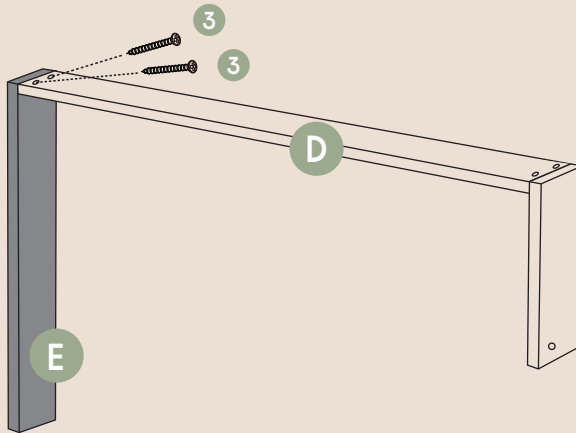


3

Attach **Part A Chair Seat** to **Part I Front Leg** with 2 pcs of **Hardware #1 Screw**.

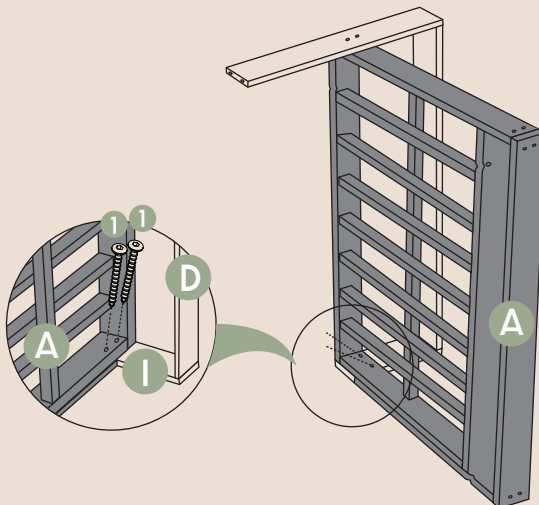

4


Attach **Part E Rear Leg I** to **Part A Chair Seat** with 2 sets of **Hardware #4 Bolt, #5 Washer** and **#6 Nut**.

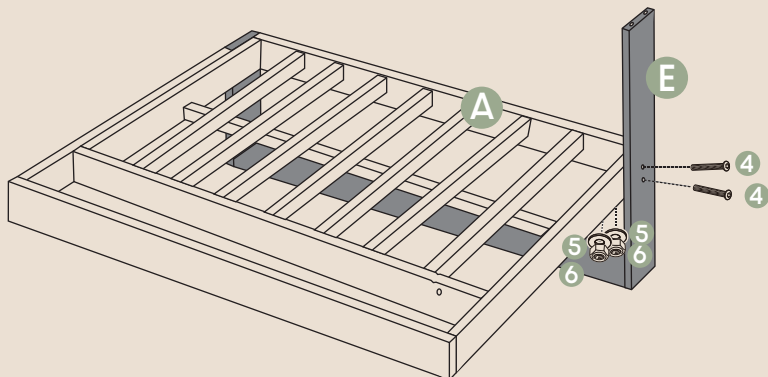

5


Attach **Part G Rear Leg III** and **Part H Rear Leg IV** to **Part A Chair Seat** as below with 4 sets of **Hardware #4 Bolt, #5 Washer** and **#6 Nut**.

Pay attention to the difference of assembly holes on top of the legs.

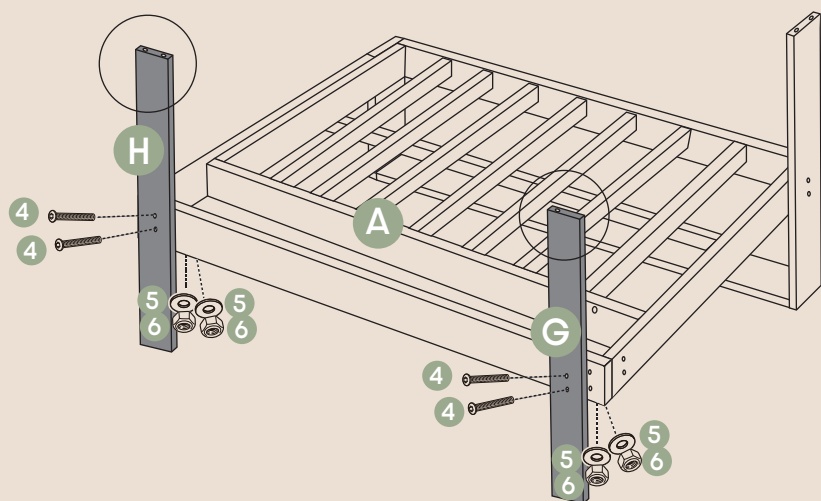


6

Attach **Part F Rear Leg II** to **Part A Chair Seat** with 2 sets of **Hardware #4 Bolt, #5 Washer** and **#6 Nut**.

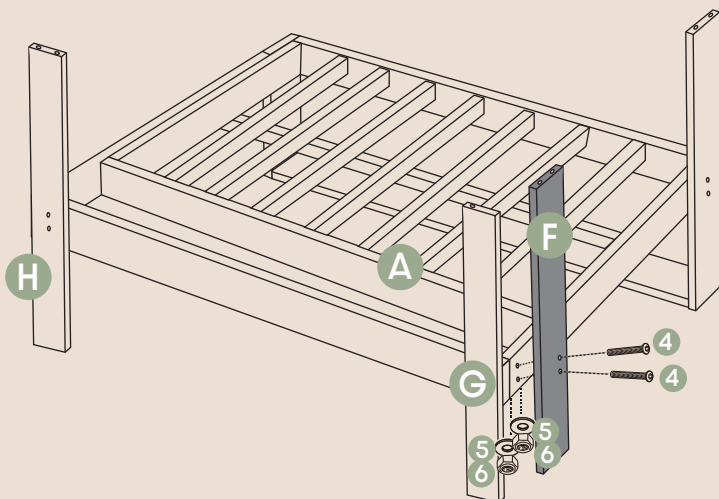


7

Place **Part J Back Support I** and **Part K Back Support II** onto legs as below and attach them with 7 pcs of **Hardware #1 Screw**.

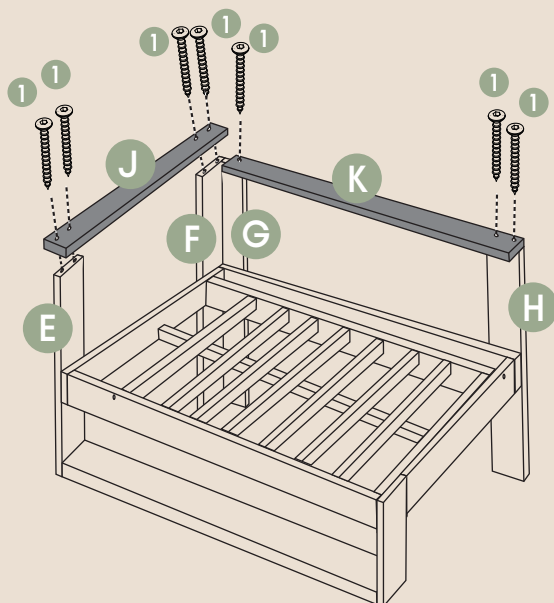


8

Attach **Part J Back Support I** to **Part K Back Support II** with 1 pc of **Hardware #2 Screw**.

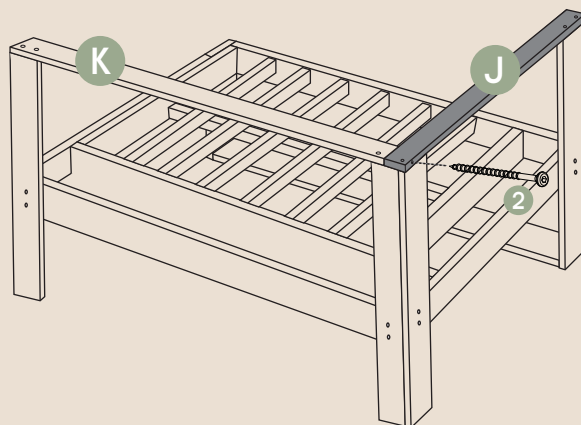


9

Place **Part B Backrest I** onto **Part A Chair Seat** as below and attach them with 2 pcs of **Hardware #1 Screw**.

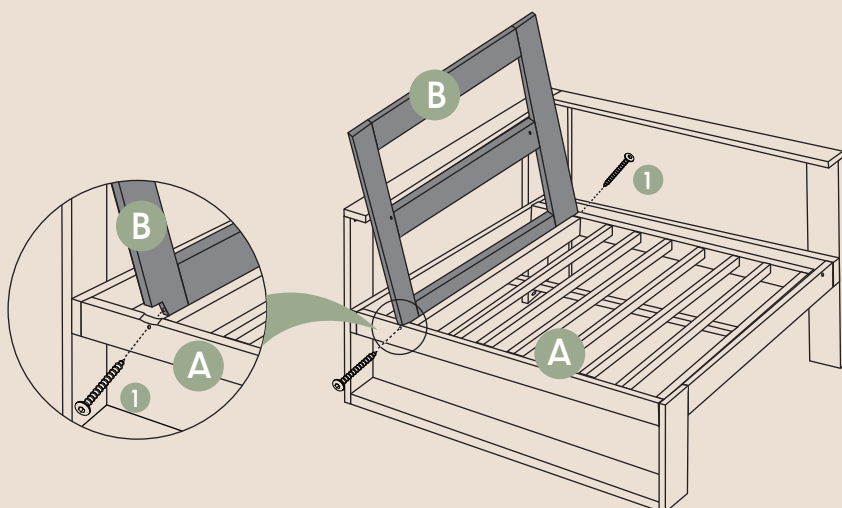


10

Place **Part C Backrest II** onto **Part A Chair Seat** as below and attach with 1 pc of **Hardware #1 Screw**.

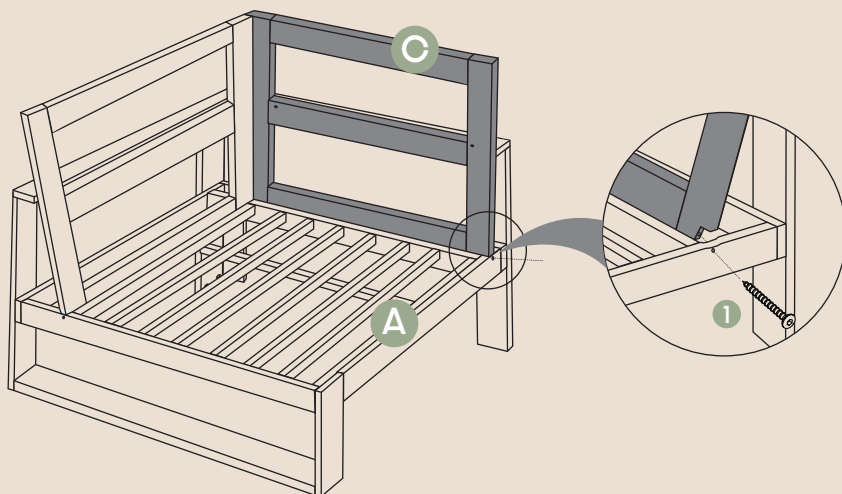


11

Attach **Part C Backrest II** to **Part B Backrest I** with 2 pcs of **Hardware #1 Screw**.

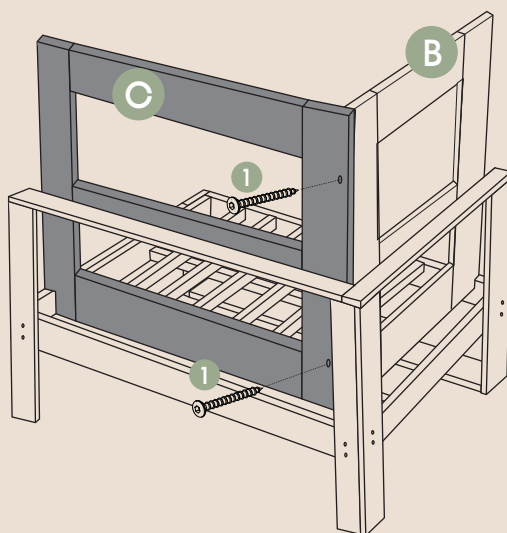


PRODUCT ASSEMBLY TIPS

This model can be combined with other Patio series products to form comfortable sofa set by connecting the seats together as following methods.

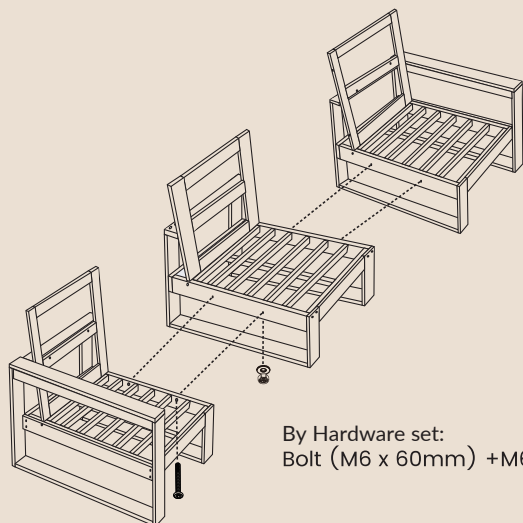

By Hardware set:
Bolt (M6 x 60mm) + M6 Washer + M6 Nut

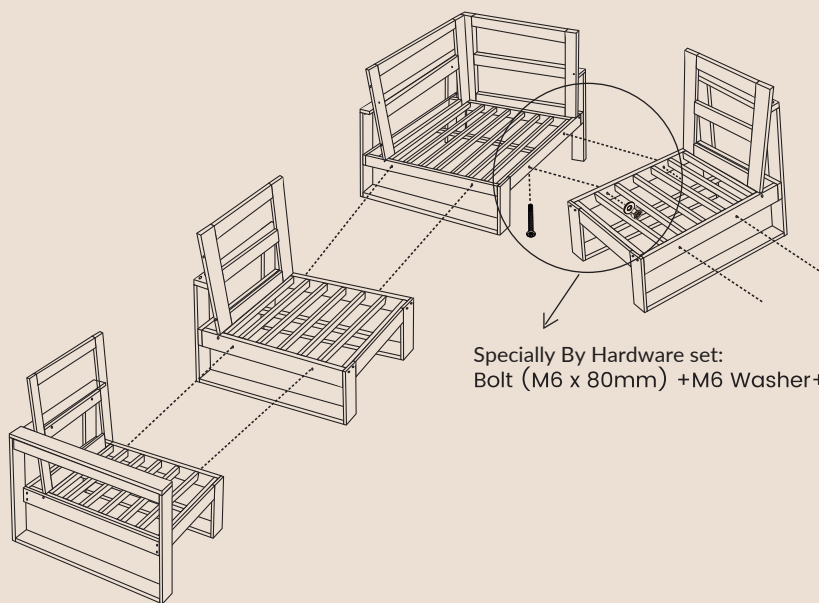

Specially By Hardware set:
Bolt (M6 x 80mm) + M6 Washer + M6 Nut

REGISTRATION & REFUND POLICY

[***https://westintrends.com/apps/product-registration***](https://westintrends.com/apps/product-registration)

[***https://westintrends.com/policies/refund-policy***](https://westintrends.com/policies/refund-policy)

HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at
cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning -
DO NOT exceed 1500 PSI - this will remove any debris and dirt.