




B F. FOOTBOARD 1 PC G. SLAT ROLL 1 SET H. SLAT SUPPORT 5 PCS

BOX #3

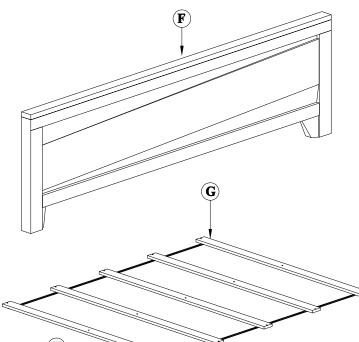

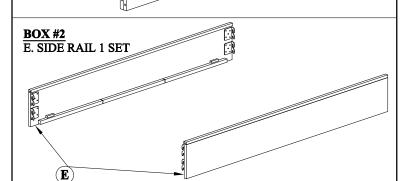


HEARST FULL/QUEEN BED FULLY ASSEMBLED

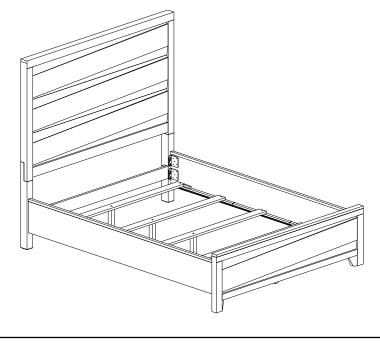

HARDWARE PACKED IN BOX #3


1	ALLEN BOLT (M8x60)	6)	8 PCS
2	ALLEN BOLT (M8x50)		2 PCS
3	ALLEN BOLT (M8x30)		16 PCS
4	LOCK WASHER (M9)		10 PCS
5	FLAT WASHER (M8)	0	26 PCS
6	SCREW (M4x30)	Emmo	10 PCS
7	ALLEN KEY		1 PC
8	WOOD DOWEL (8x30)		4 PCS

TOOL REQUIRED
PHILLIPS HEAD SCREW DRIVER NOT PROVIDED









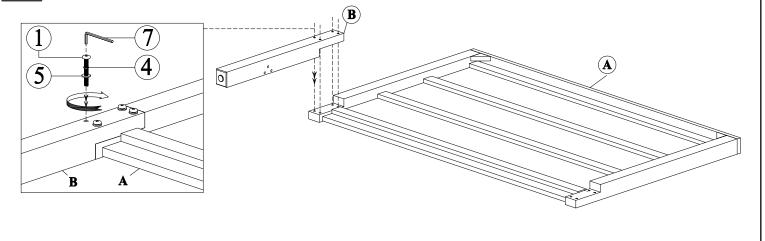

STEP 2

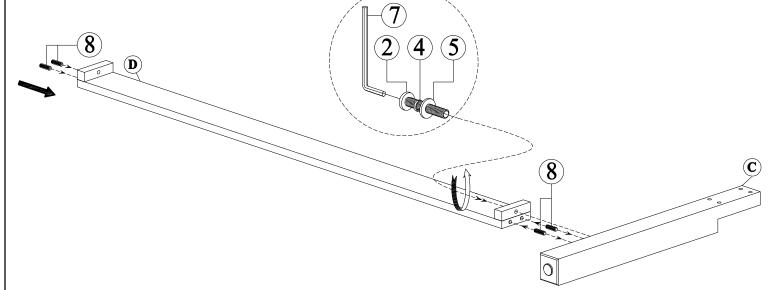



STEP 3

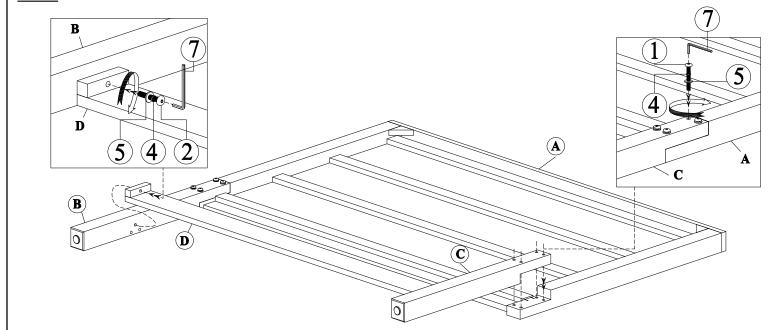





B

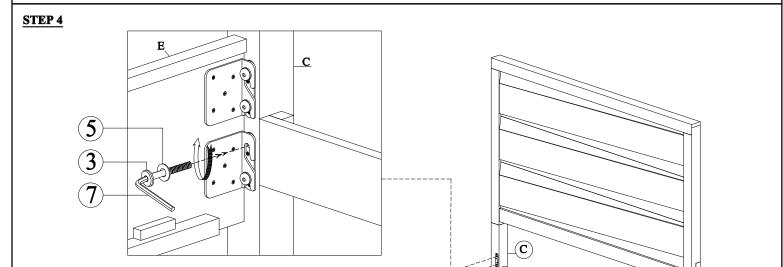

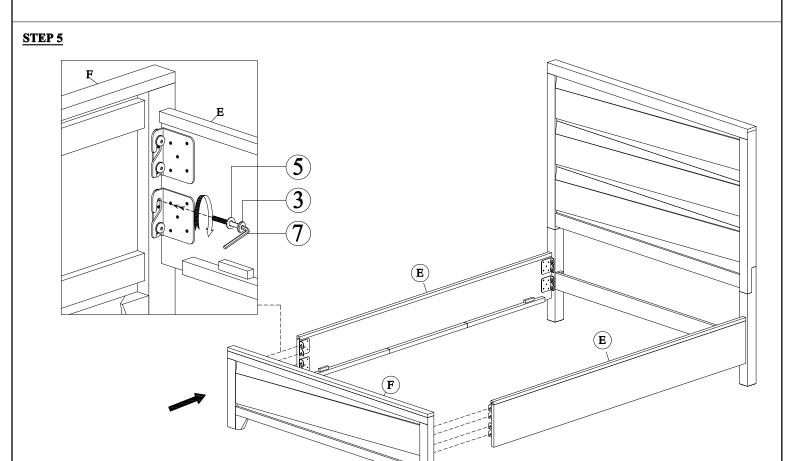



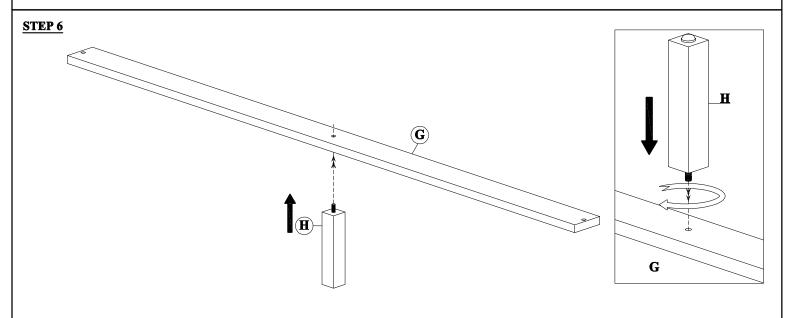

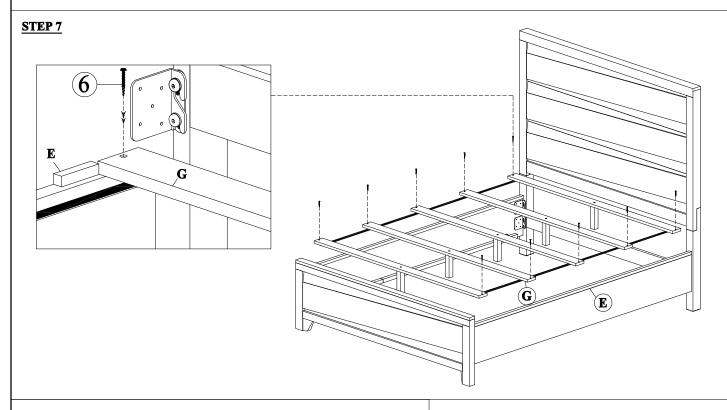

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your room. Locate levelers under each leg support.

Turn counter-clockwise to extend, clockwise to contract.

Adjust levelers until each leg support is applying equal upward pressure on the bed slat.



MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed
- Lift your bed when moving it. Dragging can damage leg support.
- Readjust levelers after moving your bed.