
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

269-690 FRISCO COUNTER HEIGHT CHAIR

www.kincaidfurniture.com
Phone : 828-728-3261.

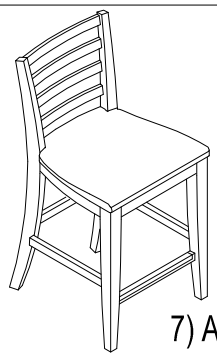

7) Assembly is completed.

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.


. Check to be sure that you have all parts and hardware.


. Remove all wrapping materials,including staples and packing straps before you start to assemble.


. Do not tighten all screws and bolts until completely assembled.


. Keep all hardware out of the reach of children.

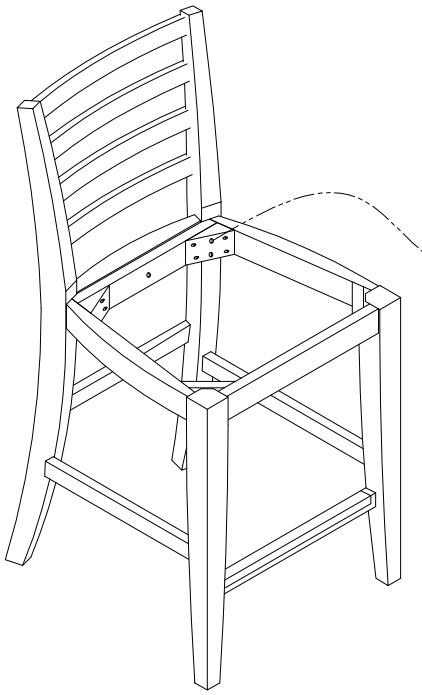

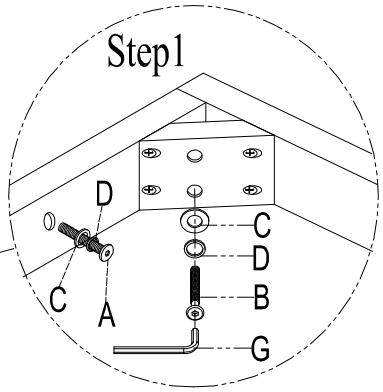

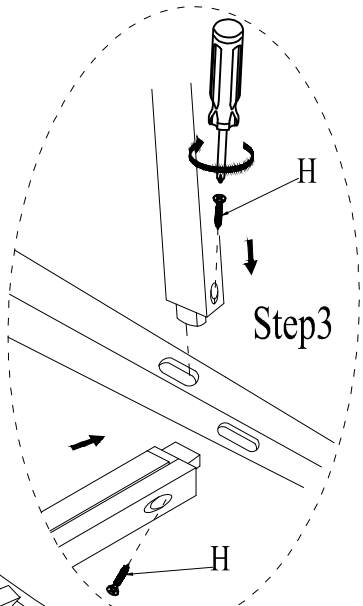

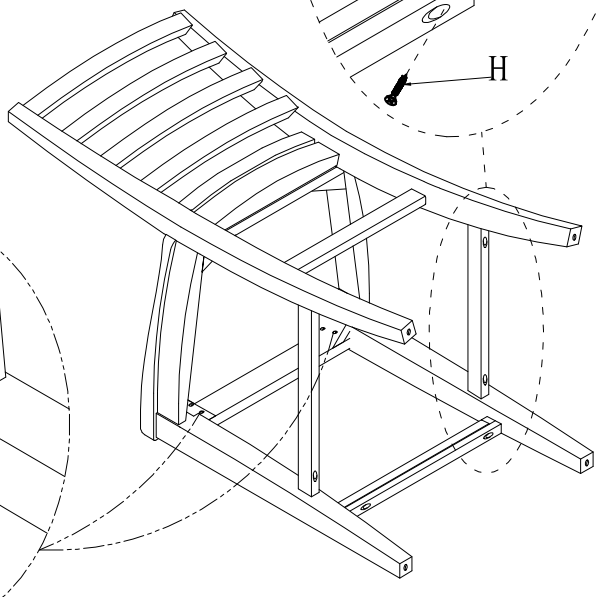

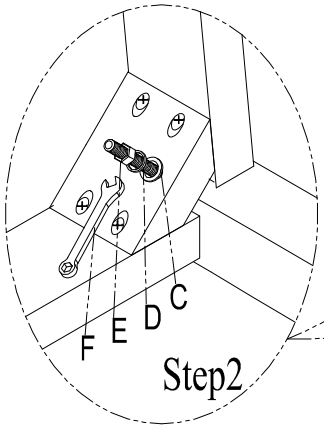

NO.	Dimension	Shape	Quantity
A	Bolt 5/16"*45mm		1pc
B	Bolt 5/16"*76mm		4pcs
C	Flat washer Ø5/16"*19mm		9pcs
D	Lock washer Ø5/16"		9pcs
E	Nuts 5/16"		4pcs
F	Wrench 12mm		1pc
G	Allen Key 4mm		1pc
H	Screw #8*50mm		6pcs