

ITEM# 70006

KONA DESK

**Leick**  
**Home**  
SINCE 1910


2219 S. 19th St.

Sheboygan, WI 53081

Ph: 800-558-8700

cs@todaysdesignhouse.com

todaysdesignhouse.com






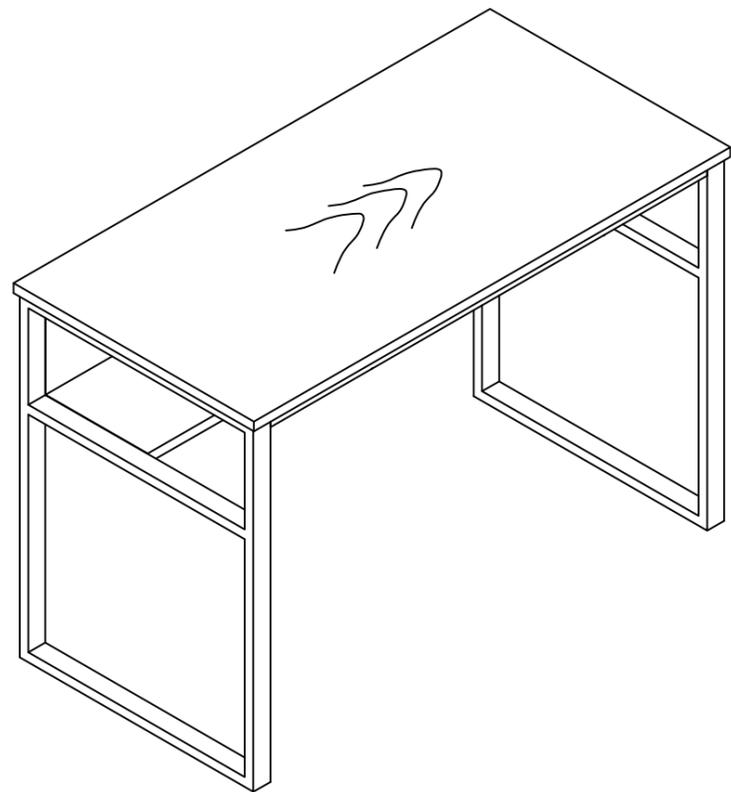


Note: *A packet containing the whole set of hardware can be found by pulling the red ribbon that's easily visible upon opening the box.*

## Hardware List

Item	Illustration	Description	Quantity
1	A line drawing of a long bolt with a hexagonal head and a threaded shaft.	Long Bolt 1/4x35mm	8 PCS
2	A line drawing of a short bolt with a hexagonal head and a threaded shaft.	Short Bolt 1/4x15mm	12 PCS
3	A line drawing of a flat washer, a thin circular disc with a hole in the center.	Flat Washer	20 PCS
4	A line drawing of an Allen wrench, a T-shaped tool with a hexagonal end.	Allen Wrench	1 PC

# Parts List

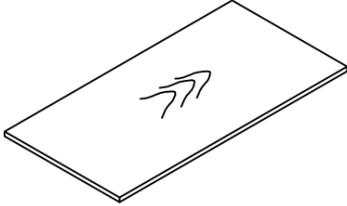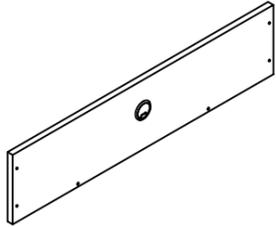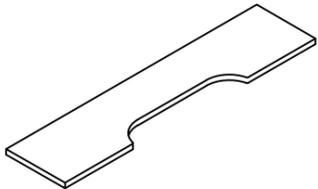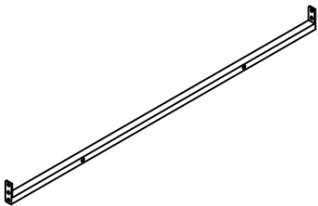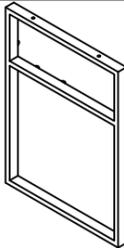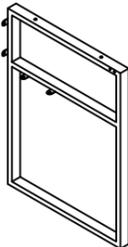
Item	Illustration	Description	Quantity
A		Top	1PC
B		Back Panel	1PC
C		Shelf	1PC
D		Front Metal Tube	1PC
E		Right Side Frame	1PC
F		Left side frame	1PC

# Assembly Instructions

Two person assembly recommended.


### Step 1

**1.a)** Fasten the left side frame (F) and front metal tube (D) with two short bolts.  
**1.b)** Fasten the right side frame (E) and metal tube (D) with two short bolts.

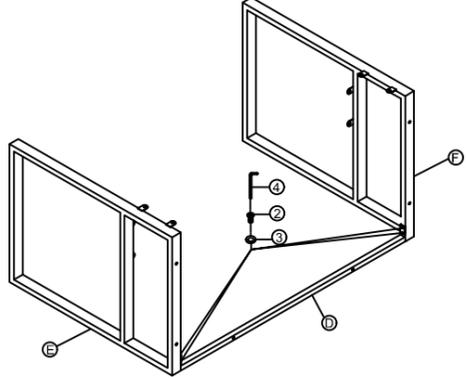

### Step 2


**2.a)** Fasten the back panel (B) and shelf (C) with two long bolts and two flat washers.

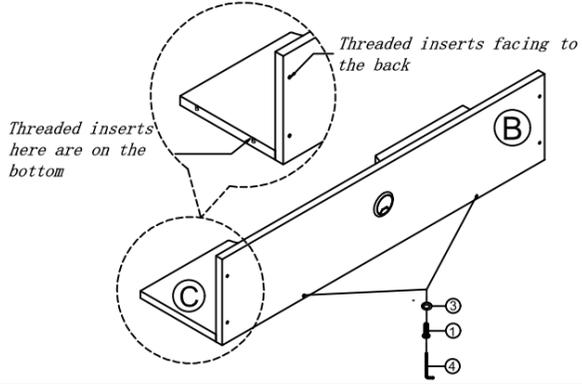

*Threaded inserts facing to the back*  
*Threaded inserts here are on the bottom*


### Step 3

**3.a)** Hold two side frames carefully to place the assembled frame (D,E and F) in Step1 (shown directly above this box).  
**3.b)** Put the assembled parts (B and C) in Step 2 between two side frames. Slightly pull one side frame outside to fit in parts (B and C) if needed. Push side frames toward the ends of back panel, make sure not to leave any gap while fastening the back panel with four short bolts.

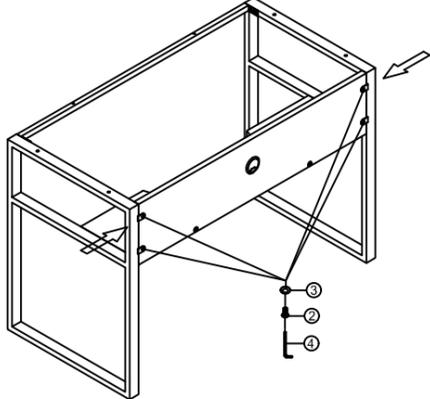


### Step 4

**4.a)** Fasten the shelf (C) underneath with four short bolts.

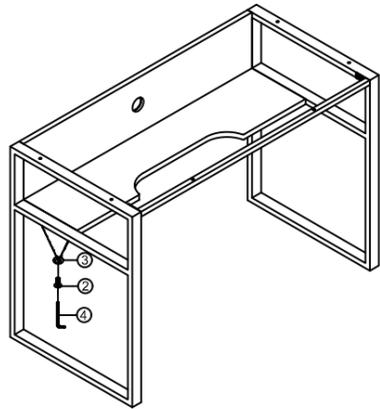

### Step 5

**5.a)** Place the top (A) on the assembled base, make sure the "front" sticker points to the correct direction, slightly lift the top panel to locate the hole and fasten with 1 long bolt through the side frame, do not tighten. Fasten with 5 long bolts to the top and tighten them all.

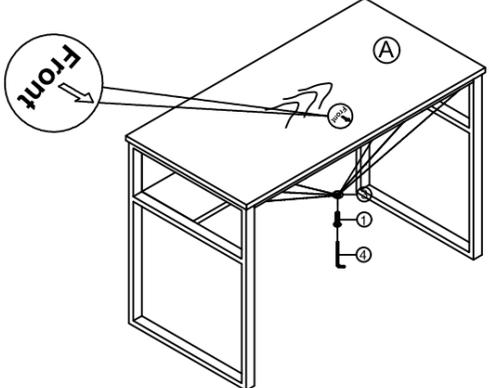

*FRONT*

### Step 6

**6.a)** Wire management hole on back of desk: Pull the desk out, remove the disc, run all cables through and snap the disc back in place.

