



HOW TO MEASURE FOR THE CORRECT SOLID STEP® 4.0 SIZE

To ensure you select the right size Solid Step for your RV, follow these easy steps:



Step 1: Measure the Threshold

Ensure your unit is level to get accurate measurements.

Measure your threshold height: It should be between 5/8" and 3/4". If it falls outside this range, the door may not close properly.



Step 2: Measure the Hinge Plate Clearance

Check the gap between the door and threshold: You need a 3/8" clearance between the bottom of your entry and screen doors and the top of the threshold to accommodate the hinge plate. Without this gap, the door won't close properly when the steps are extended.



Step 3: Measure Step Height

Measure from the top of the threshold to the ground to determine your step height.

Each assembly requires a ground-to-floor height of:

- 22-28" for a double step assembly
- 27.5-39.5" for a triple step assembly
- 35.5-46.5" for a quad step assembly




Step 4: Measure Door Width

Find your door width by checking the factory label on the side or edge of your door.

If there's no label, measure the inside width of the door at the base, from flange to flange. The flange-to-flange measurement should be taken at the narrowest point of the entry door.

Solid Step 4.0 Fit Chart

Step Type	SKU	Step Height	Tread Width	Entry Width (flange to flange)	Door Size (from factory label)
Double 26"	2024056996	22.0-28.0"	20"	23.75 - 27.50"	26 - 28"
Double 30"	2024056997	22.0-28.0"	24"	27.75 - 34.50"	30 - 34"
Triple 26"	2024056998	27.5-39.5"	20"	23.75 - 27.50"	26 - 28"
Triple 30"	2024056999	27.5-39.5"	24"	27.75 - 34.50"	30 - 34"
Quad 26"	2024057000	35.5-46.5"	20"	23.75 - 27.50"	26 - 28"
Quad 30"	2024057001	35.5-46.5"	24"	27.75 - 34.50"	30 - 34"

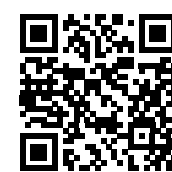

LEARN HOW
HOW TO
MEASURE
AND INSTALL
SOLID
STEP 4.0

ADDITIONAL CONSIDERATIONS

Door Jamb Trim

If your door jamb has trim that sticks out, it may interfere with the latch on the step. You'll need to notch the trim by 1/4" to 1/2" to accommodate the latch.

Struts

If there's a strut preventing the door from opening fully, the step will hit the door. The strut will need to be removed for proper installation.

Doorway Clearance

There must be at least 8" of clearance on the inside of the doorway for the step to fold up properly.

Skirting

The skirting beneath the threshold cannot protrude more than 3/4".

Aftermarket Accessories

Any aftermarket items, such as a storm door or grab handle, could interfere with the step and may need to be removed or adjusted for correct installation.

