


Your new Design House mirror will give you years of trouble-free performance. Thank you for choosing our product for your home. **Please read carefully and save these instructions, as you may need them at a later date.**

Required Tools

- Drill or Phillips Screwdriver
- Hammer
- Safety Glasses
- Level
- Pencil
- Stud Finder
- Tape Measure

What's in the box

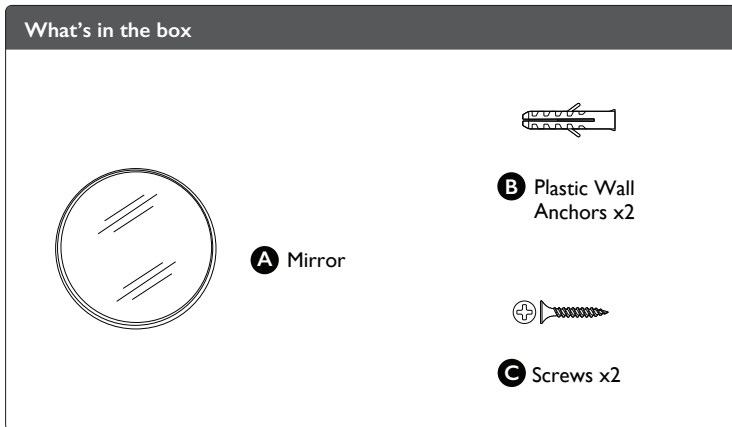



A Mirror

B Plastic Wall Anchors x2

C Screws x2

Note


This mirror is meant for drywall or stud mounting. If your walls are made of concrete, brick, or plaster, please contact your local hardware store for assistance in selecting the hardware needed.

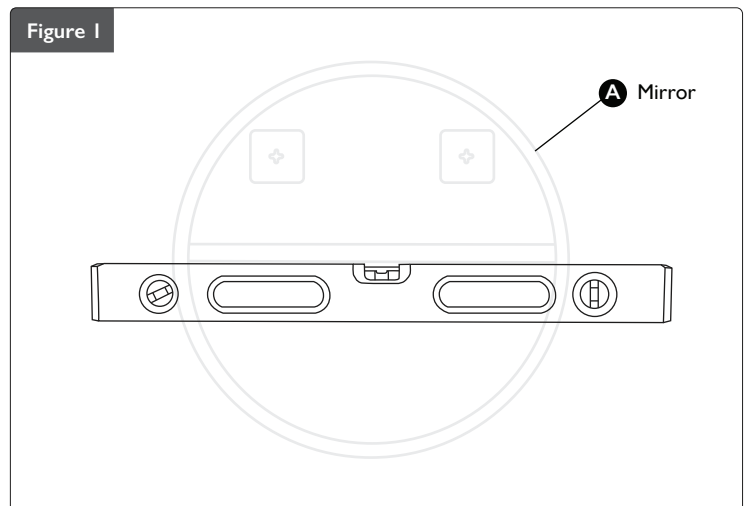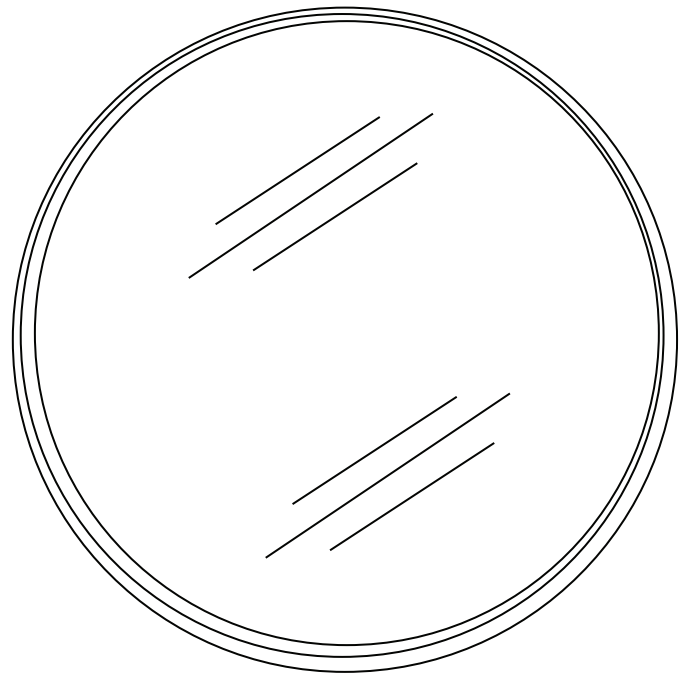

Steps to Install


1. Before installation, carefully unpack and identify all parts.
2. Using a stud finder, locate studs behind wall.
3. Either measure distance between mounting holes on back of **mirror (A)** or use enclosed drill hole template to ensure location of each drill hole (distance between holes is 303 mm or 11.92 inches). Using a pencil, mark points on wall.
4. Use a level and tape measure to check for level. (See figure 1).

Continued on next page

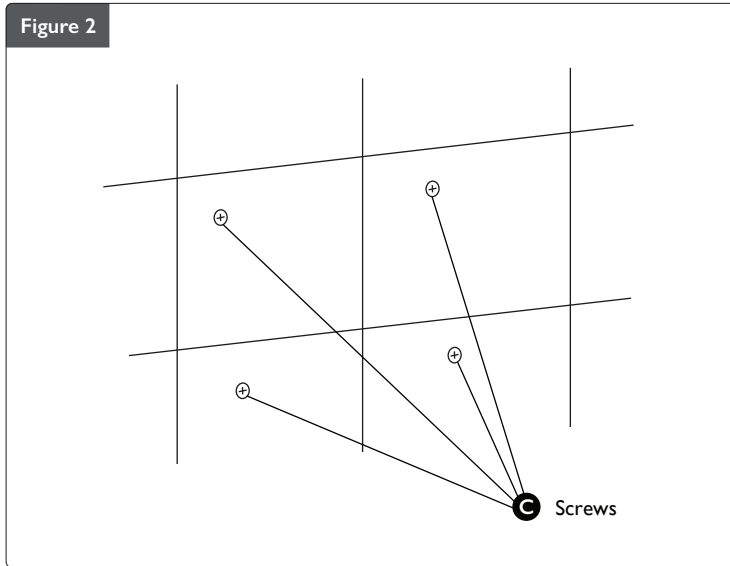


For Stud Mount Installation

5. With drill (*not included*) or Phillips screwdriver (*not included*), insert **screws (C)** into studs at marked positions until heads of **screws (C)** are 1/4 inch to 1/2 inch away from wall. (See figure 2).

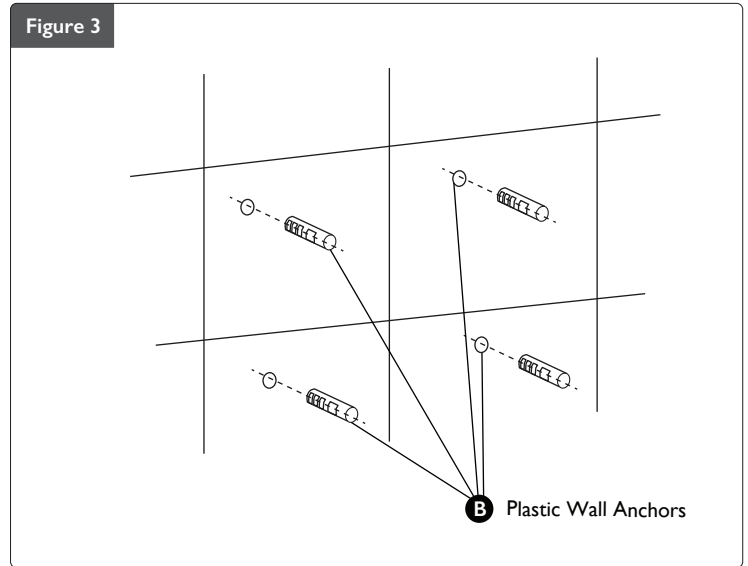

For Dry Wall Mount Installation

6. With drill (*not included*) or Phillips screwdriver (*not included*), predrill holes at marked positions.
7. With a hammer (*not included*), gently tap **plastic wall anchors (B)** into holes until flush with wall surface.
8. Insert **screws (C)** into stud until heads of **screws (B)** are 1/4 inch to 1/2 inch away from wall. (See figure 3).

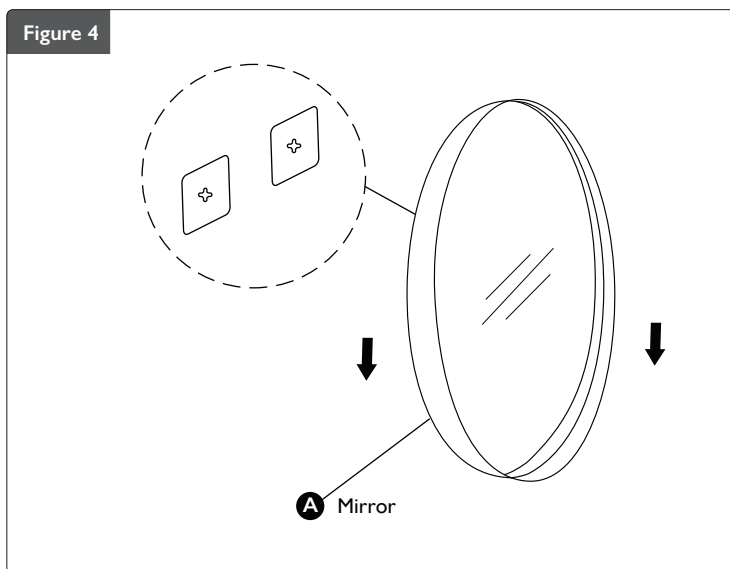

9. Align mounting holes on back of **mirror (A)** with **screws (C)** and slide **mirror (A)** down until it rests on **screws (B)**. Pull firmly outward and downward until securely positioned on **screws (C)**. (See figure 4).