
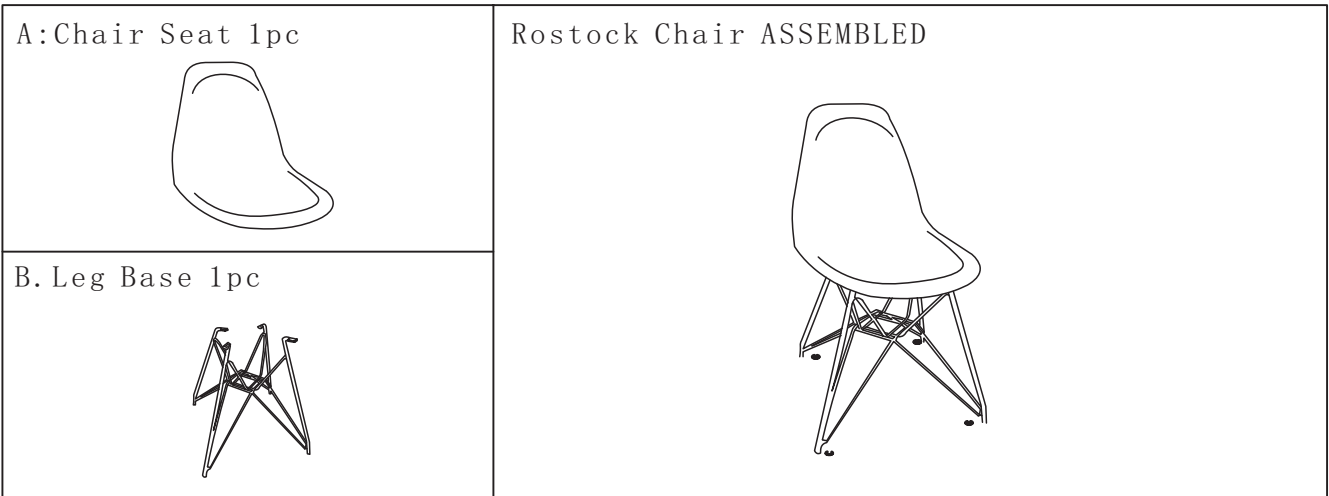




ROSTOCK CHAIR

ASSEMBLY INSTRUCTIONS




HARDWARE IS PACKED IN BOX

1	BOLT M6x18MM	4 PCS	2	ALLEN KEY M6	1 PC	3	FEET	6 PCS
								

PLEASE NOTE!: YOU MUST INSTALL THE CHAIR FEET BEFORE USE OR RISK DAMAGE TO YOUR FLOORS.
PLEASE FOLLOW INSTRUCTIONS ON ASSEMBLY.

STEP 1: With the Chair Seat (A) upside down. Attach the leg base (B) to Chair Seat (A) with four M6 Bolts (1). Tighten completely using the provided Allen Key (2). Connect the four Feet (3) to the corresponding legs.

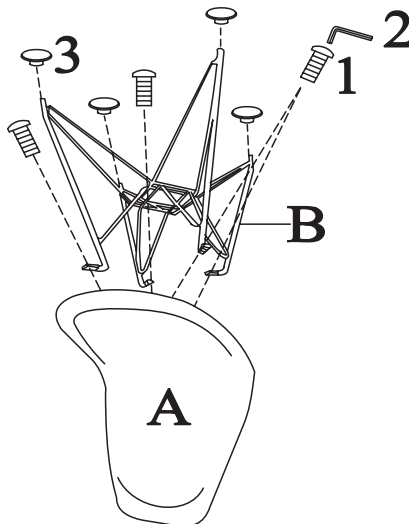

ROSTOCK CHAIR
ASSEMBLY INSTRUCTIONS



STEP 2: Turn chair right side up after assembly is complete.

