



Carina

CAR-SWMB


Wall Mount Bracket

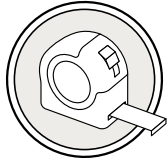

Do not measure images.
Use specified dimensions.

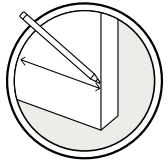

Measure from finished
edge of glass.

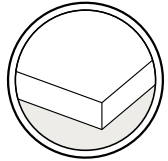

Use monolithic glass.

- › Use finger notch cut out option for quicker FastFit installation
- › Use $\frac{3}{8}$ " to $\frac{1}{2}$ " (10 to 12 mm) Thick Tempered Glass Only

