
# **GOJO FMX-12<sup>TM</sup> DISPENSER INSTALLATION INSTRUCTIONS**


These instructions apply to GOJO<sup>®</sup>, PURELL<sup>®</sup>, PROVON<sup>®</sup> and MICRELL<sup>®</sup> brand FMX-12 dispensers.

#### Please carefully read all instructions before installing and using the dispenser.

#### ATTENTION

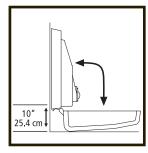


Install the dispenser at least 10' (25.4 cm) above counter top.

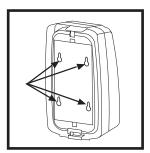

This dispenser is equipped with a universal back plate to allow for easy installation. Before drilling, open dispenser and check existing hard-ware on wall for alignment.

### **IMPORTANT NOTE**

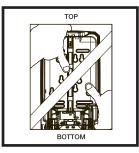

For proper dispenser tape adhesion: Press firmly all around backplate as shown in figure for 30 seconds. For maximum adhesion, do not load refill for 24 hours.

# Tape Installation

Should only be used for smooth, dry surfaces. Clean installation surface thoroughly. Allow surface to dry for 60 seconds. When installing on marlite wallboard, use scouring cleansing. Rinse and dry thoroughly.




Peel paper off of installation tape and press dispenser firmly into position.



Open dispenser by inserting key into key access hole and push up until front cover opens.


on rough surfaces.

Can be used for installing dispenser

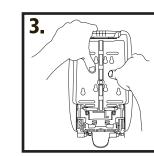


Press firmly on back plate for 30 seconds.

# **Fastener Installation**

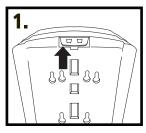

Open dispenser by pushing on cover latch until it releases.

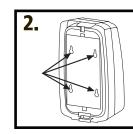

**2a.** Using Back Plate as template, mark and drill center holes in wall using 1/4" (6.3 mm) spiral masonry drill bit or 1/4" (6.3 mm) used drill bit. wood drill bit

2b. Install #10 x 1" (2.54 cm) anchors into drilled holes, flush against surface.


2c. Insert type A #10 x 1" (2.54 cm) fasteners into 4 installation holes in back plate, through



installation tape.



Peel paper off of installation tape, line up fasteners with anchors, and press dispenser firmly into position.

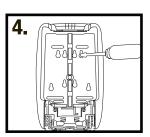

Tighten fasteners securely. Be careful not to over-tighten.



GOJO Industries, Inc. One GOJO Plaza, Suite 500 P.O. Box 991 • Akron, OH 44309-0991 Tel: 1-330-255-6000 • Toll-free: 1-800-321-9647 Fax: 1-800-FAX-GOJO