

88 5061 95

The Orleans Kitchen Cart

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.


Home Styles



Part List

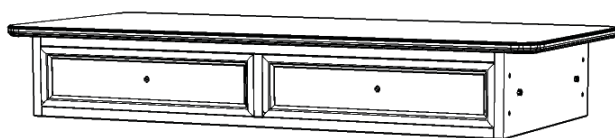

A.
Top Unit
1 Pc.



D.
Shelf
2 Pcs.




B.
Leg
2 Pcs.



C.
Leg
2 Pcs.

Hardware List

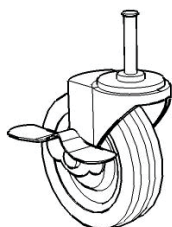

Caster
Two with lock and
Two without lock
4 pcs.



Hex Wrench
1 Pc.



Small Hex Wrench
1 Pc.



Head Cap Bolt (short)
16 Pcs. (+1 extra)




Head Cap Bolt (long)
8 Pcs. (+1 extra)



Wood Screw
4 Pcs. (+1 extra)



**Head Cap Bolt
for Side Bar**
4 Pcs. (+1 extra)

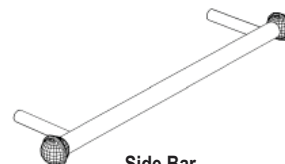

Side Bar
2 Pcs.


Tools required for assembly : Phillips screwdriver

Home Styles Consumer Assistance: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/4


IMPORTANT

- * Please keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Do not tighten up all the bolts until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.

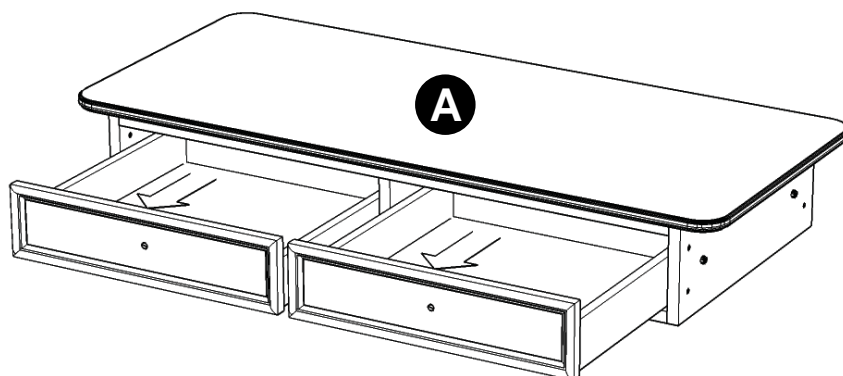

STEP 1

Remove the drawers, then place Top unit (A) upside down on a soft cloth.

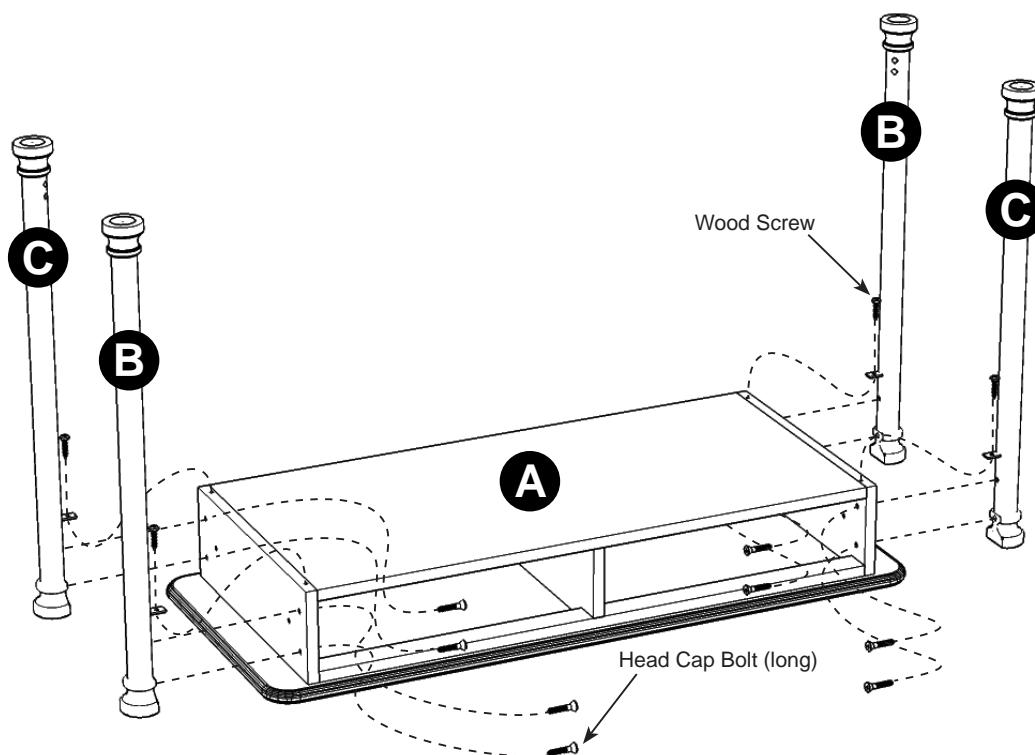

STEP 2

Attach Legs (B) and Legs (C) to Top Unit (A) with Wood Screws and Head Cap Bolts (long).

Tighten all Bolts only half way with Hex Wrench.
(See figure 1)


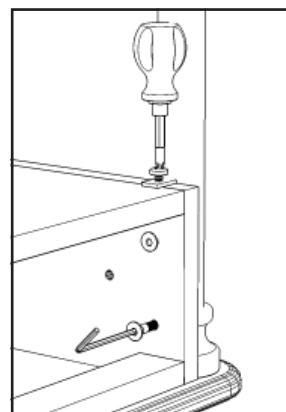


Figure 1

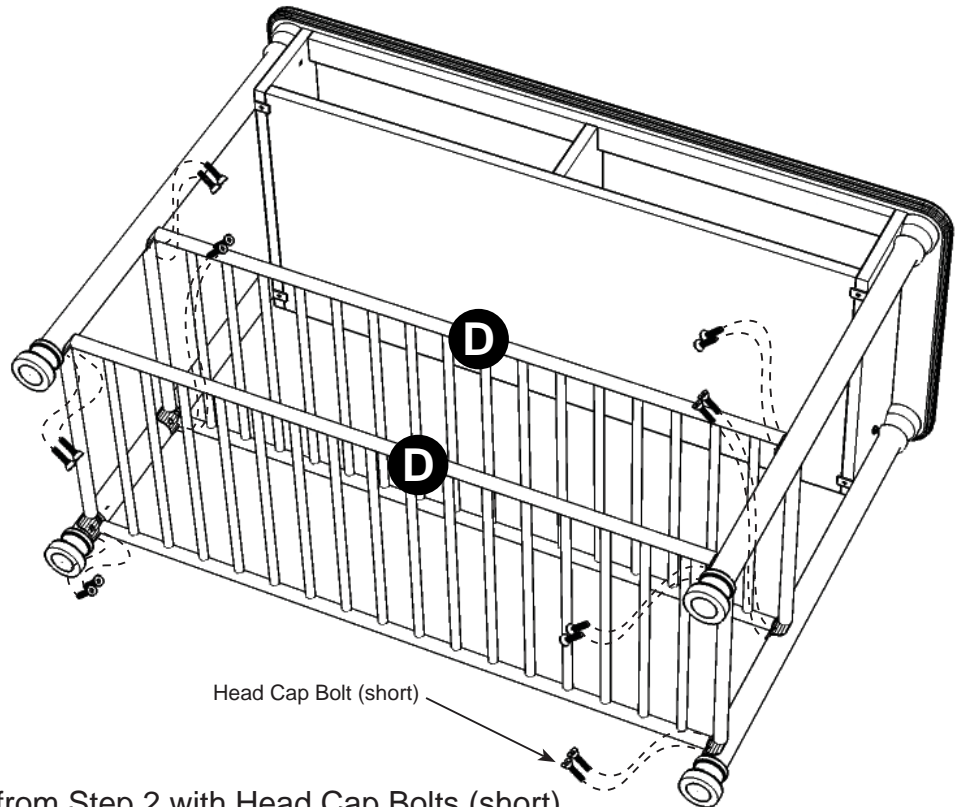

STEP 3

Attach Shelves (D) to unit from Step 2 with Head Cap Bolts (short).

Tighten all Bolts.



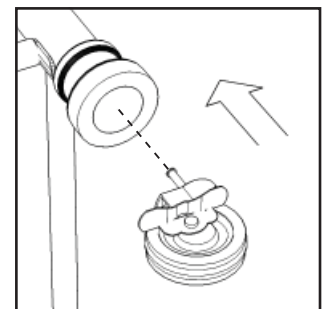


Figure 2

STEP 4


Attach Casters underneath the legs of unit, with the Locking Casters to the front.
(See figure 2)

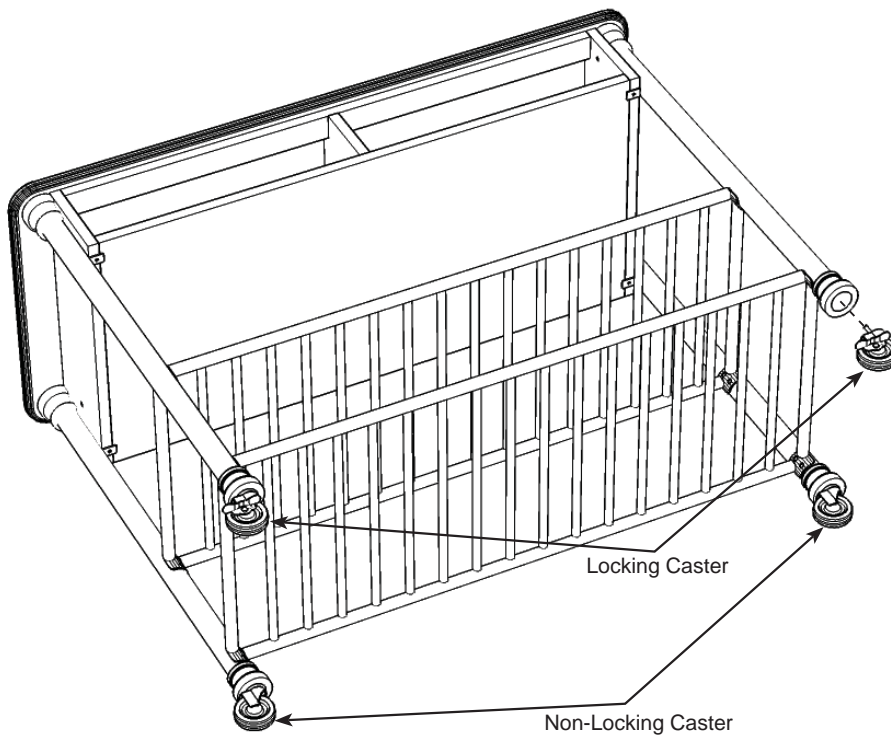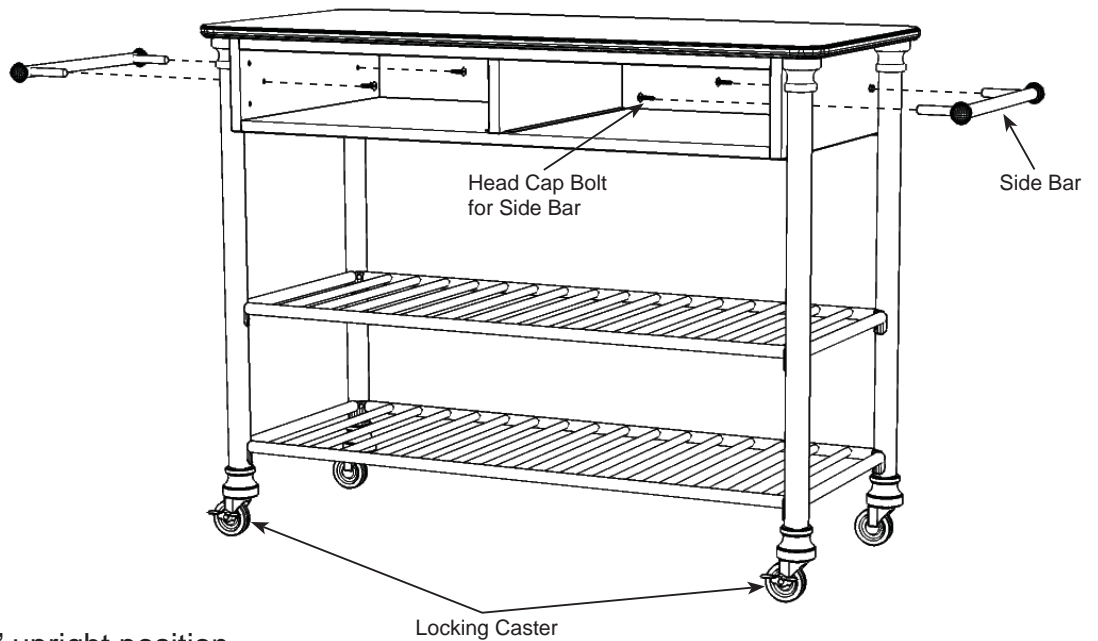

STEP 5

Turn the unit to its' upright position.

Attach Side Bars to unit with Head Cap Bolts for Side Bar.

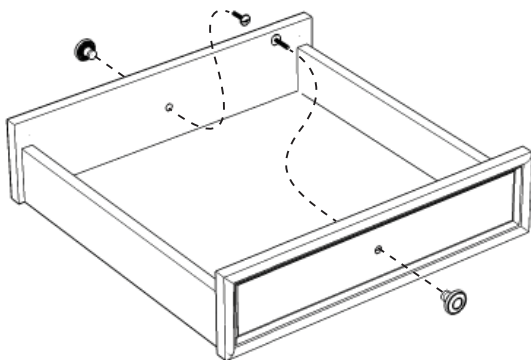

STEP 6

Remove the Knobs that are on the inside of the drawers and attach to the outside of the drawers with Machine Screws.

STEP 7

Slide drawers into position.

