



ASSEMBLY INSTRUCTION

BATH SINGLE STOOL


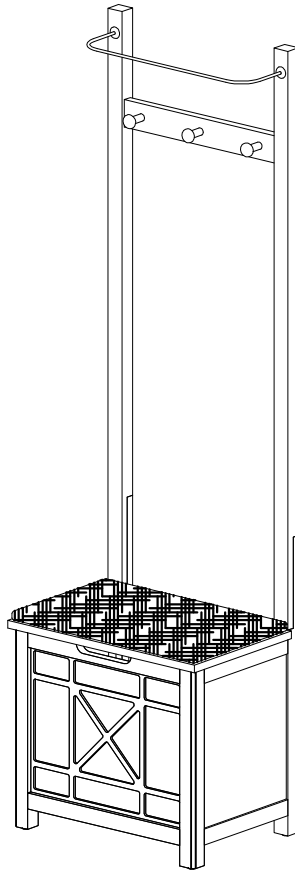


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

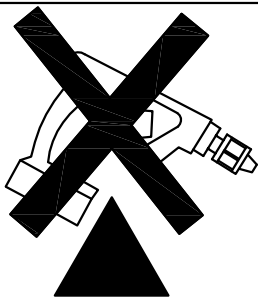

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

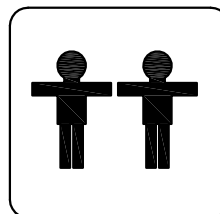


Tools Required

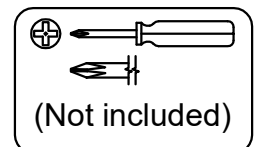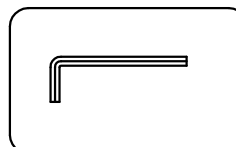






www.boltonfurniture.com

Part list - Bath Single Stool

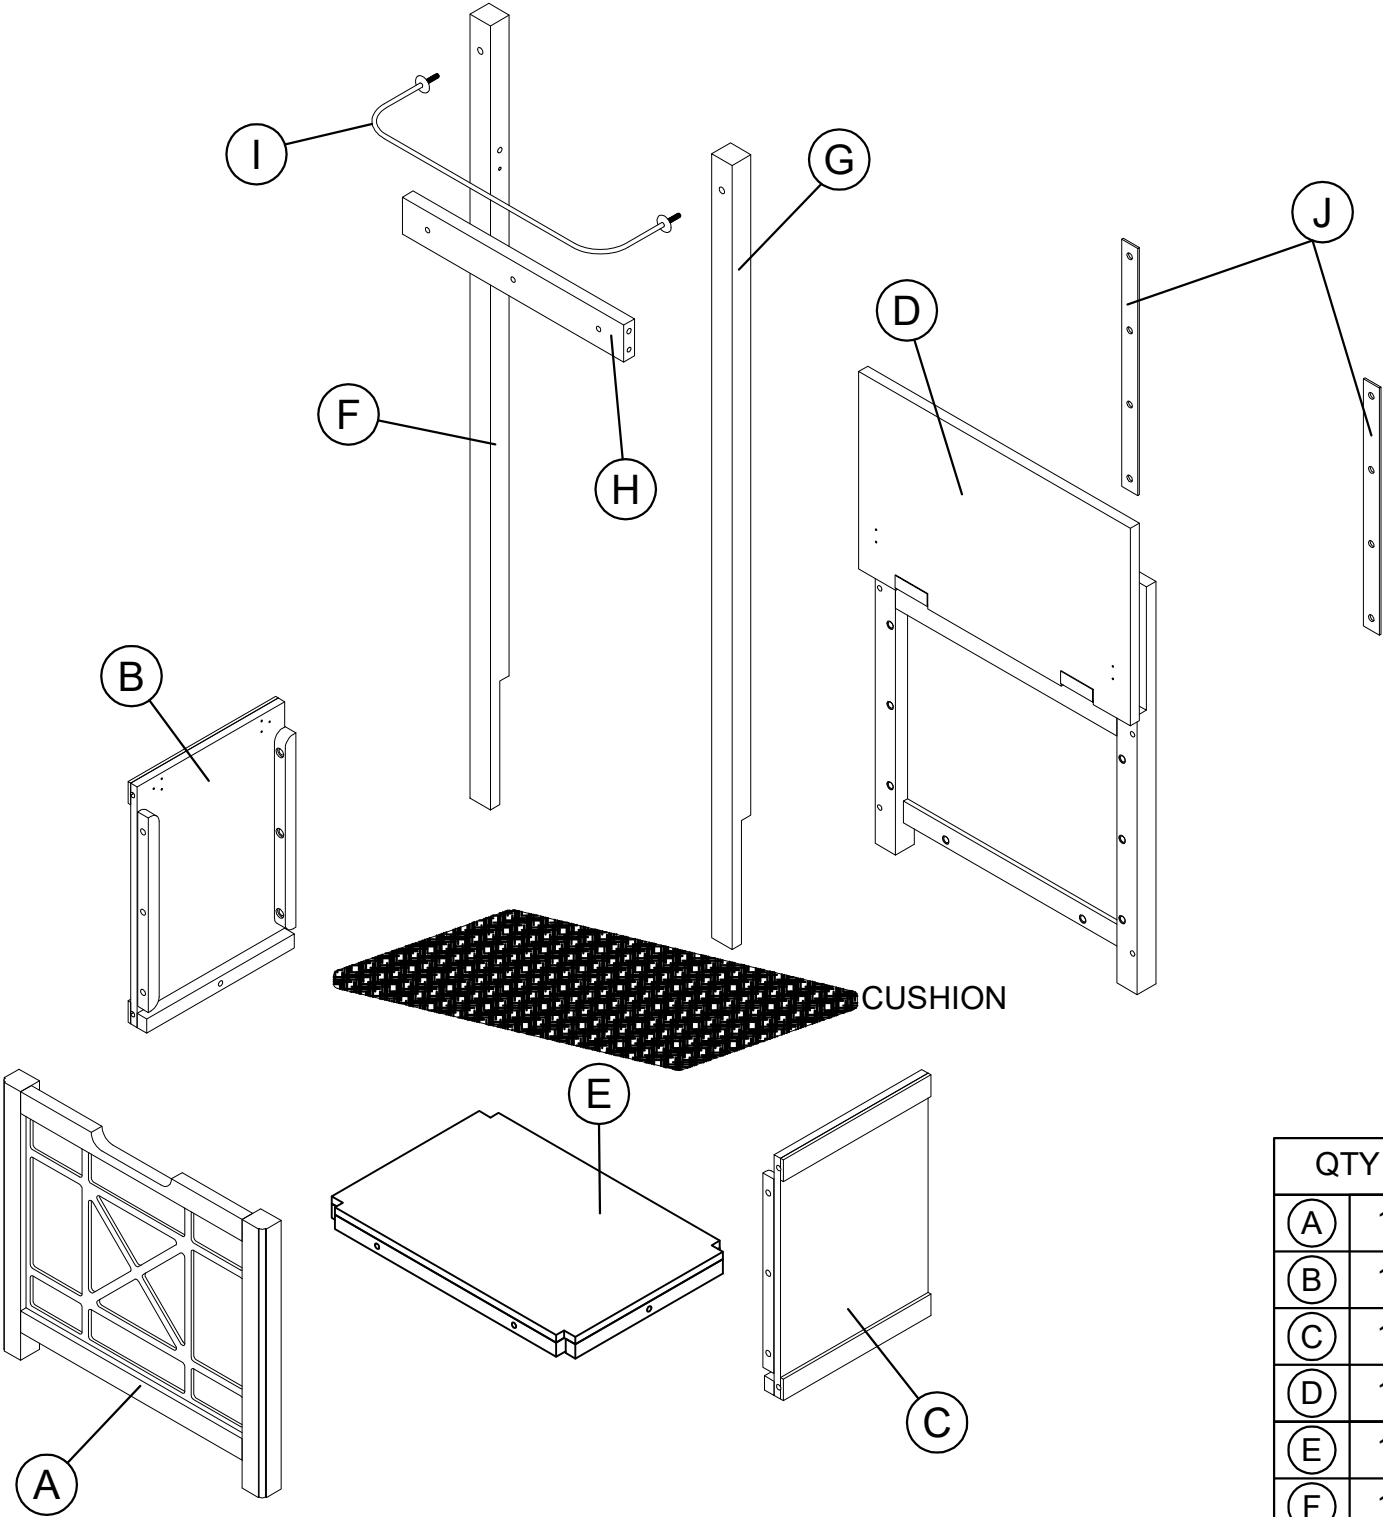

QTY	
(A)	1
(B)	1
(C)	1
(D)	1
(E)	1
(F)	1
(G)	1
(H)	1
(I)	1
(J)	2
CUSHION	1

Identifying the hardware-Identify the hardware using the illustrations below

1		2	2		4
CAM LOCK SET		M6 x 20MM BOLT			
3		3	4		22
M6 x 25MM BOLT		M6 x 30MM BOLT			
5		10	6		2
Ø8 x 30MM DOWEL		M6 x 13MM NUT			
7		1	8		5
LIFT HINGHE		M4 x 15MM SCREW			
9		3	10		1
KNOB		ALLEN KEY			

STEP 1

1



CAM LOCK SET

2


5


Ø8 x 30MM DOWEL


2

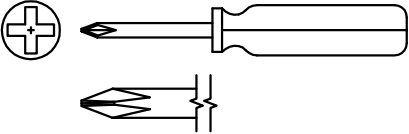


(Not included)

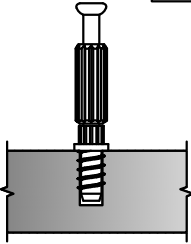


✓

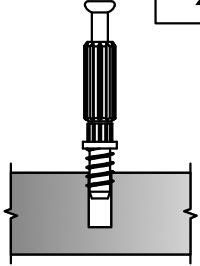

X

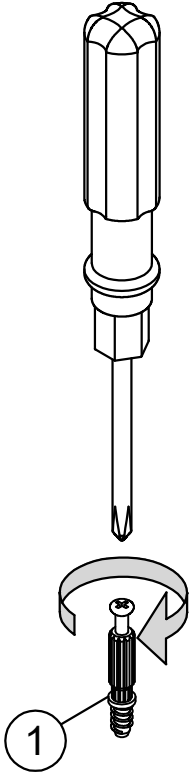

5

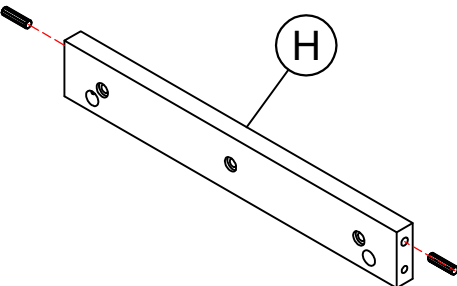

H

1



1

1



G

F



1

F	1
G	1
H	1

05/30/2023

4 of 12


ANDE28WH BATH SINGLE STOOL

STEP 2

1


CAM LOCK SET


2




(Not included)

The diagram illustrates the installation of the cam lock set. It shows a horizontal support bar (H) being attached to two vertical posts (F). The support bar (H) has pre-drilled holes for screws (1) and cam locks (1). The vertical posts (F) also have pre-drilled holes for cam locks (1) and screws (G). A callout shows the cam lock (1) being inserted into the post (F) and turned clockwise. Another callout shows the cam lock (1) being inserted into the support bar (H) and secured with a screw (1).

F	1
G	1
H	1


STEP 3

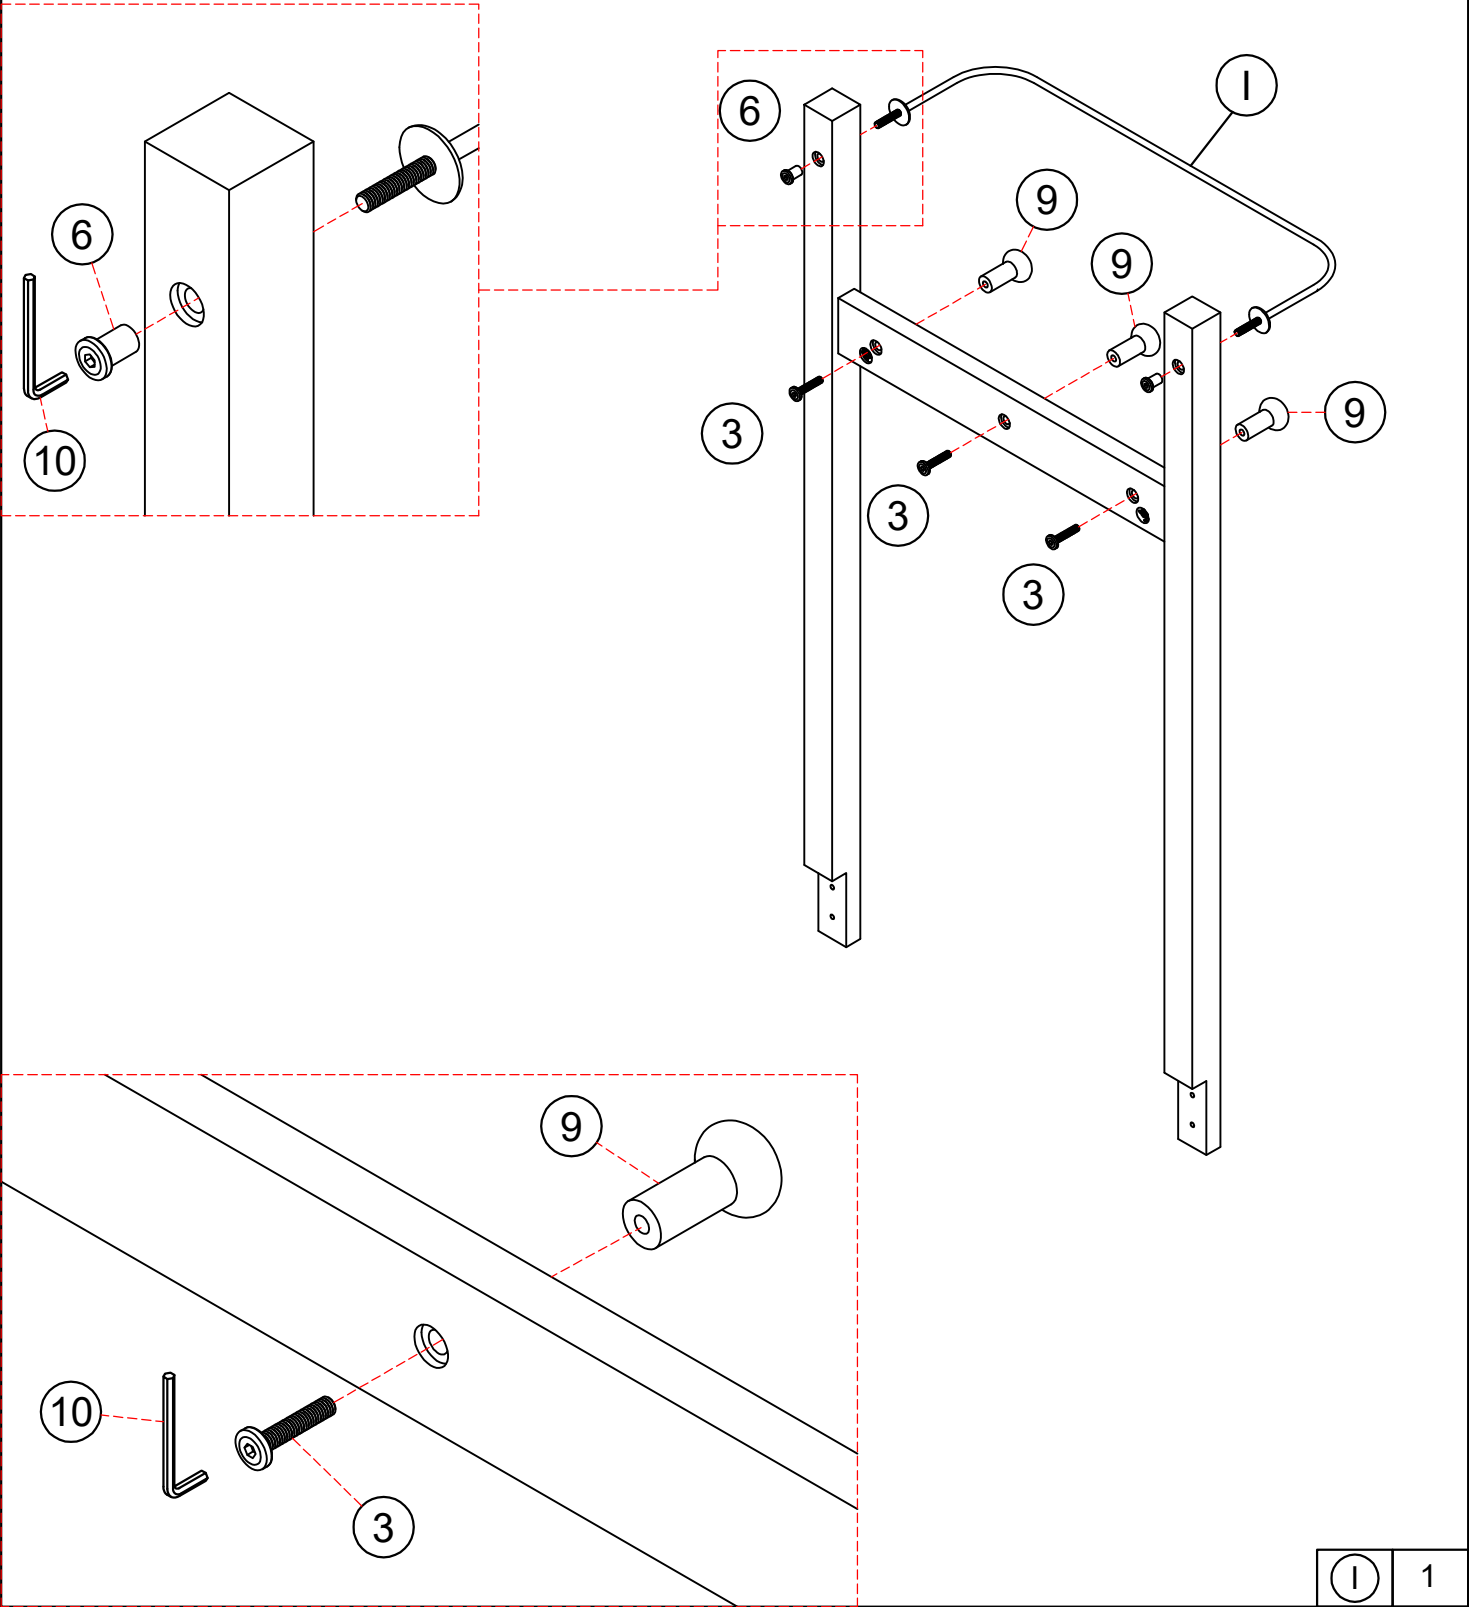3		3	6		2
M6 x 25MM BOLT			M6 x 13MM NUT		
9		3	10		1
KNOB			ALLEN KEY		



STEP 4

4


M6 x 30MM BOLT

6

5



Ø8 x 30MM DOWEL

4

10


ALLEN KEY


1

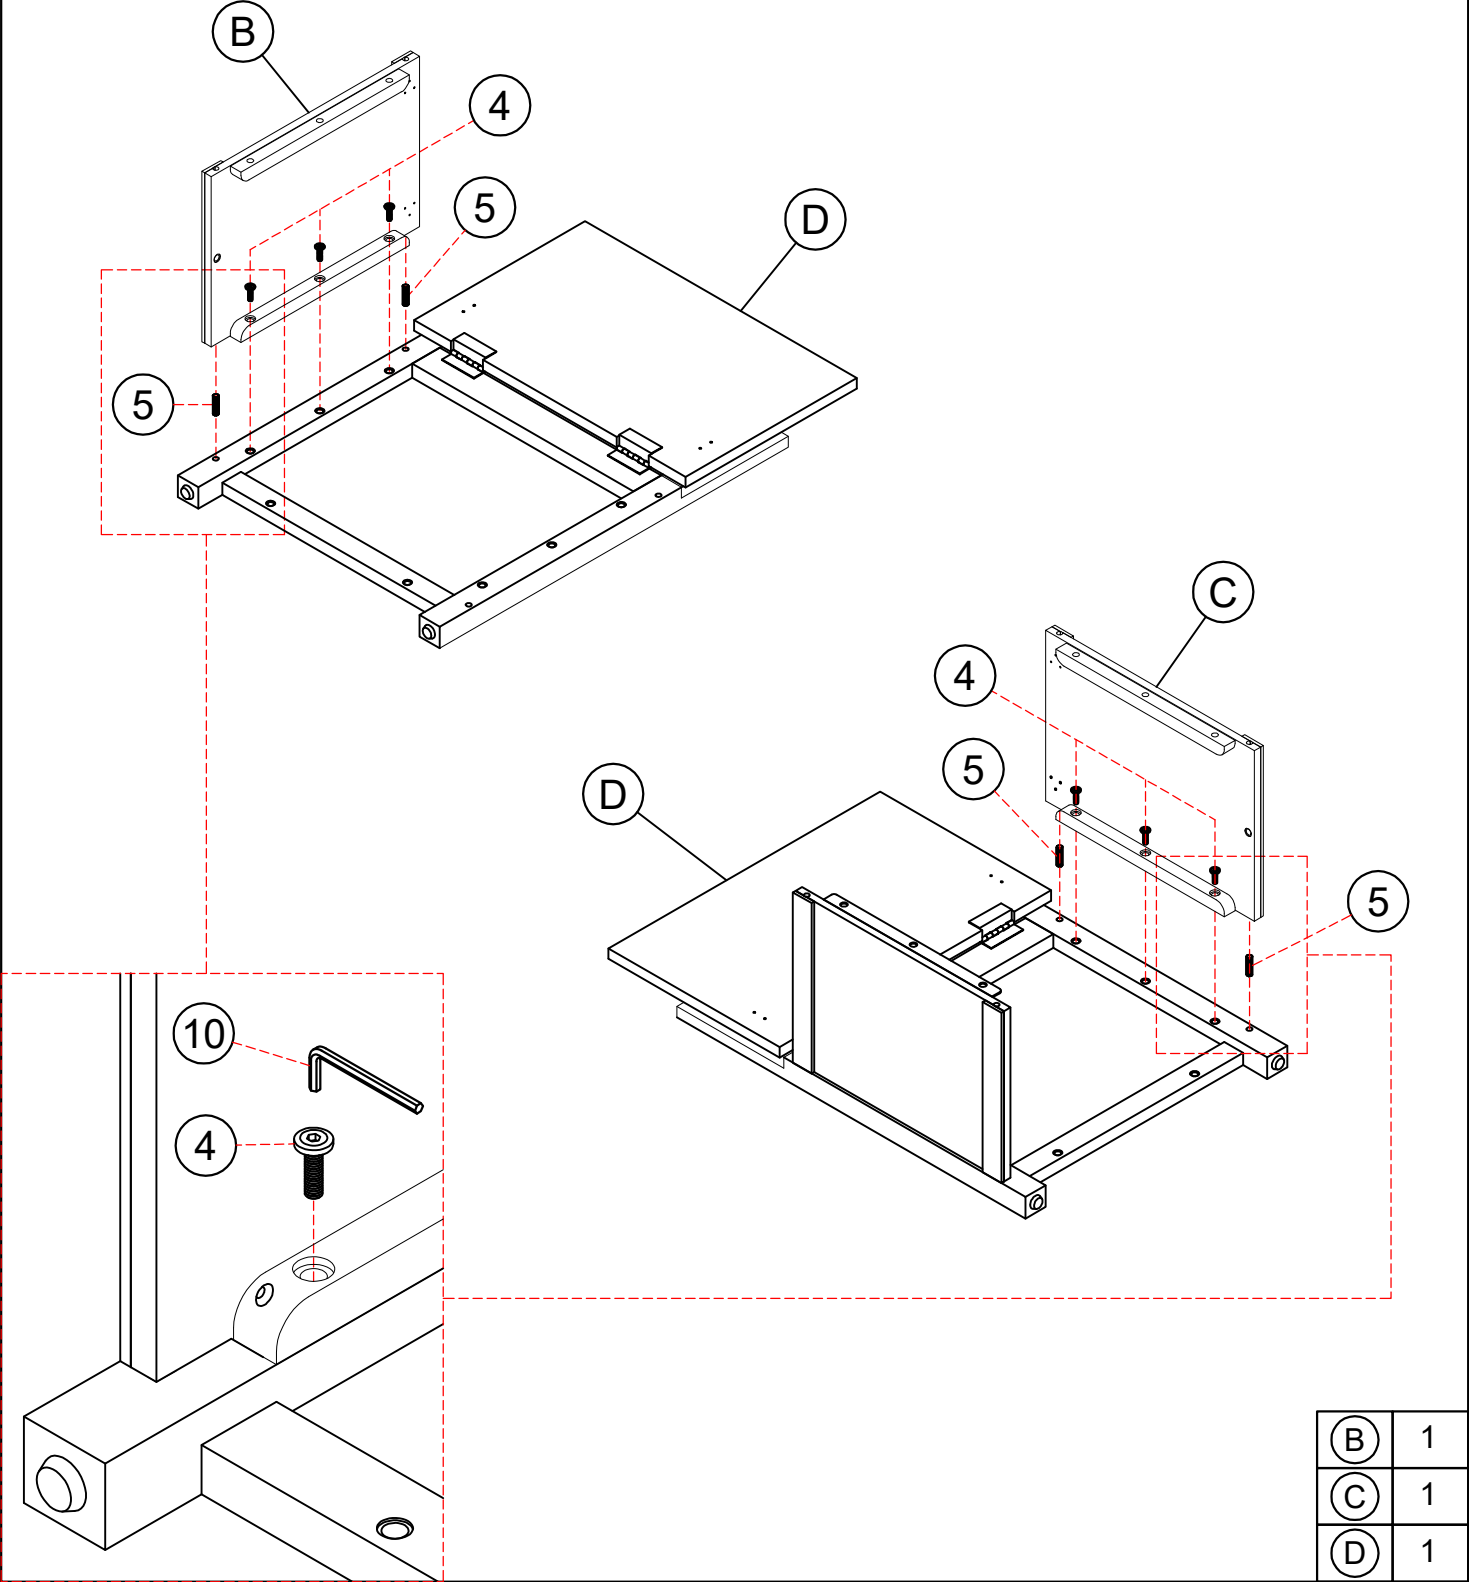

(B)	1
(C)	1
(D)	1

STEP 5

4



6

5




4

10



1

DO NOT TIGHTEN ALL BOLTS.

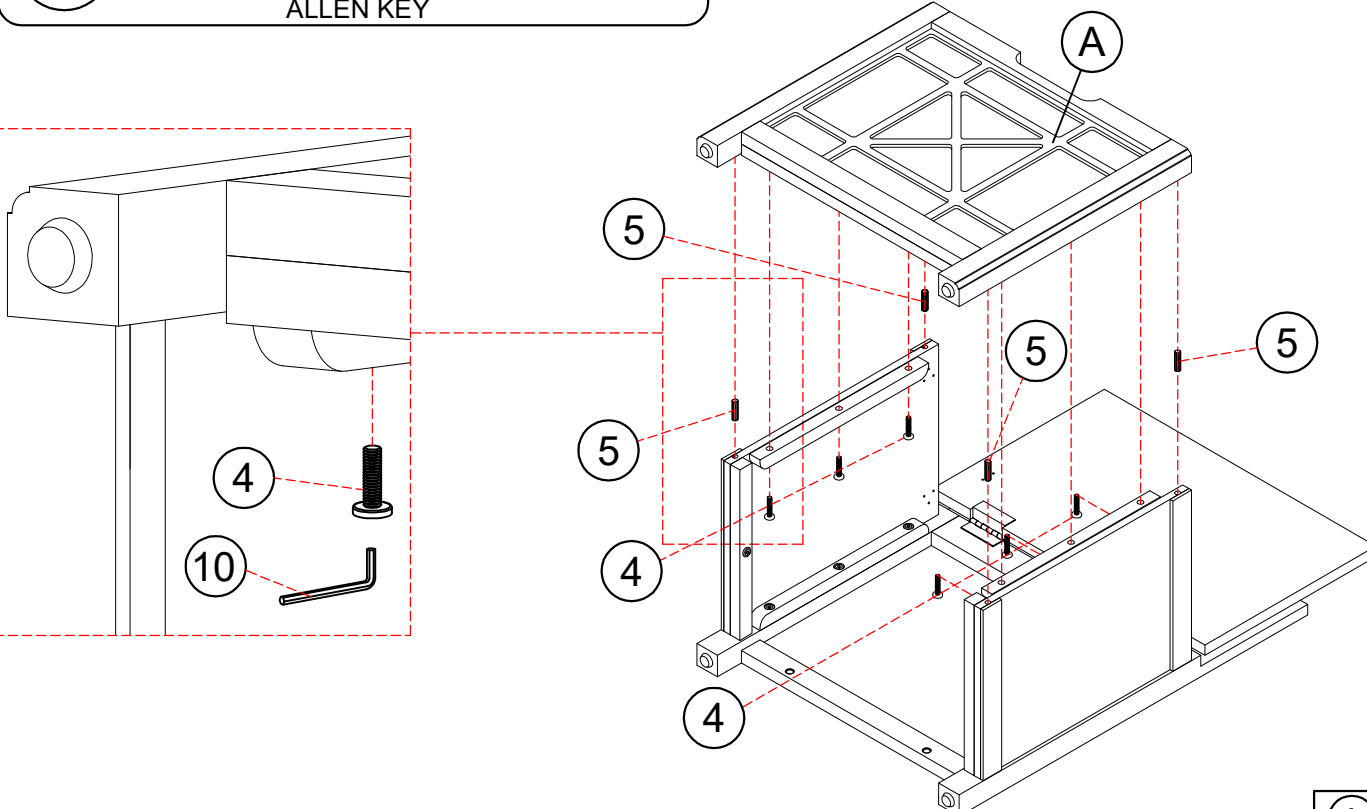


A

1

STEP 6

4




6

10



1

TIGHTEN ALL BOLTS.

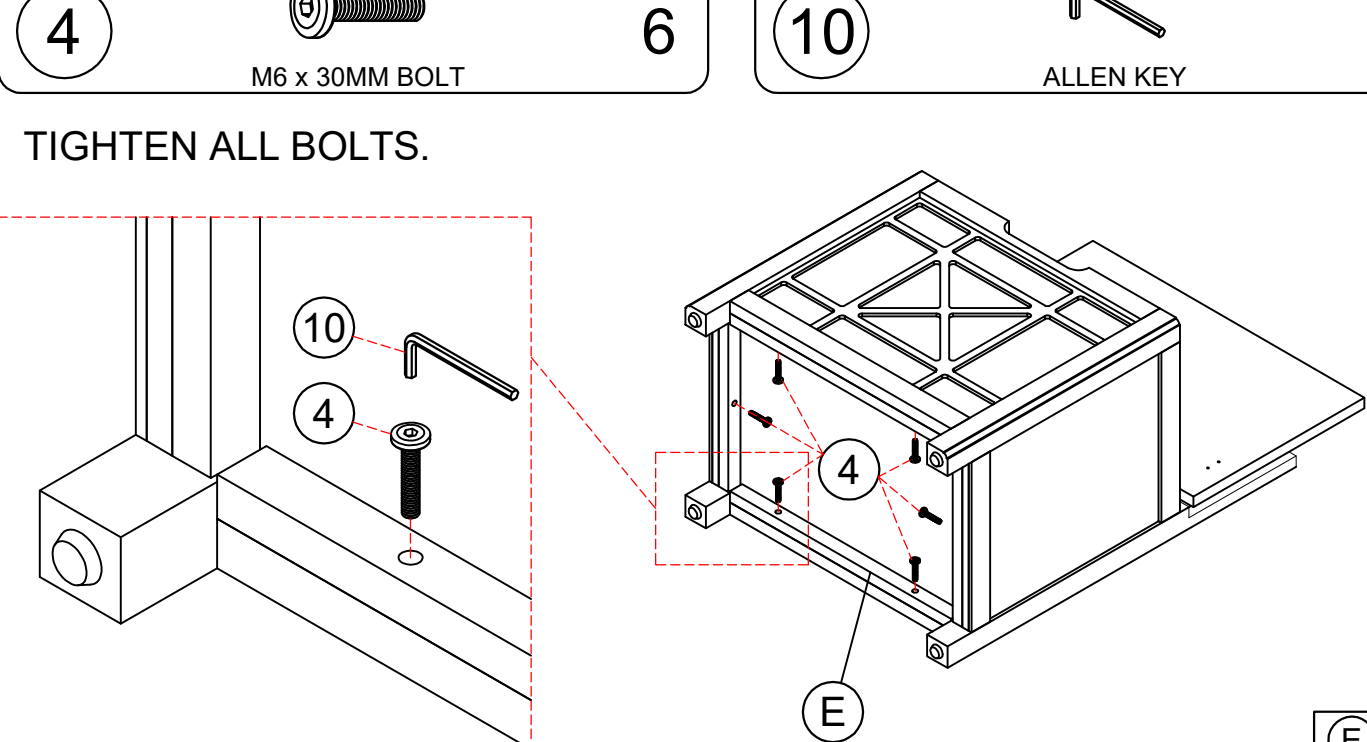


E

1


STEP 7

7



1


8




5

LIFT HINGHE

M4 x 15MM SCREW





(Not included)

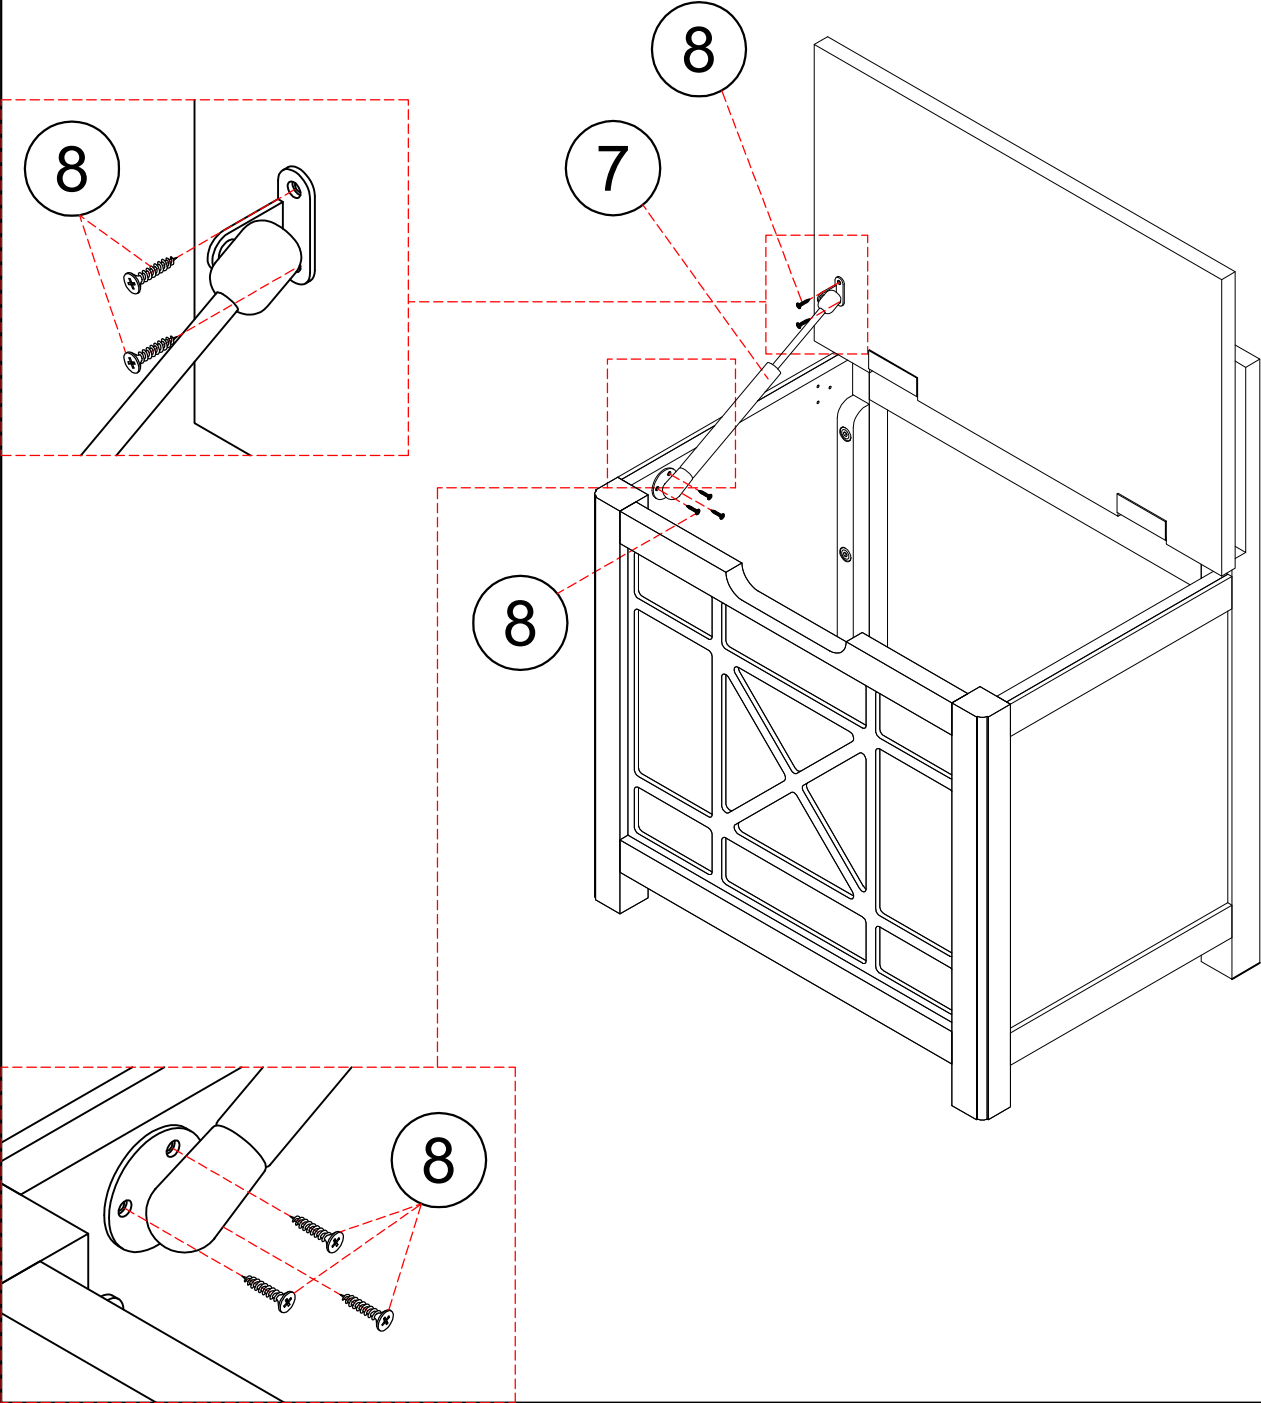

STEP 8

2




4

10




1

4



4

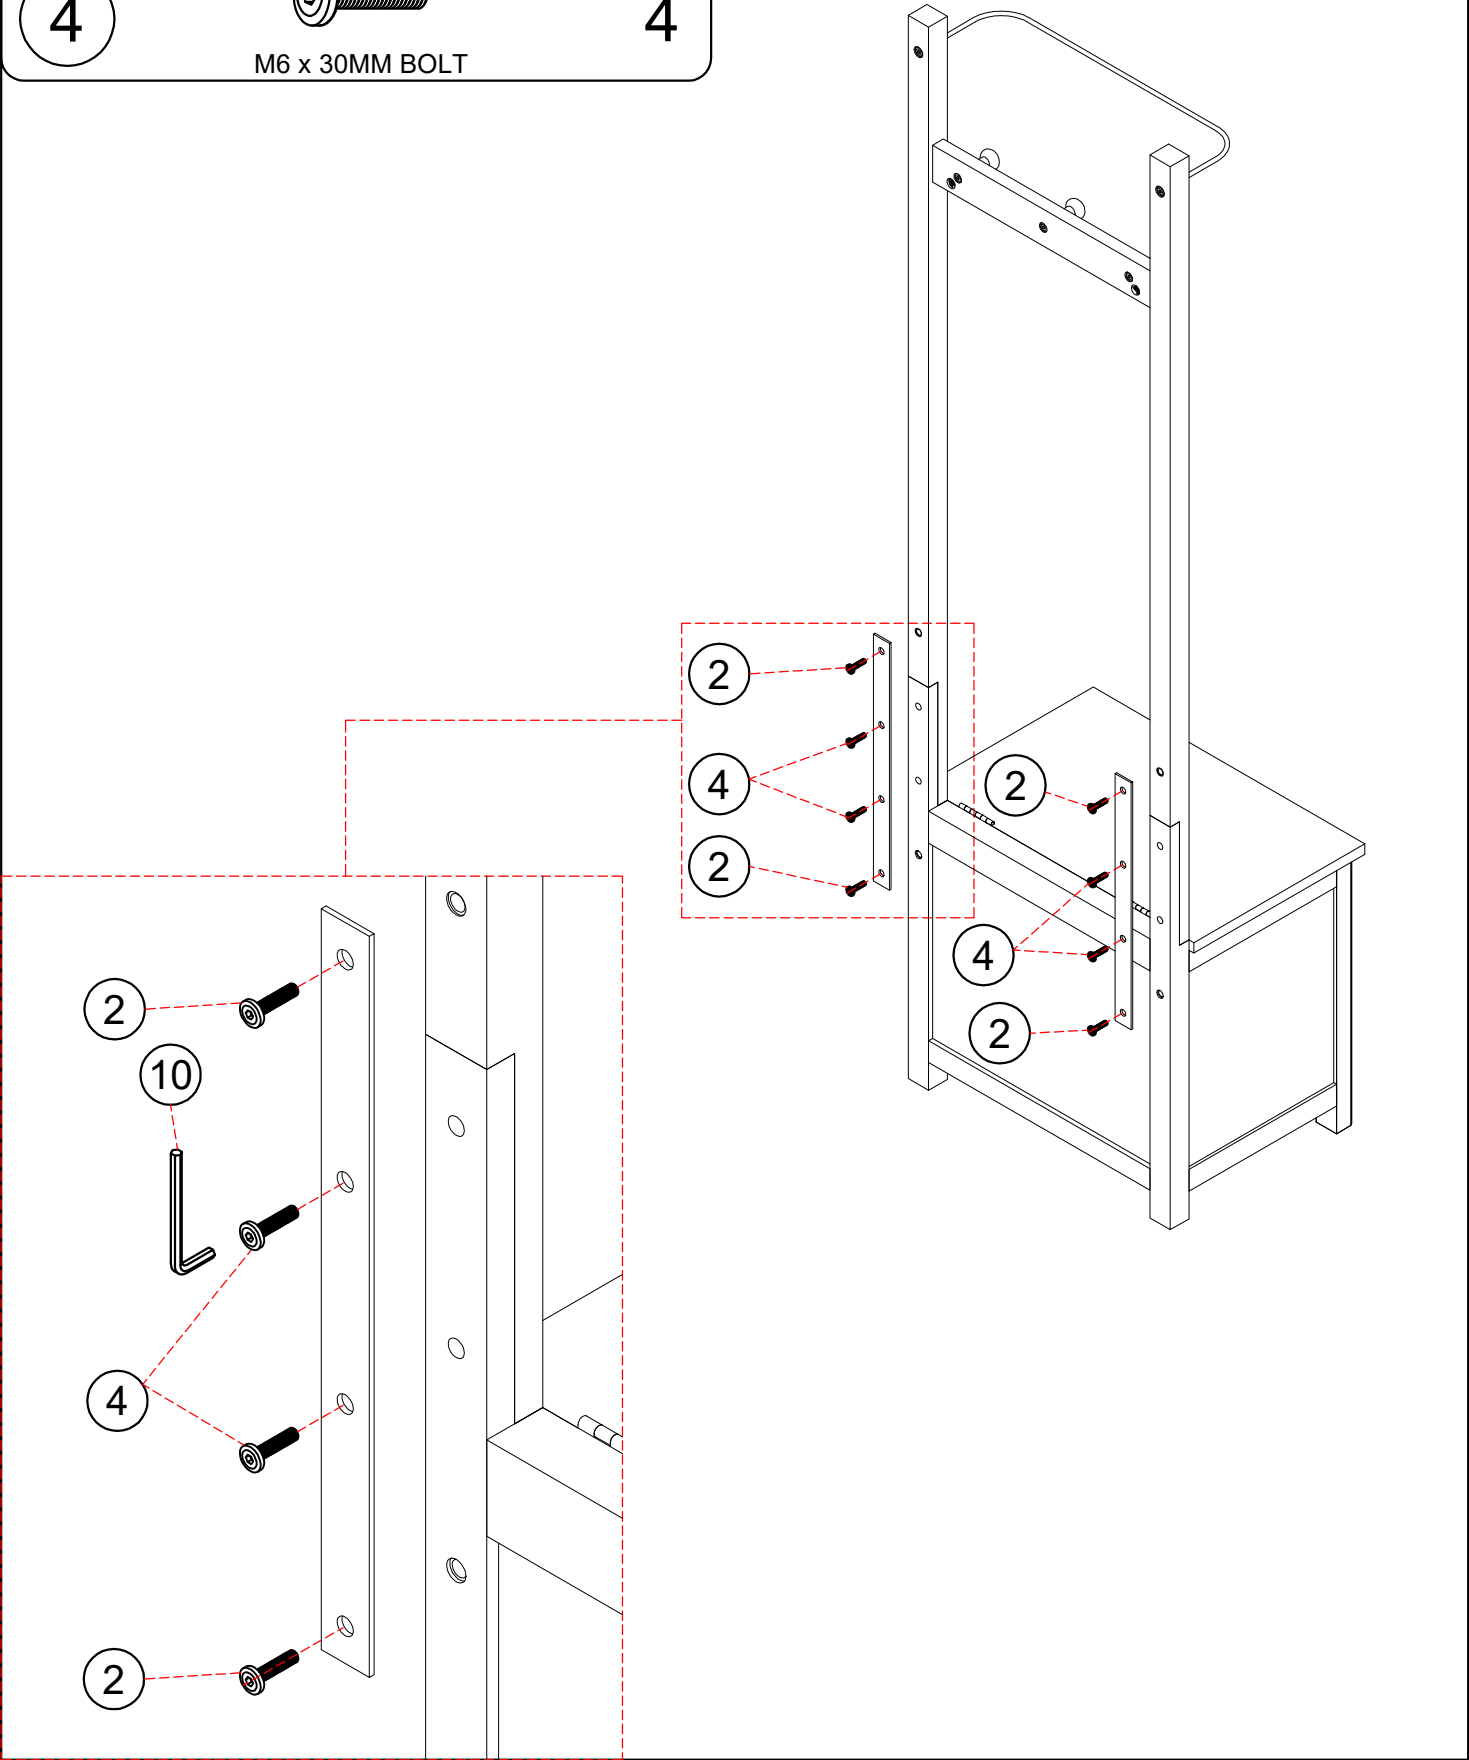

STEP 9

