




DESIGNED IN CALIFORNIA

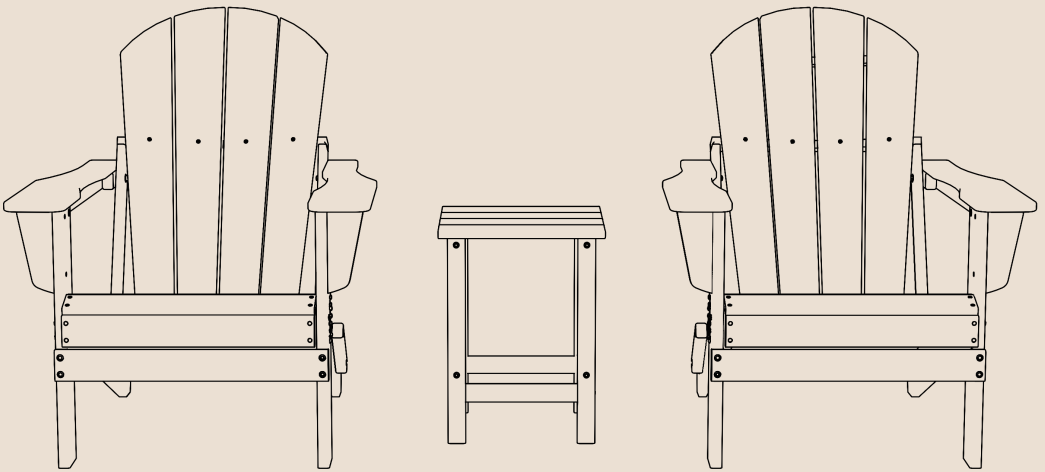

3PC OUTDOOR POLY ADIRONDACK
CHAIR SET WITH SIDE TABLE

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

<https://westintrends.com/welcome>



QUESTIONS OR COMMENTS?

If you have questions reach out to
cs@westintrends.com

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

<https://westintrends.com/apps/product-registration>




ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

TABLE OF CONTENTS

ASSEMBLY INSTRUCTIONS

Outdoor Folding Poly Adirondack Chair..... 4

Outdoor Poly Adirondack Side Table..... 10

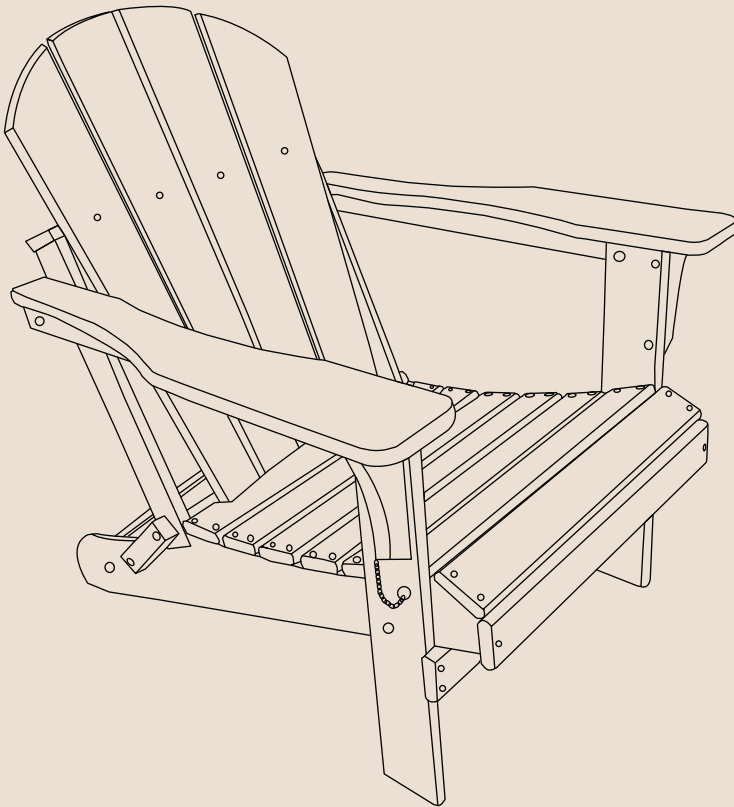

OUTDOOR FOLDING POLY
ADIRONDACK CHAIR

! NOTICE


Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be very careful when folding chair to avoid smashing your hands or fingers.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



ALLEN WRENCH
(PROVIDED)



CHAIR
330 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

M6 x 80mm
BOLT



2 PCS

2

M6 x 60mm
BOLT



4 PCS

3

M6 x 50mm
BOLT



4 PCS

4

M6.3 x 50mm
SCREW



2 PCS

5

M6 x 30mm
BOLT



4 PCS

6

M6 NUT



8 PCS

7


M6 WASHER



8 PCS

8


WRENCH



1 PC

9

ALLEN
WRENCH




1 PC

PARTS

A


CHAIR SEAT



1 PC

B


RIGHT CHAIR LEG



1 PC

C

LEFT CHAIR LEG



1 PC

PARTS

D

RIGHT CHAIR ARM



1 PC

E


LEFT CHAIR ARM



1 PC

F

CHAIR BACKREST

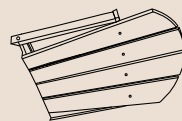

1 PC

G

BACK RAIL



1 PC

H

FRONT RAIL



1 PC

I


LOCKING BLOCK



2 PCS

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this chair and learn the exact position of each part to be assembled.

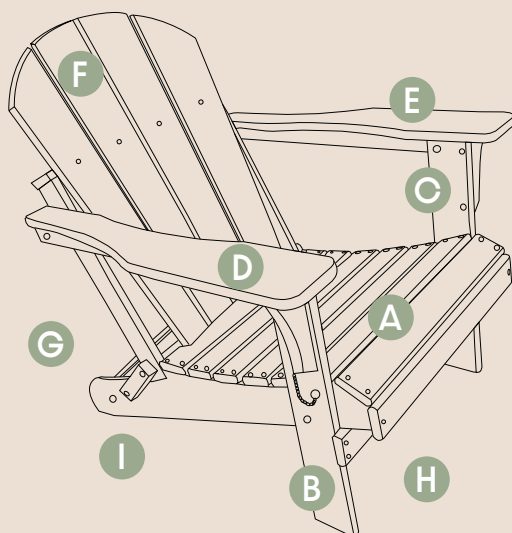


PRODUCT ASSEMBLY

1

Attach **Part C Left Chair Leg** to **Part E Left Chair Arm** with 1 pc of **Hardware #2 Bolt** and **Hardware #7 Washer** and **Hardware #6 Nut**. Do same to **Part B Right Chair Leg** and **Part D Right Chair Arm**.

Attach the locking pin to the chair legs with a screw driver before assembly.


Do not tighten screws too much at this stage.

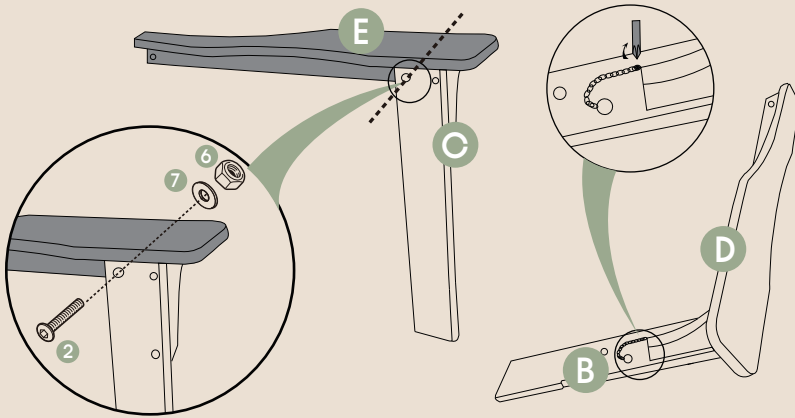

PRODUCT ASSEMBLY

2


Attach **Part B Right Chair Leg** and **Part C Left Chair Leg** to **Part A Chair Seat** with 2 pcs of **Hardware #2 Bolt**, **Hardware #7 Washer** and **Hardware #6 Nut**.

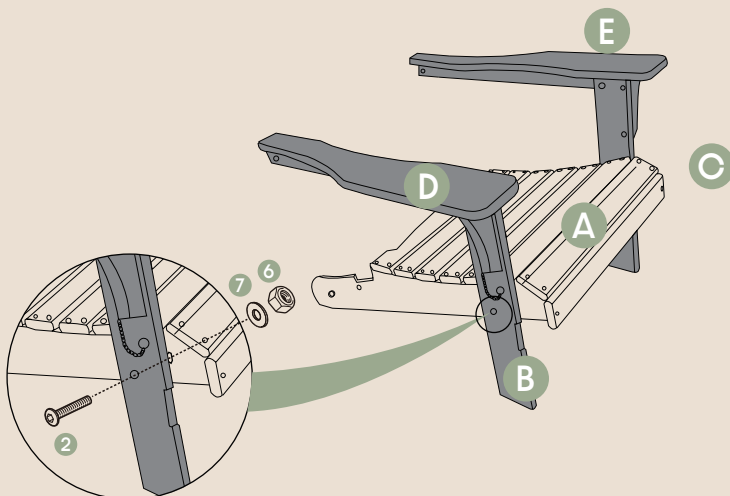

3


Fix **Part F Backrest** into **Part A Chair Seat** and then attach **Part F Chair Backrest** to **Part D Right Chair Arm** with 1 pc of **Hardware #1 Bolt**, **Hardware #7 Washer** and **Hardware #6 Nut**.

Do the same to attach **Part F Backrest** to **Part E Left Chair Leg**.

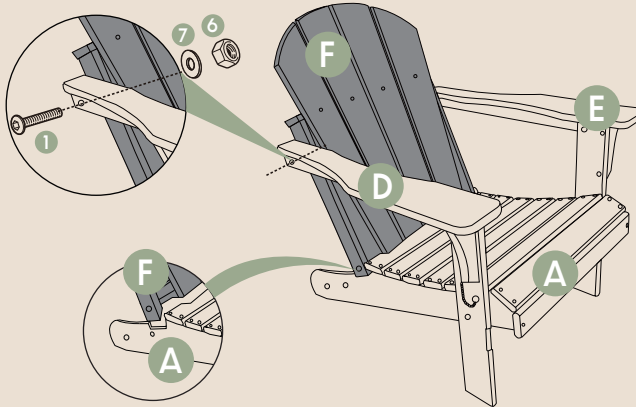

4


Attach **Part I Locking Blocks** to **Part F Chair Backrest** (both sides) with 2 pcs of **Hardware #4 Screw** and attach **Part I Locking Blocks** to **Part A Chair Seat** (both sides) with 2 pcs of **Hardware #3 Bolt**, **Hardware #7 Washer** and **Hardware #6 Nut**.

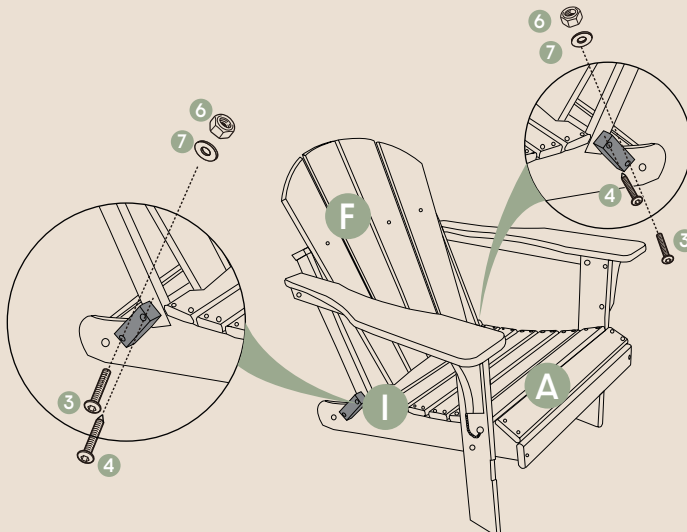

5


Attach Part G Back Rail to Part A Chair Seat with 2 pcs of Hardware #3 Bolt.

Attach Part H Front Rail to Part B Left Chair Leg and Part C Right Chair Leg with 4 pcs of Hardware #5 Bolt.

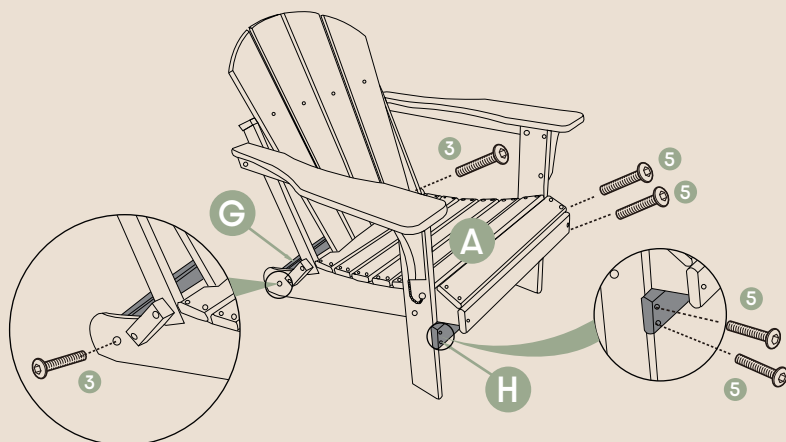


Congratulations! You finished the assembly of this chair.

Pull the locking pin out of both legs to fold this chair as below.

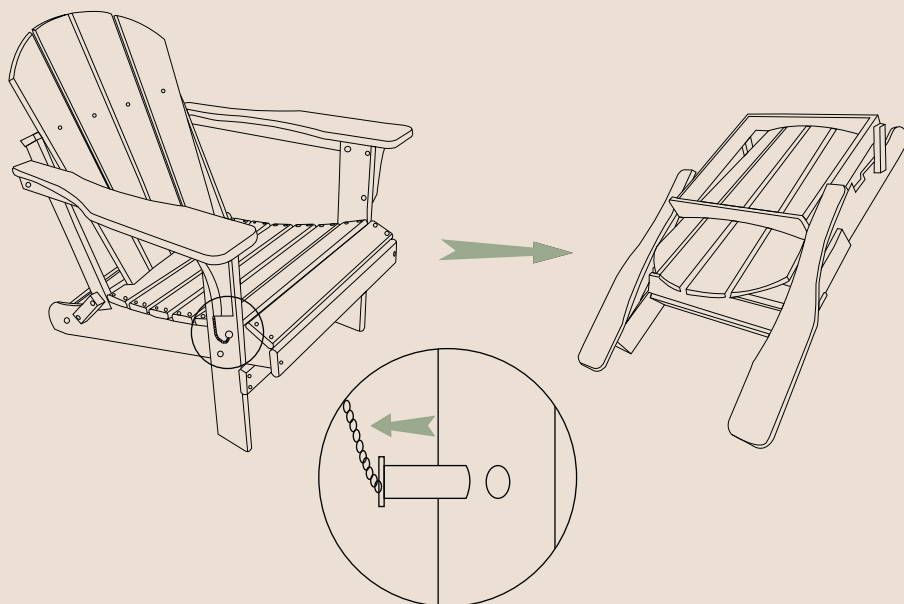



DESIGNED IN CALIFORNIA

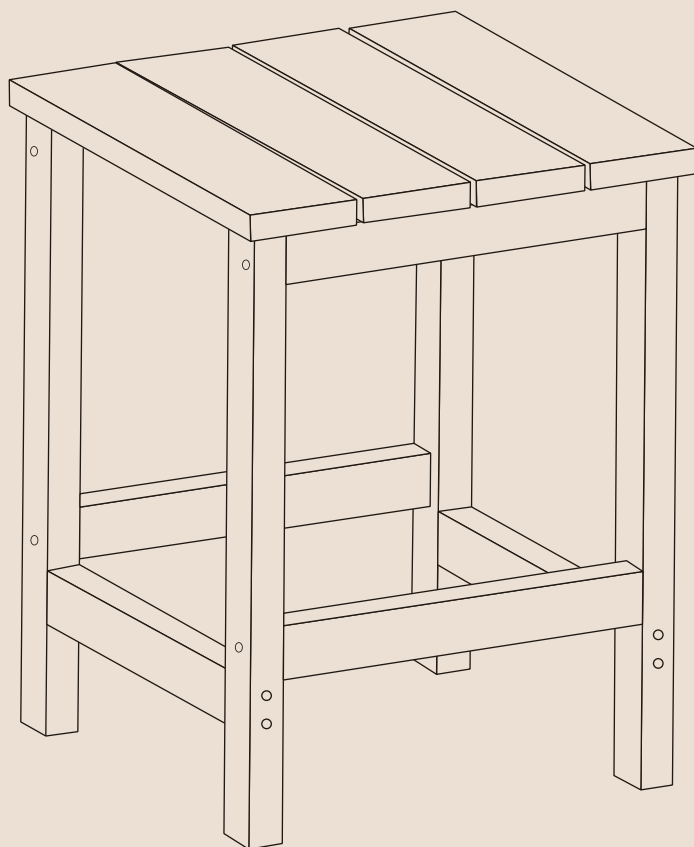

OUTDOOR POLY ADIRONDACK SIDE TABLE

! NOTICE

Do not overtighten screws or bolts. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tools to prevent cracking the PE boards when assembling.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



TABLE
100 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

BOLT
M6 x 45mm




8 PCS

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



2 PCS

C

WOODEN BRACE

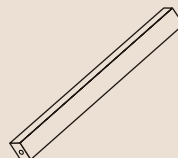


2 PCS

1


Attach **Part B Table Leg** to **Part A Table Top** with 2 pcs of **Hardware #1 Bolt** using an **Allen Wrench**.

Do not tighten the bolts too much at this stage.

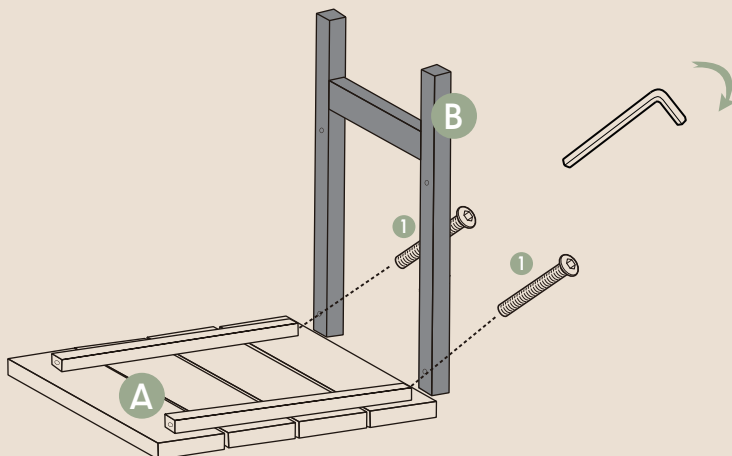

2



Attach **Part C Table Wooden Braces** to **Part B Chair Legs** with 2 pcs of **Hardware #1 Bolt**.

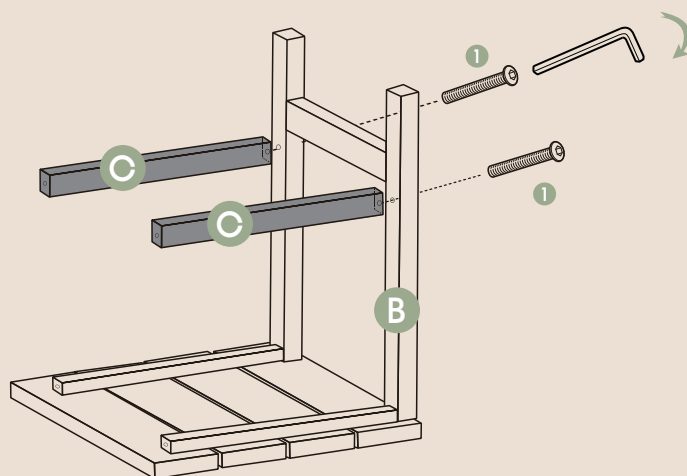

3

Attach **Part B Table Leg** to **Part A Table Top** and **Part C Wooden Brace** with 2 pcs of Hardware #1 Bolt using an Allen Wrench.

Tighten all bolts and screws to finish the assembly.

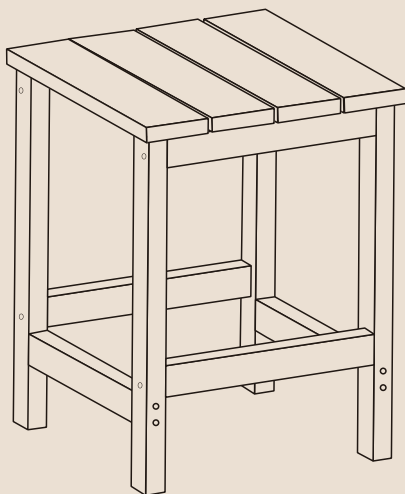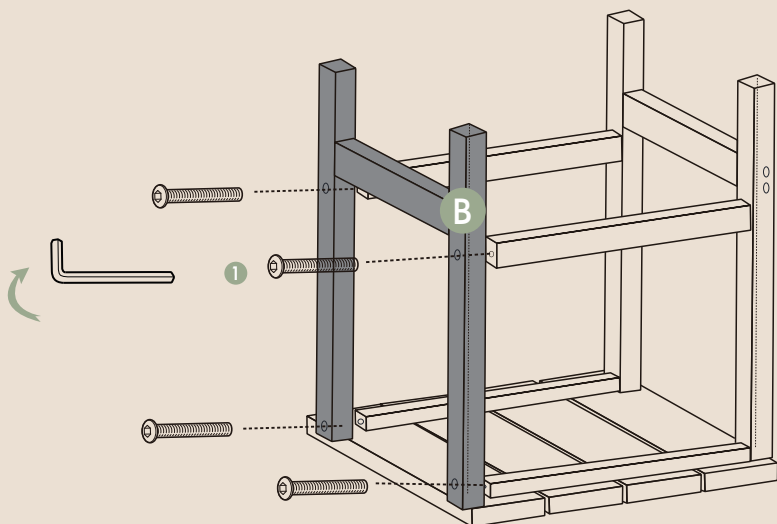

REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove any debris and dirt.