

WOODPLAY[®]

Playsets

SOLID PANEL Assembly Instructions



PG-MAN-PAN-SLD-00




Before installing the solid panels determine on which side of playset you will install the panel. The panel assembly and installation will vary if installing on the Deck Frame or Deck Support, see below.

HARDWARE NEEDED (PER PANEL)

PART #	DESCRIPTION	QTY.
PG-HW-L002	1/4" X 4.5" LAG BOLTS	2
PG-HW-W002	1/4" FLAT WASHER	2


ASSEMBLING SOLID PANEL FOR DECK FRAME SIDE OF THE PLAYHOUSE.

1. Attach **Panel Bottom** (PG-2X4-025-PBB) flush to the **OUTSIDE** face (side where you can't see the screw heads) of the solid **Side Panel** (PAN-033-025-SLD) as shown. Continue to **page 4** to attach to the playset.

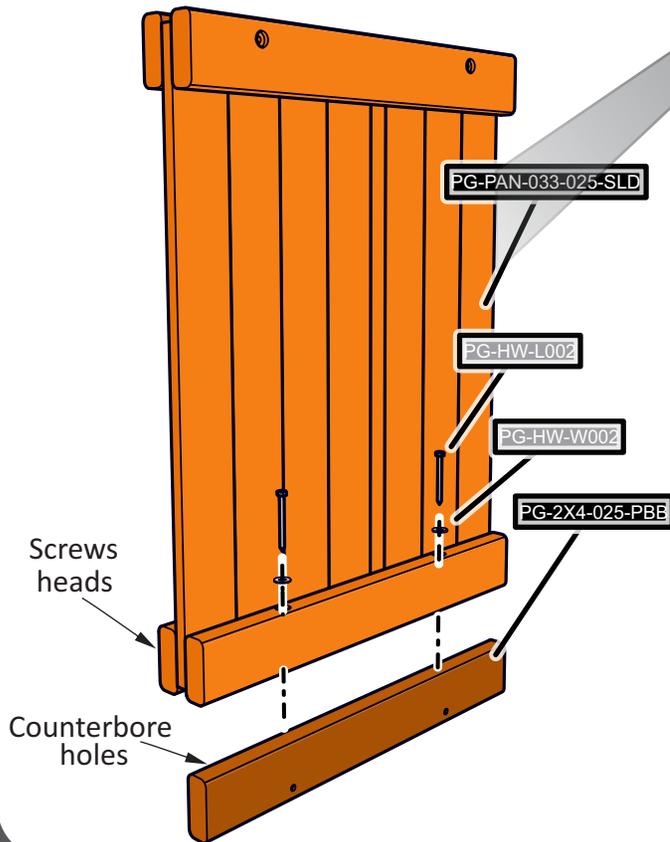

ASSEMBLING SOLID PANEL FOR DECK SUPPORT SIDE OF THE PLAYHOUSE / OUTBACK.

1. Attach **Panel Bottom** (PG-2X4-025-PBB) flush to the **INSIDE** face (side where you can see the screw heads) of the solid **Side Panel** (PAN-033-025-SLD) as shown. Continue to **page 3** to attach to the playset.



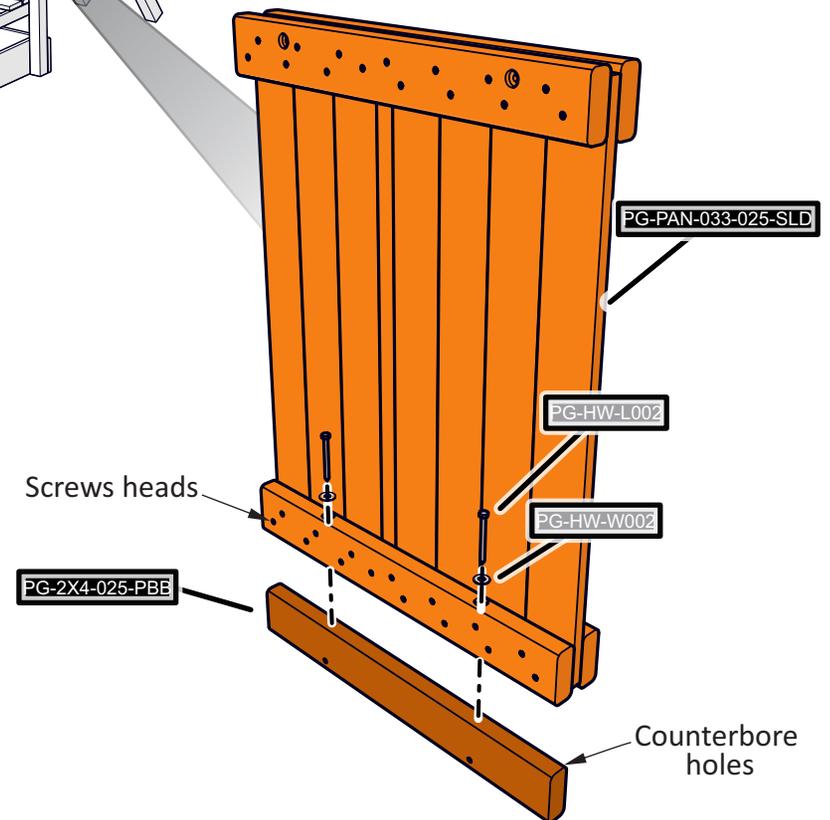


INSTALLING PANEL ON DECK SUPPORT SIDE OF THE PLAYHOUSE OR OUTBACK PLAYSETS

HARDWARE NEEDED (PER PANEL)

PART #	DESCRIPTION	QTY.
PG-HW-L009	1/4" X 3" LAG BOLTS	2
PG-HW-L002	1/4" X 4.5" LAG BOLTS	2
PG-HW-W002	1/4" FLAT WASHER	4

- Attach solid side panel (PAN-033-025-SLD) as shown in **Detail A**. Attach the Side panel bottom to the **Deck Support** with 1/4" Washers & 1/4" X 3" lag bolts.
- Attach solid side panel to the **Safety Rail** on the inside with 1/4" Washers & 1/4" X 4 1/2" lag bolts. See **Detail A** & **Inside View**.

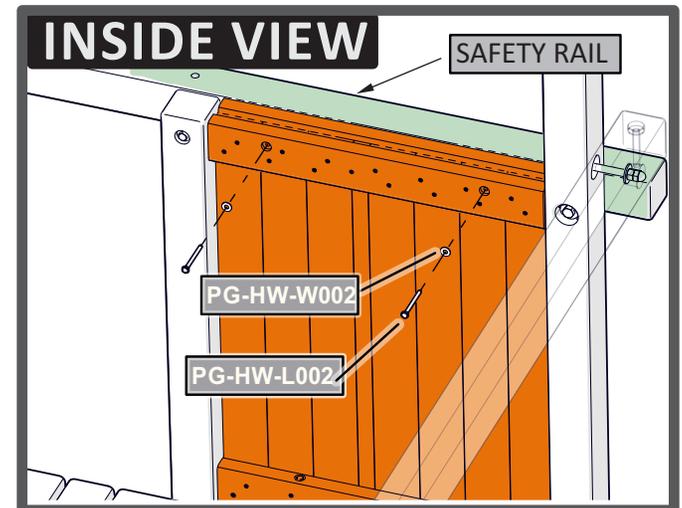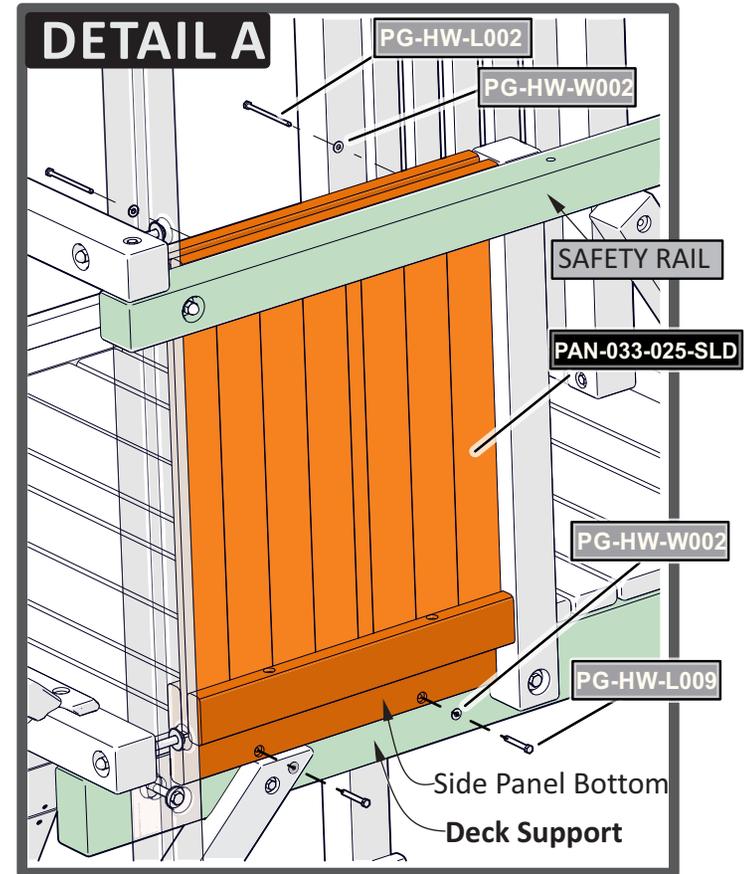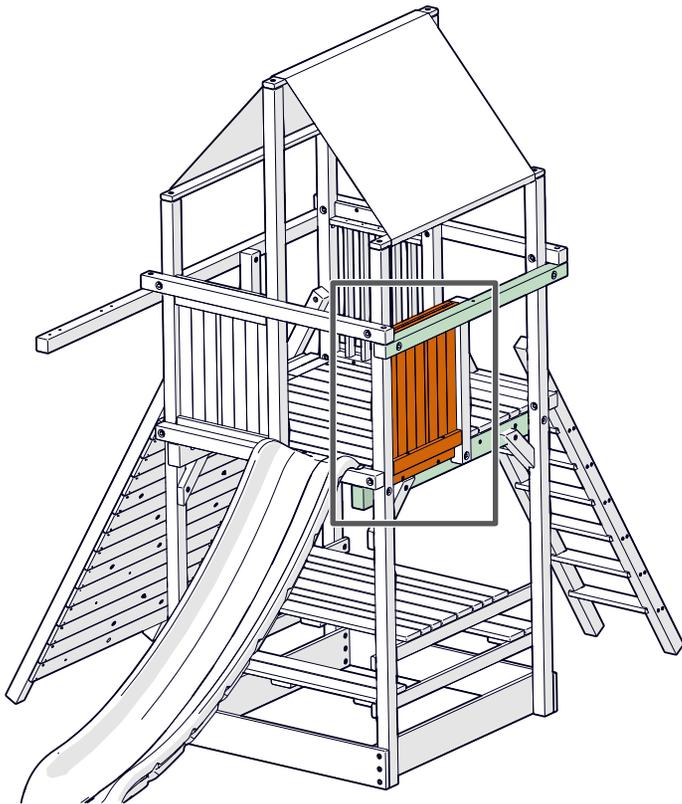

INSTALLING SOLID PANEL ON DECK FRAME SIDE OF THE PLAYHOUSE

HARDWARE NEEDED (PER PANEL)

PART #	DESCRIPTION	QTY.
PG-HW-L009	1/4" X 3" LAG BOLTS	2
PG-HW-L002	1/4" X 4.5" LAG BOLTS	2
PG-HW-W002	1/4" FLAT WASHER	4

- Attach solid side panel (PAN-033-025-SLD) as shown in **Detail A**. Attach the Side panel to the **Safety Rail** with 1/4" Washers & 1/4" X 3" lag bolts.
- Attach the side panel to the **Deck frame** using 1/4" washers & 1/4" X 4 1/2" lag bolts. See **Detail A**.

