
american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

924-915

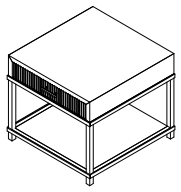

TOOLS REQUIRED:

Allen key (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Lay the top on a clean and padded surface to prevent scratches,Attach the 4 long legs, using Bolt (A), Lock washers (B) and Flat washers (C).Tighten with Allen key (D)(See Figure 1)

2. Attach the frame iron to the 4 long legs,using Bolt (A), Lock washers (B) and Flat washers (C).Tighten with Allen key (D) (See Figure 2)

3. Attach the 4 shorts legs to the frame iron,using Bolt (A), Lock washers (B) and Flat washers (C).Tighten with Allen key (D)(See Figure 3)

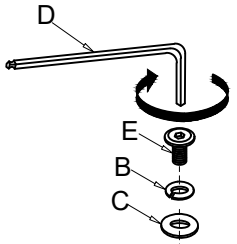


Figure 2

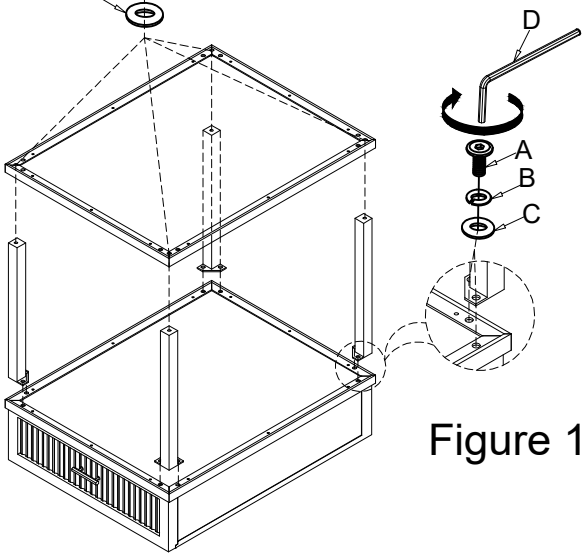


Figure 1


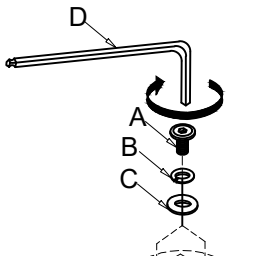


Figure 3

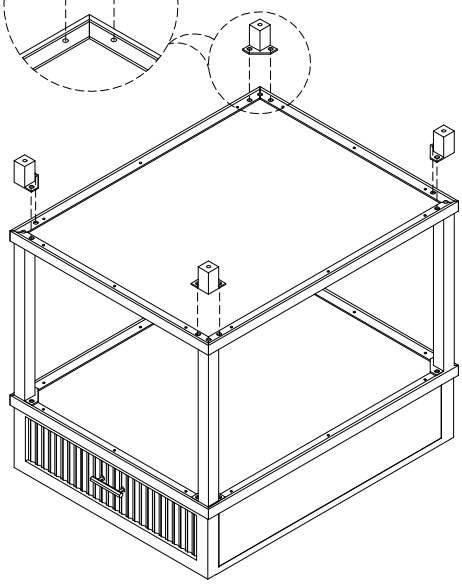

No.		Hardware List	Q'ty
A		Bolt Ø1/4" x 1/2"	16
B		Lock Washer Ø1/4"	20
C		Flat Washer Ø1/4"	20
D		Allen Key 4mm	1
E		Bolt Ø1/4" x 3/4"	4

Thank you for purchasing furniture from american drew!