
ASSEMBLY INSTRUCTION

KINCAID
SOLID WOOD SINCE 1946


www.kincaidfurniture.com
Phone :828-728-3261.


863-323 ROSS QUEEN UPH PANEL BED HB 5/0
863-326 ROSS KING UPH PANEL BED HDBD 6/6

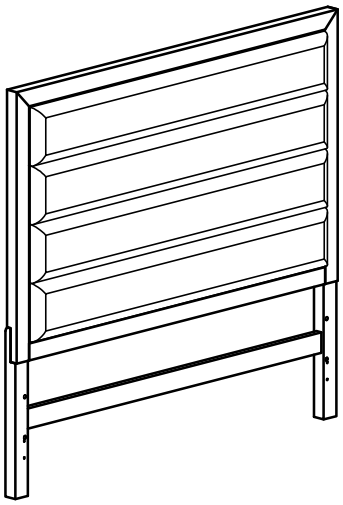

I M P O R T A N T N O T E S :

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including staples and packing straps before you start to assemble .
- Do not tighten all screws and bolts until completely assembled .
- Keep all hardware out of the reach of children .

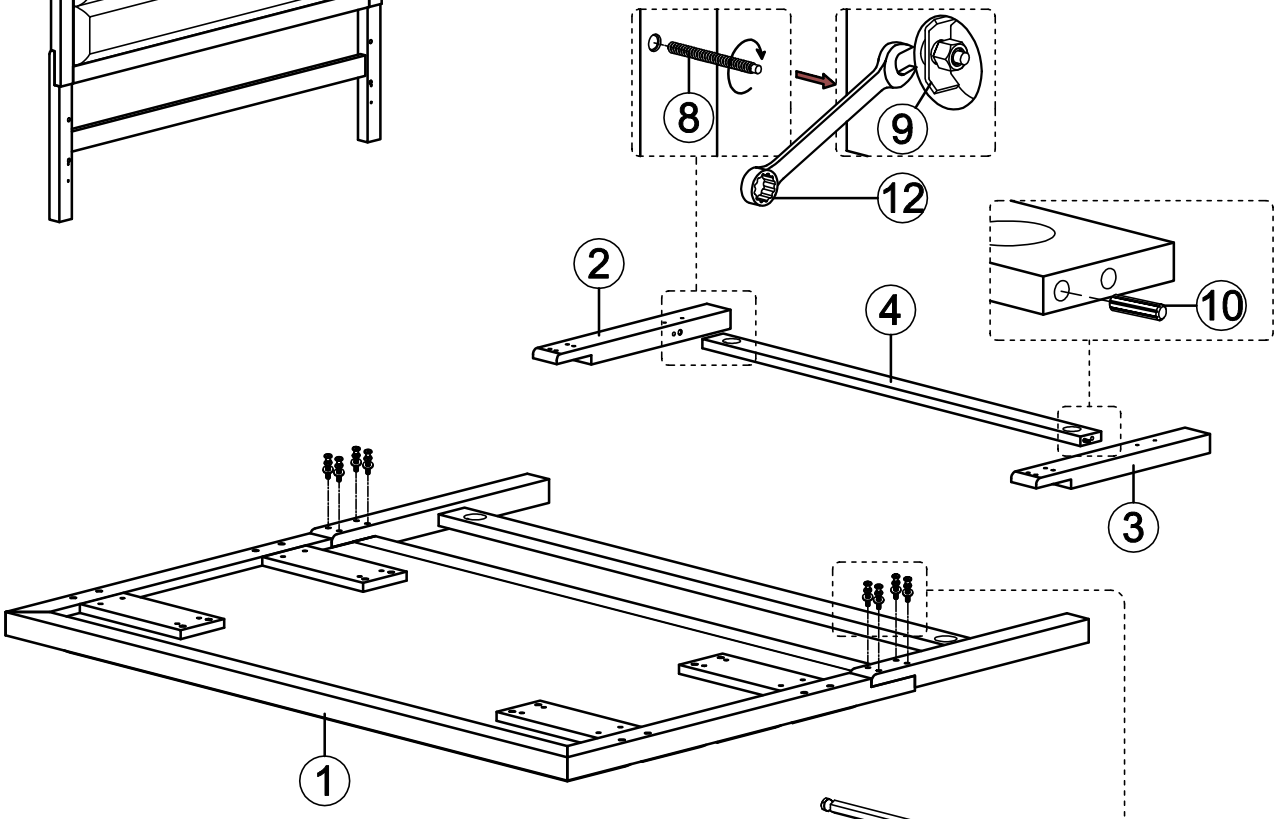

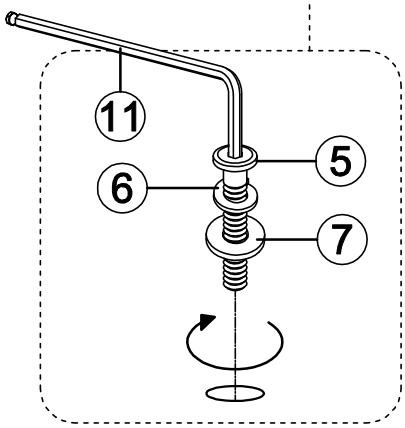

Item #	Description	Quantity
1.	Headboard	1
2.	Left leg	1
3.	Right leg	1
4.	Stretcher	1
5.	Bolts 5/16" x 45 mm	8
6.	Lock Washers	8
7.	Washers	8
8.	Thread Rod 5/16" x 88 mm	2
9.	Curved slotted washer 5/16"	2
10.	Wooden Dowel	2
11.	Allen Key	1
12.	Wrench	1

MADE IN VIETNAM