


ADA Shower Base

INSTALLATION INSTRUCTIONS

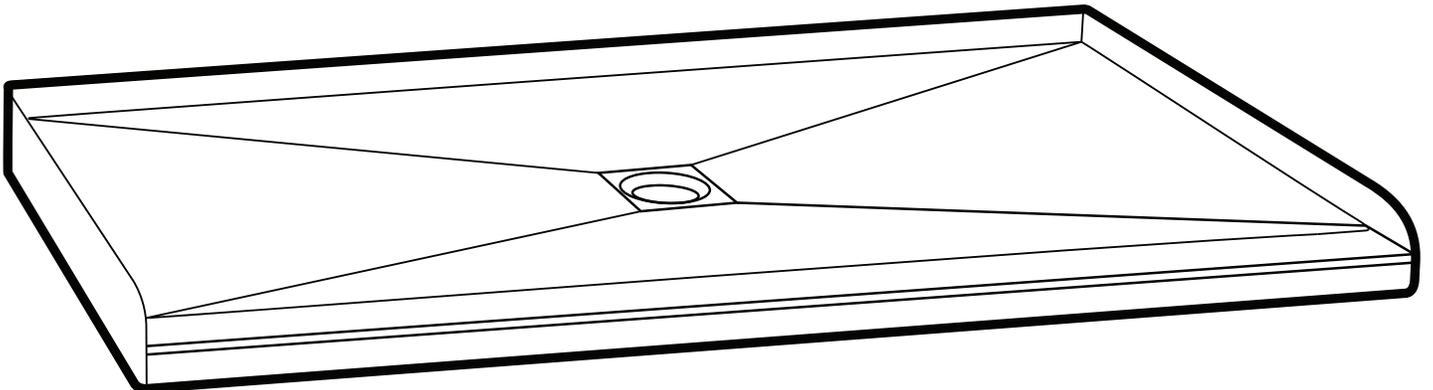



PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- All dimensions are nominal! Be sure to measure your shower base prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.


QUESTIONS OR CONCERNS?

Please contact us:

1-434-623-4766


info@swissmadison.com

INCLUDED PARTS:

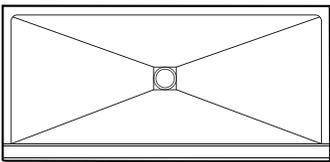

Shower Base


SUGGESTED TOOLS:

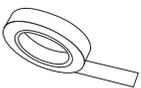

Adhesive
Tape



Pencil

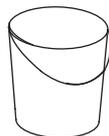


Bucket



Tape
Measure




Gloves

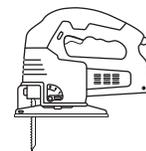

Jigsaw



Trowel

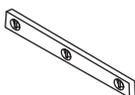


Level



Mortar
Compound




Screwdriver

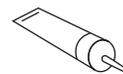

Sealant
(1 tube)



Drill

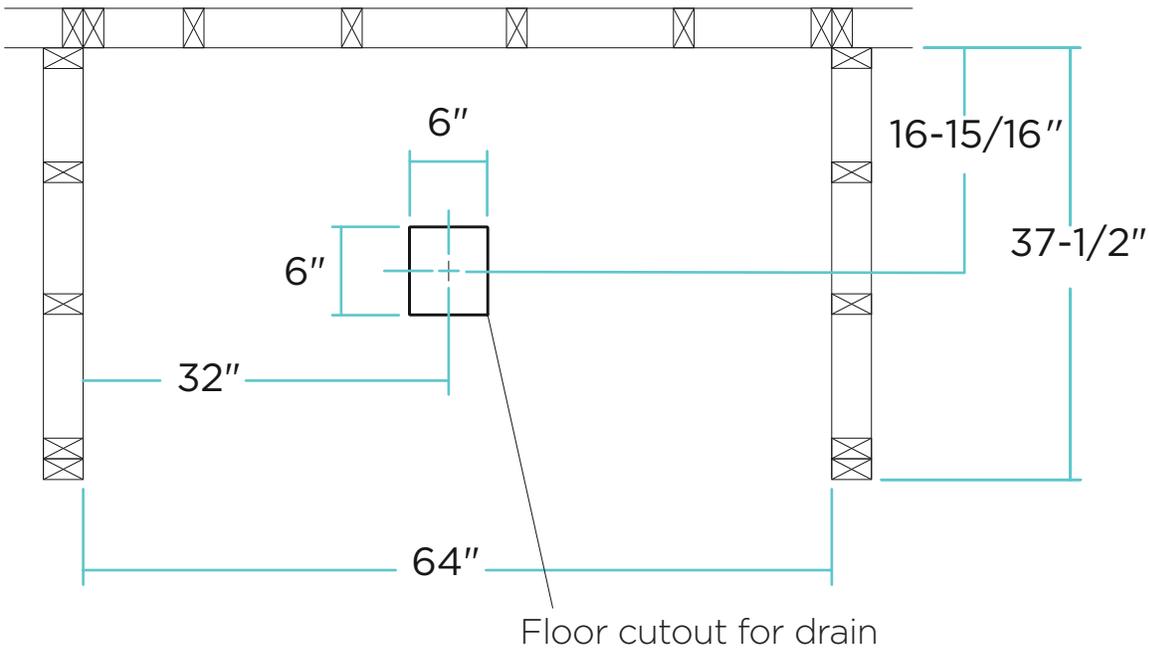
INSTALLATION:**1** **64" x 36" ADA Rectangular Base**
Fits 64" rough opening

⊠ = Stud Location
Subject to manufacturing tolerance of [+] or [-] 1/8"

WARNING

The nailing flange of the base should be attached directly to the bare studs with backer board attached to the studs above the nailing flange. Wall materials are installed on the backer board extending down in front of the nailing flange and resting on the base. Failure to install your base in this configuration may cause problems with installation of the walls or other wall covering materials.

This shower base is in compliance with the ICC A117.1-2017 Standard for Accessible and Usable Buildings. The shower base must be installed according to these instructions to be in compliance. There are other requirements in addition to the shower base design and installation instructions for a compliant shower system. It is the installer's responsibly to understand and conform to these requirements.

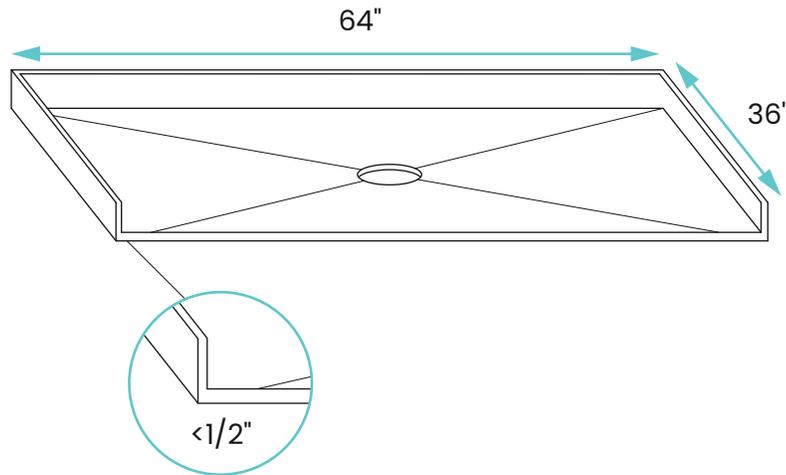
**2**

Set the shower base into the prepared alcove. Use a level to ensure that the base is level for proper drainage. If sub-floor is not level, use wooden shims where necessary.

Optional: A floor leveling compound (smooth mortar) may be used to level base instead of wooden shims.


2a. If using wooden shims, remove shower base from alcove, and apply construction adhesive to all shower base feet. Place the tray into the alcove and level by placing the feet (with construction adhesive) on the wooden shims.

2b. If using mortar, press the shower base into place while the mortar is still wet. Be sure to apply weight (full water buckets work well) to the tray to ensure proper adhesion. Allow mortar to fully cure before proceeding further.

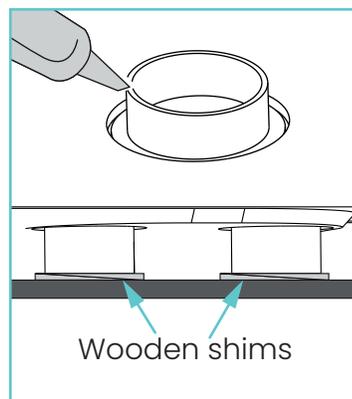


- 3** Screw shower base flange to studs using 1/8" drill bit and flat head screws.

Tip: Apply a small dab of silicone to the screws when installing to avoid any potential squeaking with contraction of the studs. Shimming between the studs and the shower base tile flange may be required. Do not over tighten screws to prevent damaging the base.

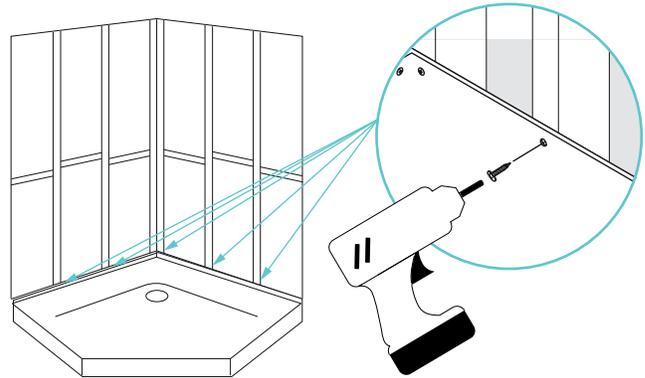


- 4** Proceed to the installation of any framing and shower system rough-in. If using drywall for shower walls, be sure to waterproof the surface. If tiling the walls, use a waterproof adhesive for installation.

Note: Refer to the drawing below for proper installation order.

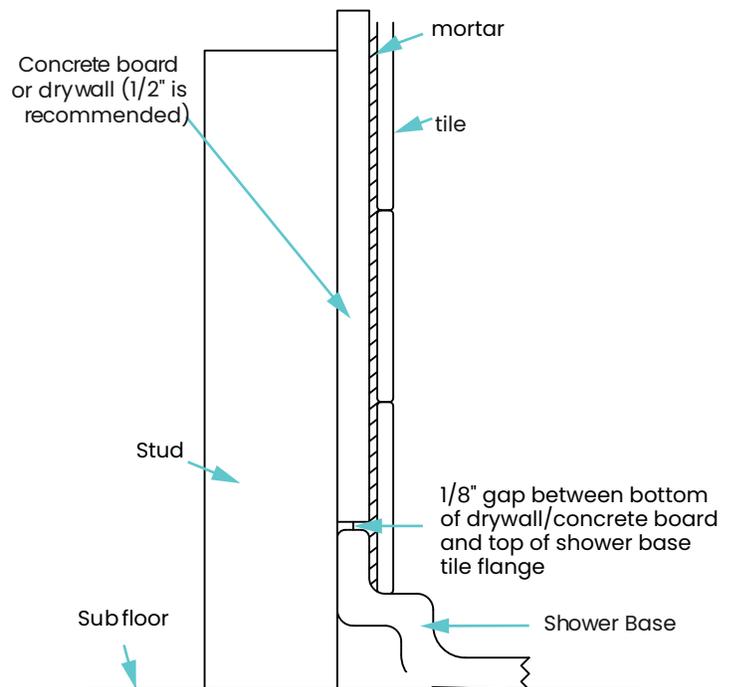


- 5** Finished flooring must be installed so there is no more than a 1/2" rise into the shower threshold to meet ADA compliance.

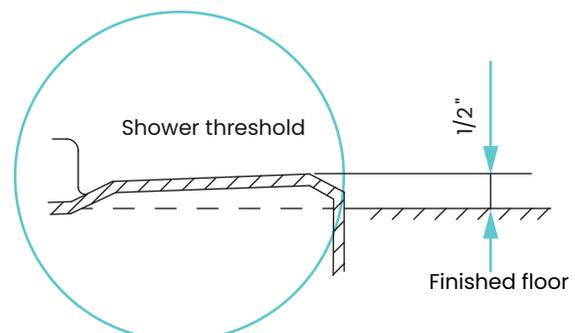


6

- To secure the drain to the base, apply a silicone sealant around the perimeter of the rubber gasket as well.
- After all checks and adjustments, apply straight lines of silicone sealant along the leveled floor.

NOTE: If you are finishing a tiled wall on the sides of the shower base, it is necessary to leave that side free from the silicone sealant and leave 3mm of space between the shower tray and wall to fit the tiles. The shower base should not be used to directly support the finished wall. See below diagram for proper installation space of tiled wall.

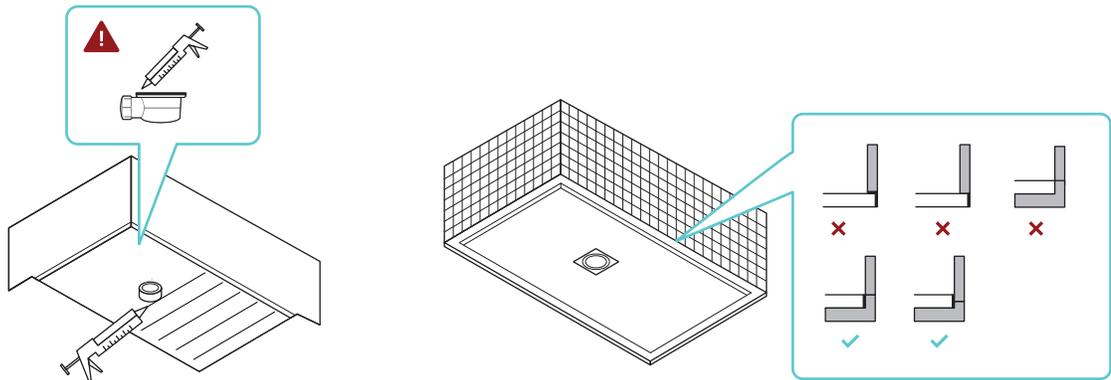


- Prepare the shower tray with masking tape before sealing and fill the joint between the shower tray and the walls with silicone. Let it dry for 24 hours.
- Slot the drop pipe only into the bottle trap and screw the central screw, place the steel cover into the square recess in the center of the shower tray.

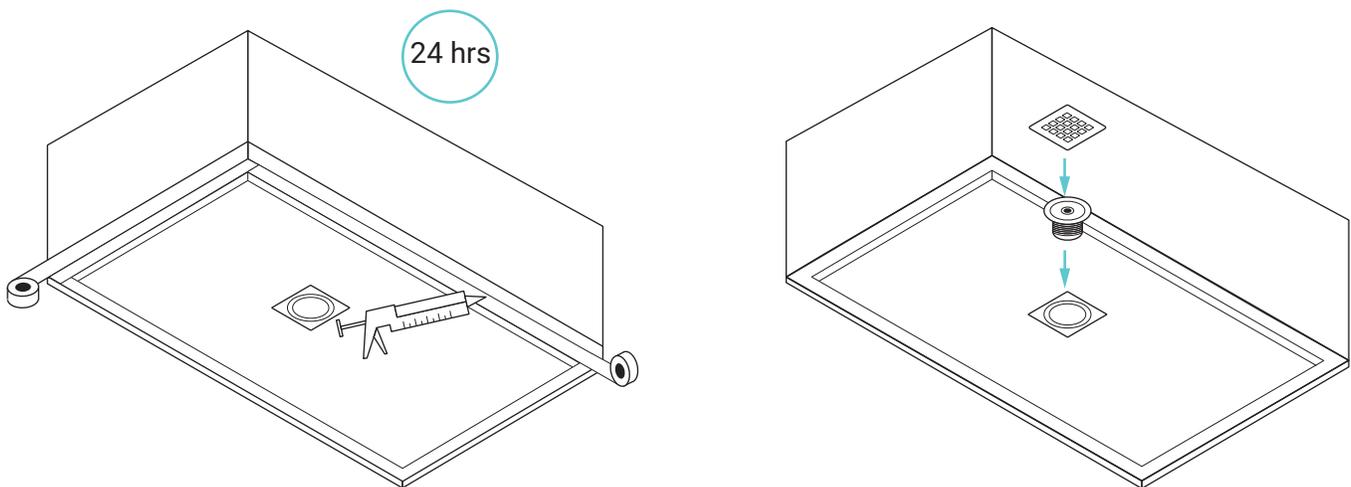


7 Routine Maintenance

- You may use soap and water with a soft cloth or cleaning cloth. Do NOT use a scouring pad or sponge to avoid scratching. Daily cleaning is recommended.

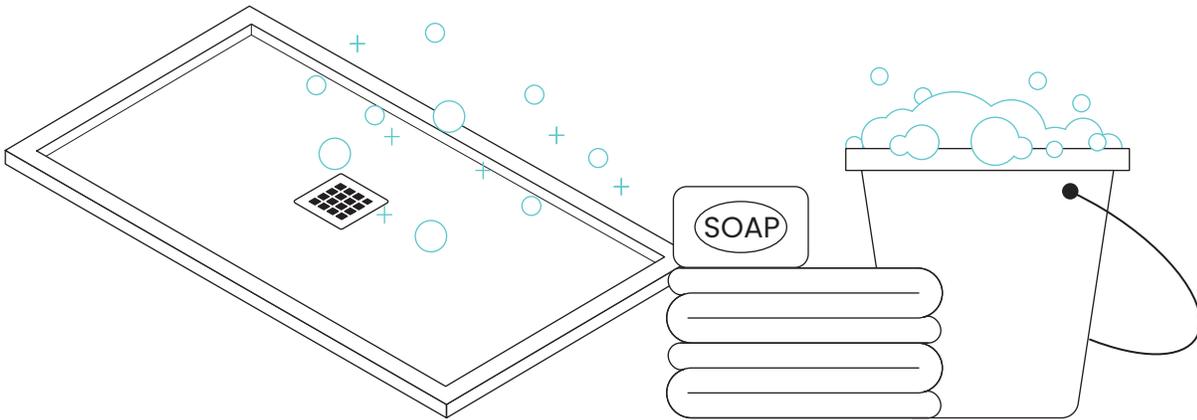

- For a deeper clean, you may use a commercial cleaning product, but it is important to rinse thorough and ensure the pan dries after cleaning to avoid prolonged stains.

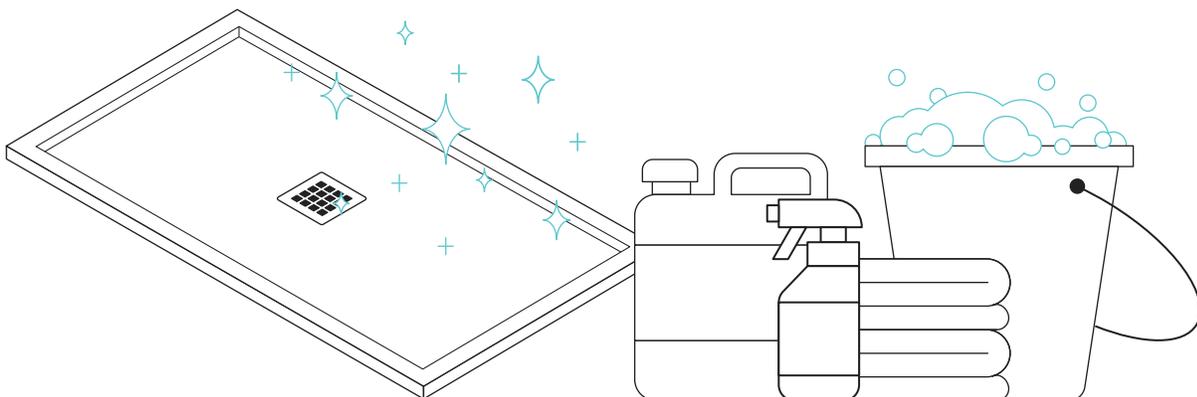

ONE YEAR LIMITED WARRANTY

Swiss Madison® products are made with quality materials and excellent craftsmanship to provide our customers with beautiful, durable, long-lasting products. Should there be any defects in materials or craftsmanship under regular use that are discovered within the first year of installation, Swiss Madison® will provide replacement parts at no charge, or at its discretion, replace any product or part of the product that is deemed defective, under normal installation, use, service or maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required in the instance of a claim.

Swiss Madison® recommends all installations of Swiss Madison® products to be conducted by a licensed, professional plumber or contractor. Swiss Madison® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to utilize a licensed professional for installation. Swiss Madison® is not responsible for any installation or removal costs.

THIS ONE YEAR LIMITED WARRANTY WILL BE VOIDED IF:

- The installation recommendations were not followed by the installer
- The product has been moved from its initial place of installation
- The product has in any way been modified from its packaged state
- The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accidents, or other damages, etc.

Swiss Madison® makes no implication that its products comply with any local building or plumbing codes. It is the consumer's responsibility and obligation to determine local code compliance prior to and during installation. This warranty extends only to the original purchaser and first consumer.

Swiss Madison® is not responsible for any special, incidental or consequential damages associated with the installation, replacement, return or use of the original purchaser's product. This includes, but is not limited to: freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with 'professionals' or 'experts', investigations, audits, analyses, attorneys and any other professional/hired services).

The Swiss Madison® warranty is a comprehensive and explicit limit of liability. All items not disclosed within the warranty are not addressable within the responsibility of Swiss Madison®. Certain states have variances regarding implied warranties; in those situations, we remain fully compliant.

QUESTIONS OR CONCERNS?

Please contact us directly at 1-434-MADISON (623-4766)



WARNING:

Contents of your order may contain sharp and possibly other harmful pieces and may cause hazard to children and adults. Swiss Madison® is not responsible in any way for personal damages.