



CART/TROLLEYFOR "SNOW BANK" SNOW CONE MACHINE

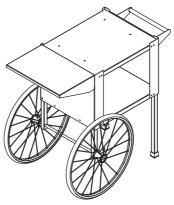

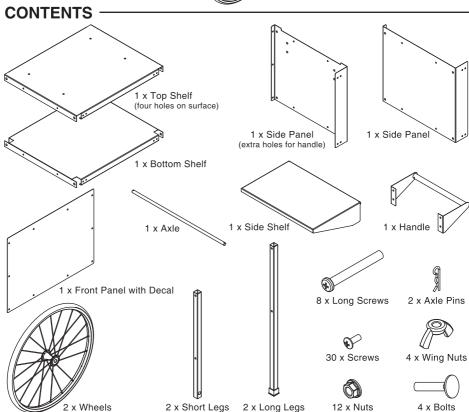




DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED


1 ATTACH SIDE PANELS

- Attach the side panels to the top shelf and bottom shelf with screws.
- Continue to secure the side panels with additional screws from the back.

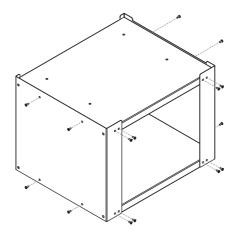

2 ATTACH FRONT PANEL

· Attach the front panel to the cart with screws.

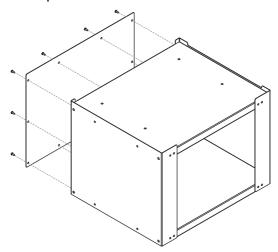




DO NOT TIGHTEN SCREWS UNTIL FULLY ASSEMBLED


3 ATTACH LEGS

- · Flip the cart upside down.
- Slide the long legs through the bottom shelf on the side panel with handle holes and align holes with side panel.
- Slide the short legs through the bottom shelf and align holes with side panel.
- Secure with long screws and nuts.

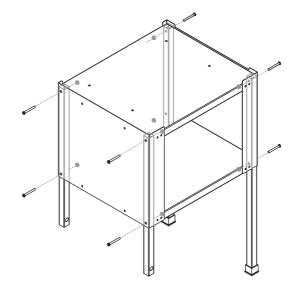

4 ATTACH WHEELS


- Slide the axle through the short legs.
- · Attach the wheels onto the axle.
- Secure with axle pins.

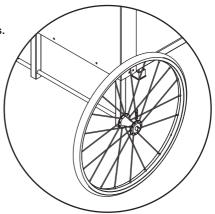



5 ATTACH SIDE SHELF AND HANDLE

- Attach the handle to the side panel and secure with screws and nuts.
- Slide the side shelf onto the opposite side of the cart.

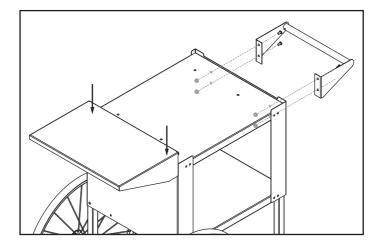

6 FINAL CHECK

- · Stand the pedestal upright on a level surface/floor.
- · Ensure wheels and long legs are touching the floor evenly.
- Firmly tighten all screws to ensure they are secure.

SECURE THE SNOW CONE MACHINE

- Place the snow cone machine on top of the cart.
- Open the snow cone machine and remove the collection tray.
- Locate the holes on the bottom of the machine and secure to the cart with bolts and wing nuts.

