a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

803-744 + B04

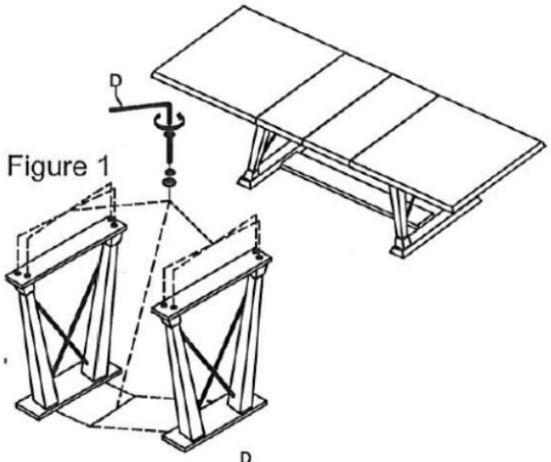


Figure 1

TOOLS REQUIRED:

Allen wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Place your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION**: Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

Note:

Unscrew all nuts, lock washers and screws, remove the pallets fromboth sides, keep all screws, nuts, and lock washers for installing the tabletop (Figure 1)

1. Attach the base to the Pedestal, using Bolts (A), Lock Washers(B) ,Flat Washers (C) ,tighten with Wrench (D). (See Figure 2)

2. Use the Bolts , Lock Washers , Washers removed in (Figure 1) to fit in as shown in (Figure 3 and Figure 4)

3. Attach Support bar with Table top, using Bolts (A), Flat Washers (B), Lock Washers (C) , tighten with Wrench (D). (See Figure 5).

4. Unlock the table locks and slide open the table halves. Place the Leaf to the Top. Lock the table locks, which are located on the underside of the table secure the table halves in place. (See Figure 6)

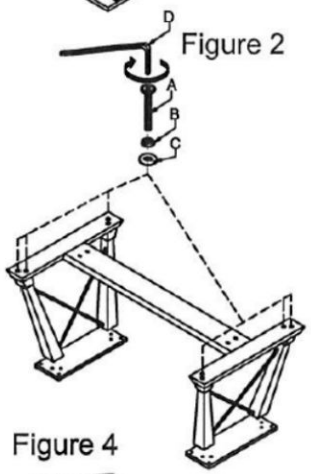


Figure 2

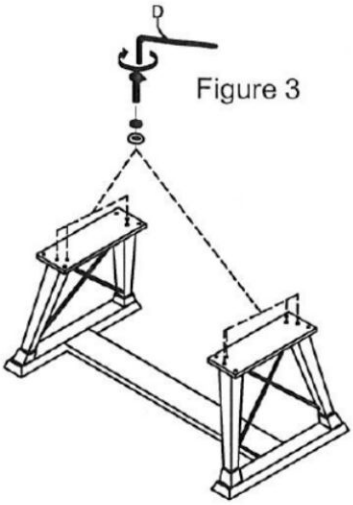


Figure 3

Figure 4

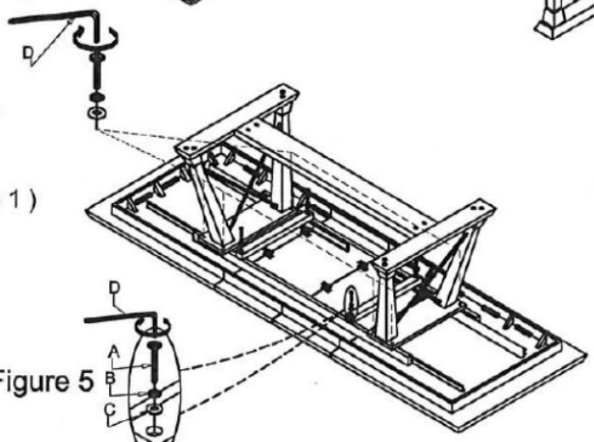


Figure 5

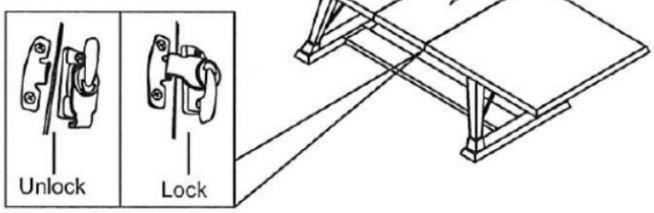


Figure 6

No.	Hardware List		Q'ty
A		Bolt Ø5/16xL2-1/2(Ø14)	12
B		Lock Washer Ø5/16xØ14x1mm	12
C		Flat WasherØ5/16xØ18x1mm	12
D		Allen Wrench 4mm	1

Thank you for purchasing furniture from american drew!