


Item #: W52IV3DCRN

Assembly Instruction

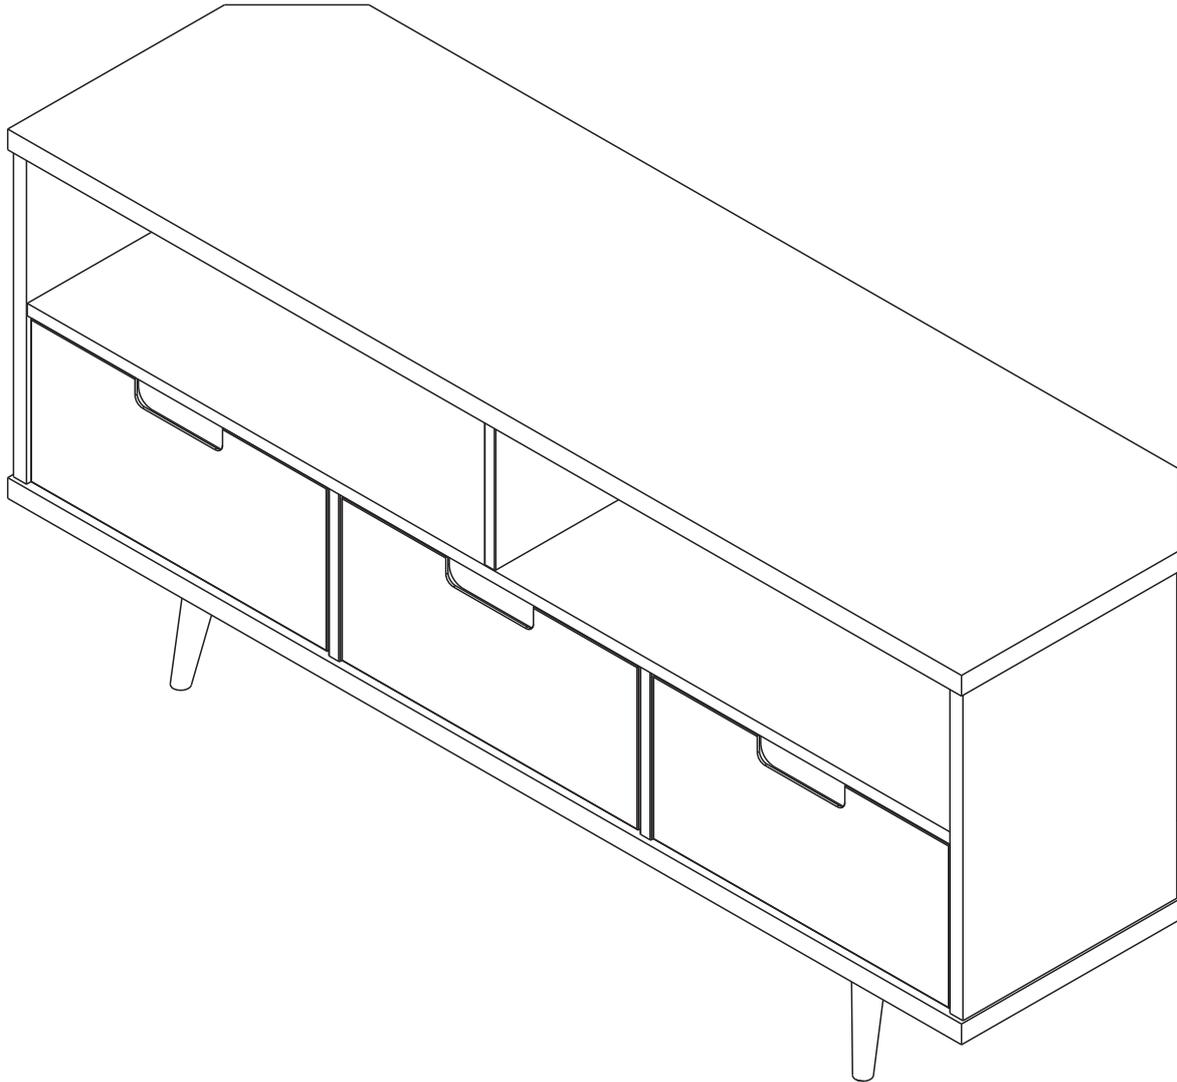


Please visit our website for the most current instructions, assembly tips report damage, or request parts. www.walkeredison.com


Revised 05/2021

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product .

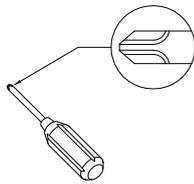

- VI. Power tools should not be used to assemble this product .

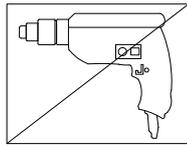






Parts List

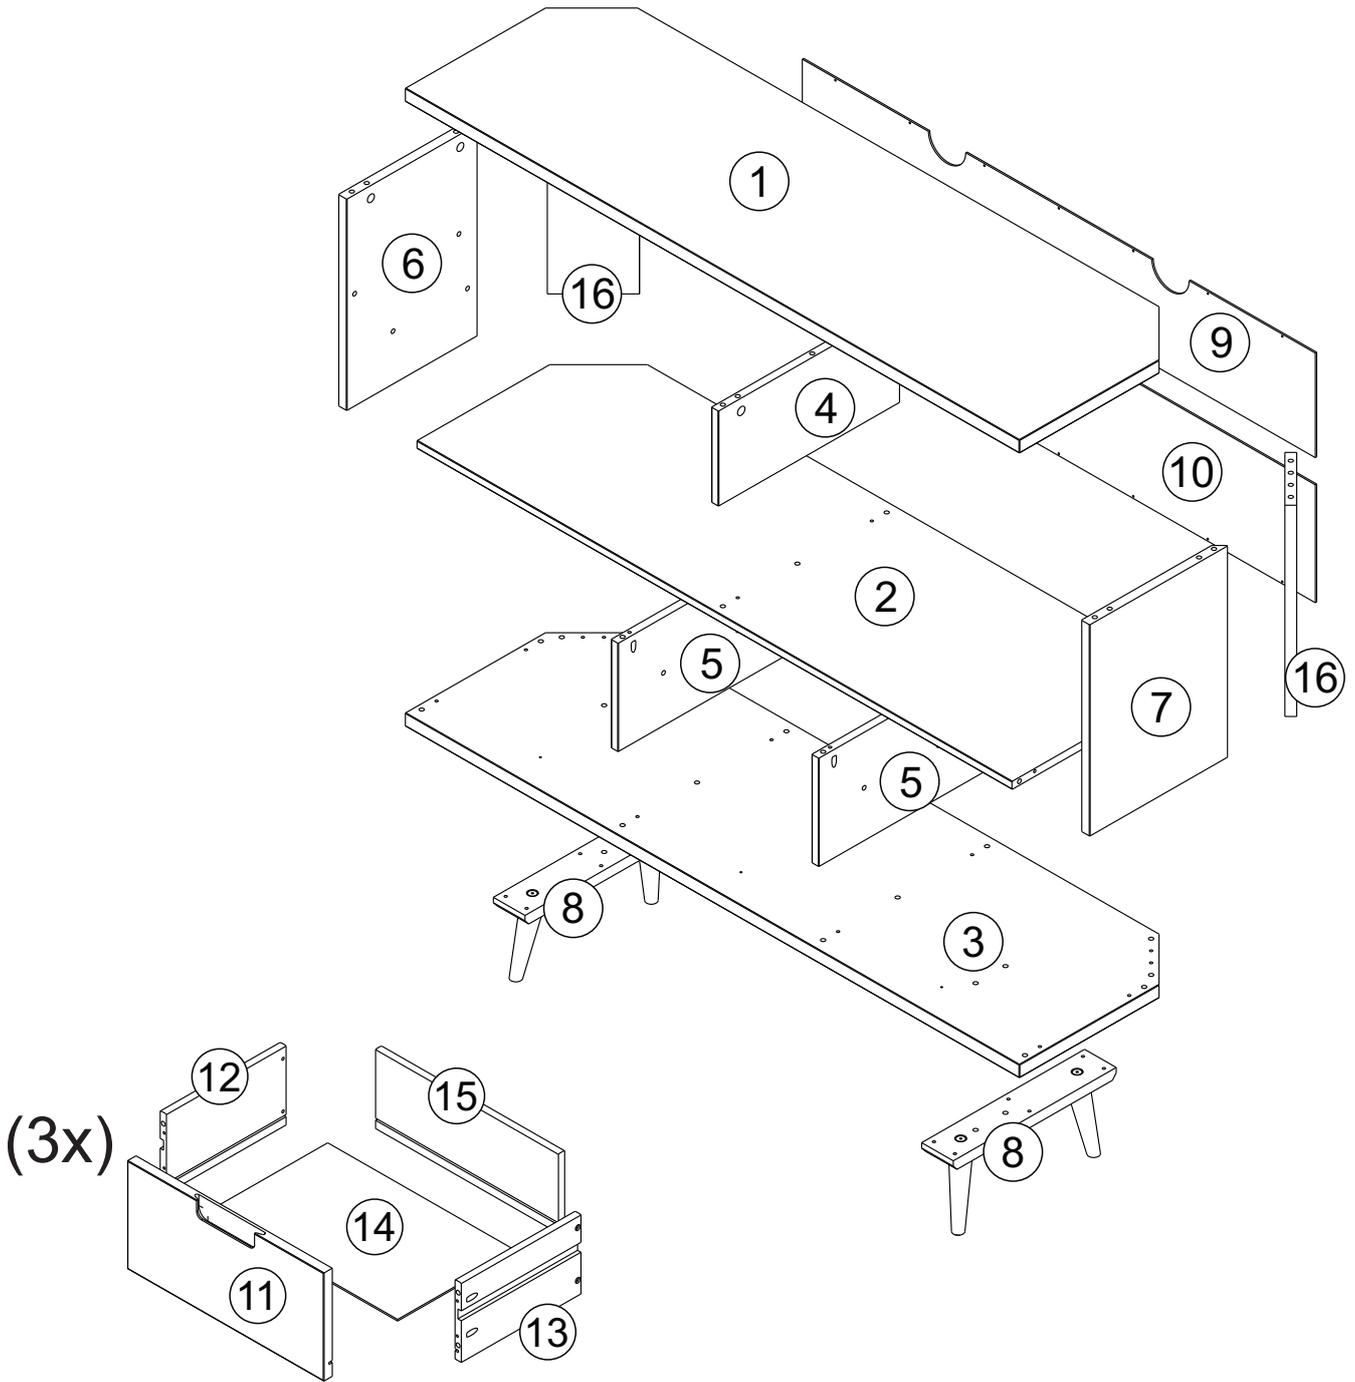


| Part# | Description | Qty |
|-------|---------------------|--------|
| 1 | Top panel | 01 pcs |
| 2 | Shelf | 01 pcs |
| 3 | Base | 01 pcs |
| 4 | Center upper panel | 01 pcs |
| 5 | Center bottom panel | 02 pcs |
| 6 | Left side panel | 01 pcs |
| 7 | Right side panel | 01 pcs |
| 8 | Feet | 02 pcs |

| Part# | Description | Qty |
|-------|-------------------|--------|
| 9 | Upper back panel | 01 pcs |
| 10 | Back panel | 01 pcs |
| 11 | Drawer front | 03 pcs |
| 12 | Drawer left side | 03 pcs |
| 13 | Drawer right side | 03 pcs |
| 14 | Drawer bottom | 03 pcs |
| 15 | Drawer back | 03 pcs |
| 16 | Back side panel | 02 pcs |

Hardware List

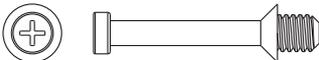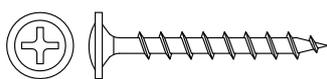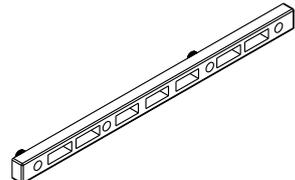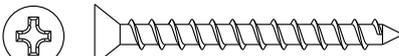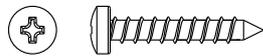
| | | | | |
|---|---|-------------|----------------|--------|
| A |  | Ø 5,5x28mm | Cam Bolt | 10 pcs |
| B |  | Ø 14x14mm | Cam Lock | 10 pcs |
| C |  | Ø 3,5x30 mm | Screw | 46 pcs |
| D |  | Ø 8,0x30 mm | Wood dowel | 54 pcs |
| E |  | Ø 3,5x16 mm | Screw | 28 pcs |
| F |  | | Plastic Slide | 06 pcs |
| G |  | Ø 4,0x40 mm | Screw | 14 pcs |
| H |  | | | 07 pcs |
| I |  | Ø 3,5x20 mm | Screw | 08 pcs |
| J |  | | Drawer Limiter | 03 pcs |

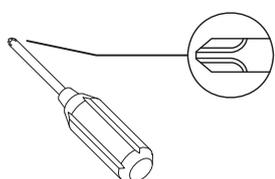


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1 Insert wooden dowel (D) into part (2), (4), (5), (6), (7), (8), (12), (13) and (16).




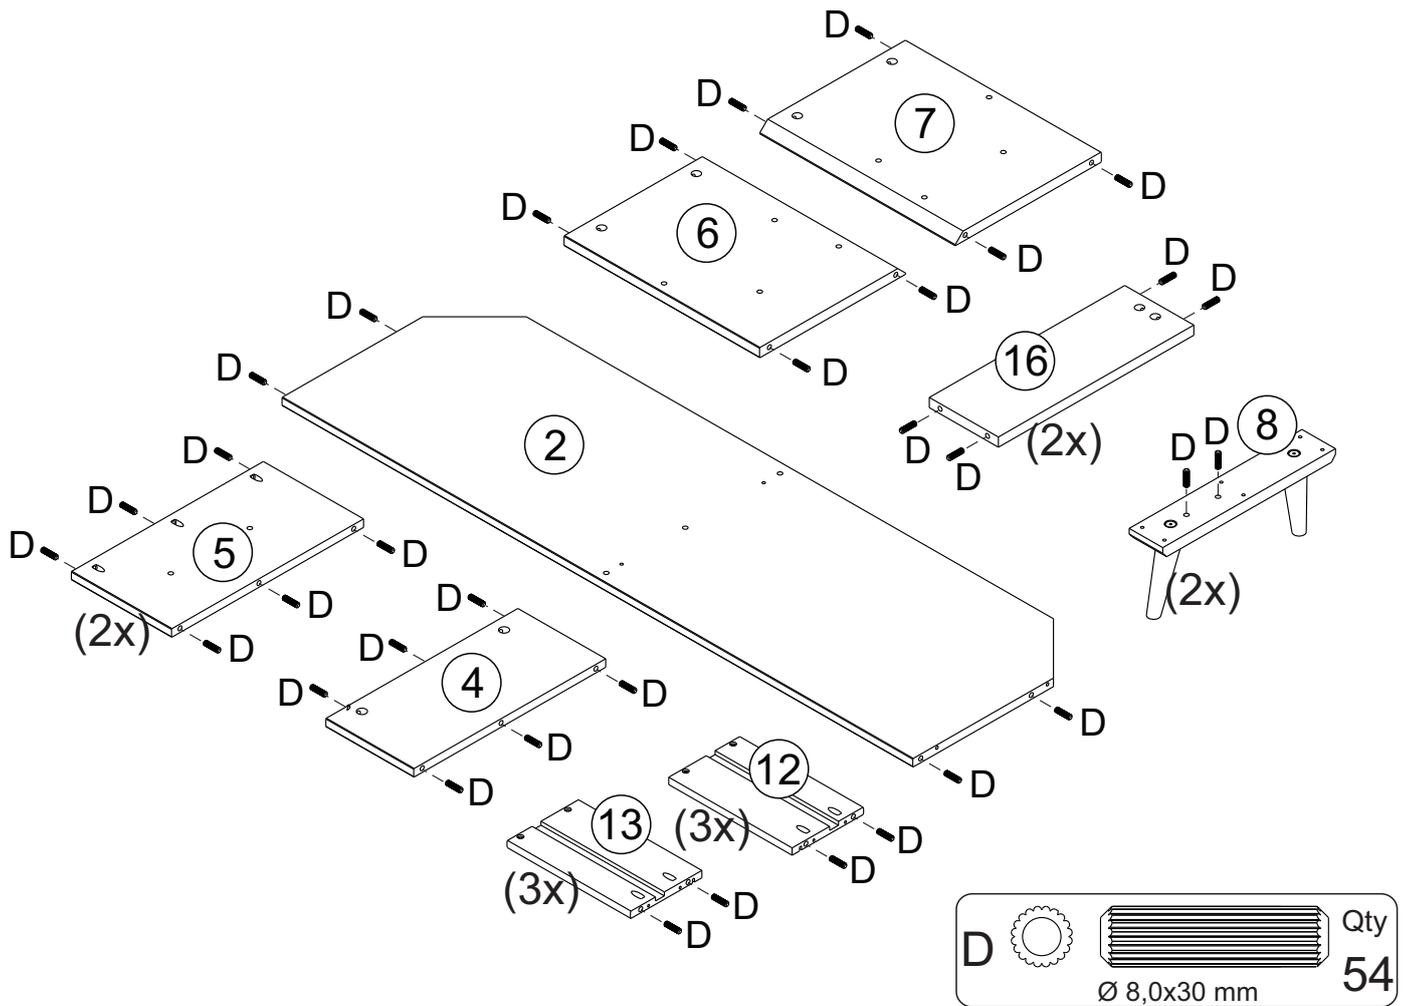


Step 2 Secure Slide (F) to part (6) and (7) with Screw (E).



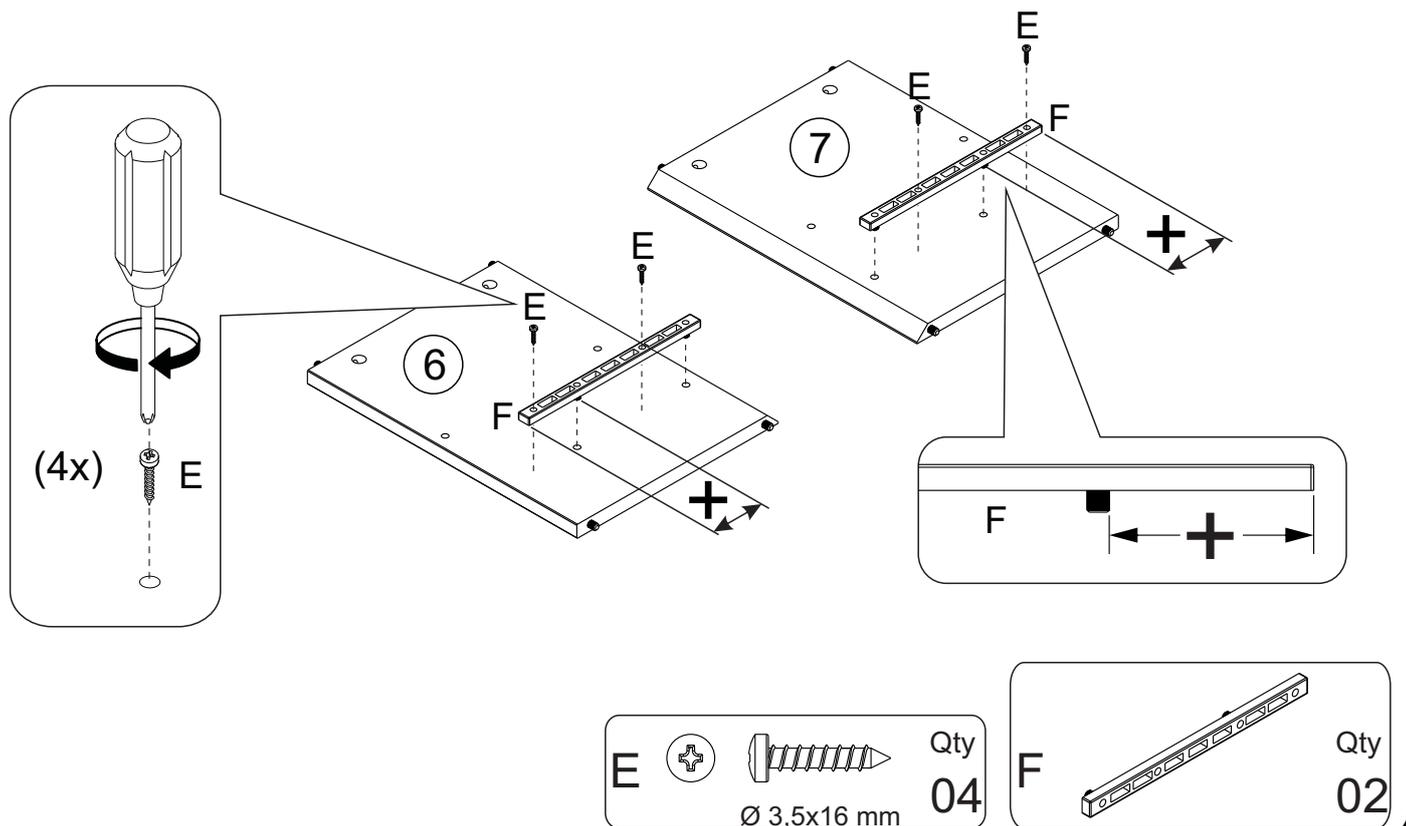


Step 3 Attach the Plastic Slide (F) into part (5) using Screw (I) and a Phillips head screwdriver. Complete this step twice.

2x

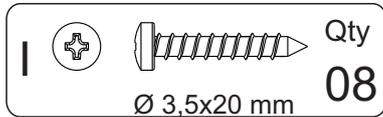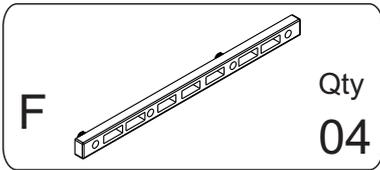
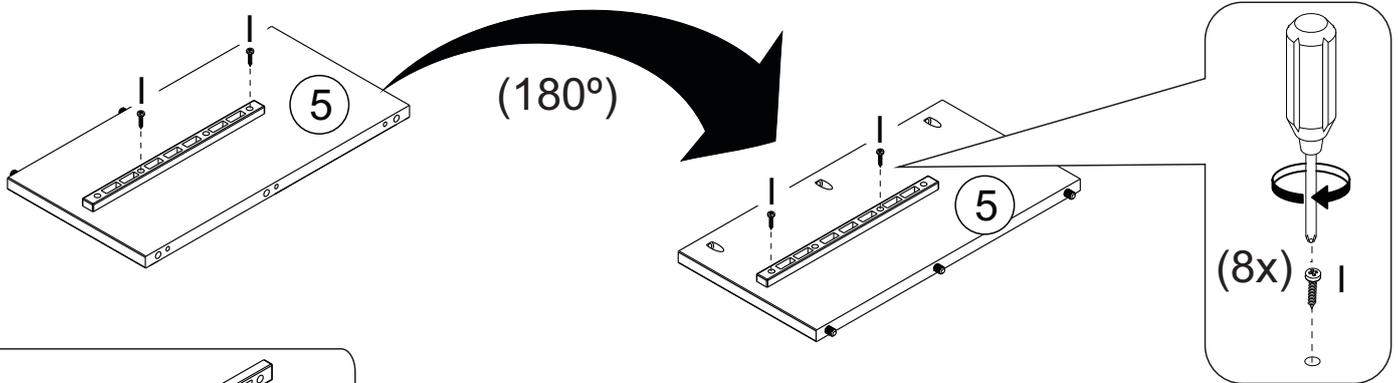
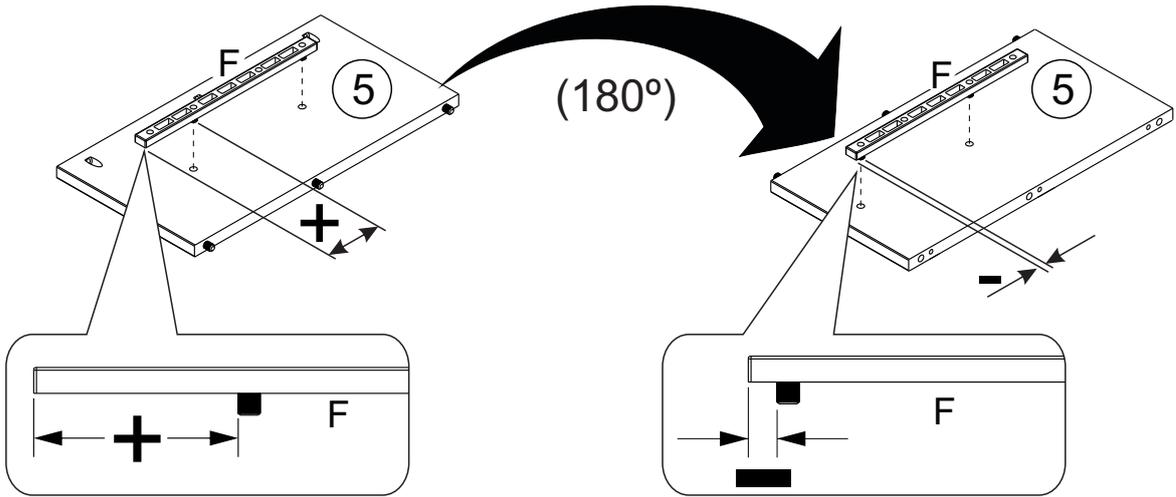


Step 4 Secure part (2) to part (4) with screw (G).

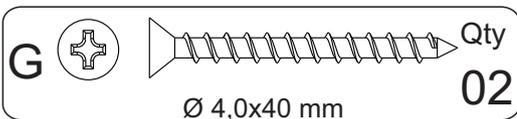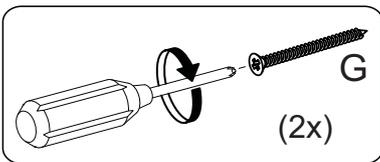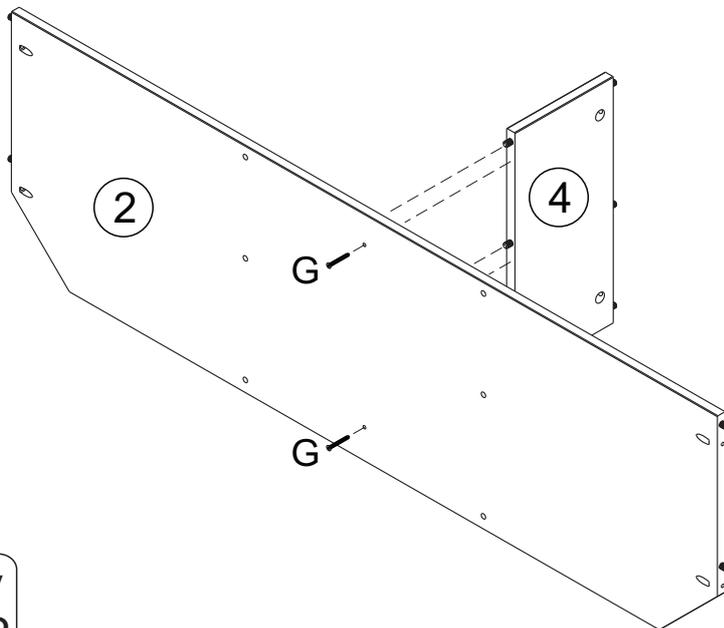




Step 5

Secure parts (5) to part (2) with screw (C).

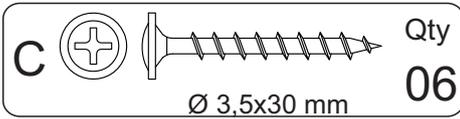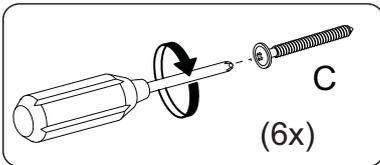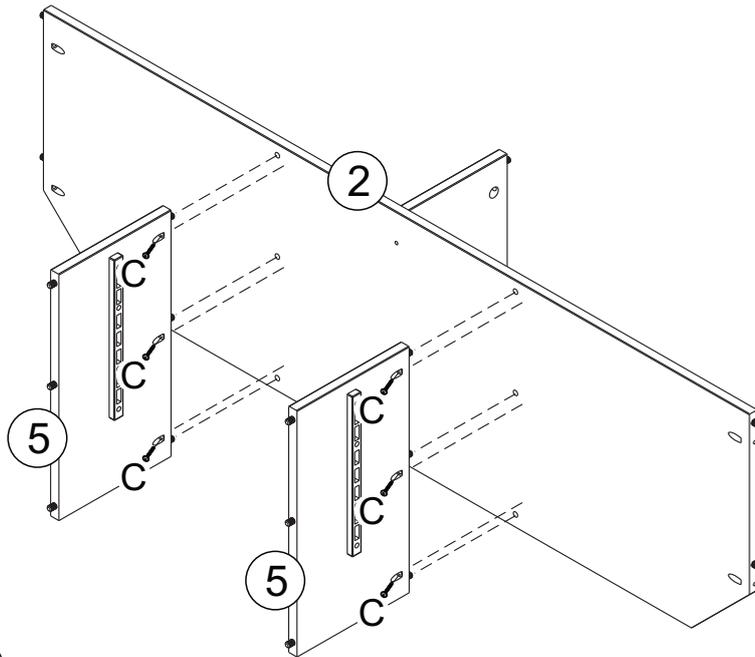


Step 6

Secure parts (6) and (7) to part (2) with screw (C).

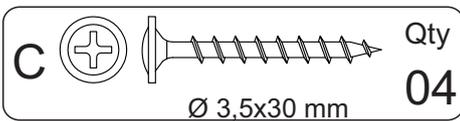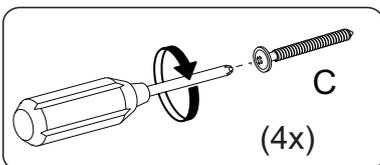
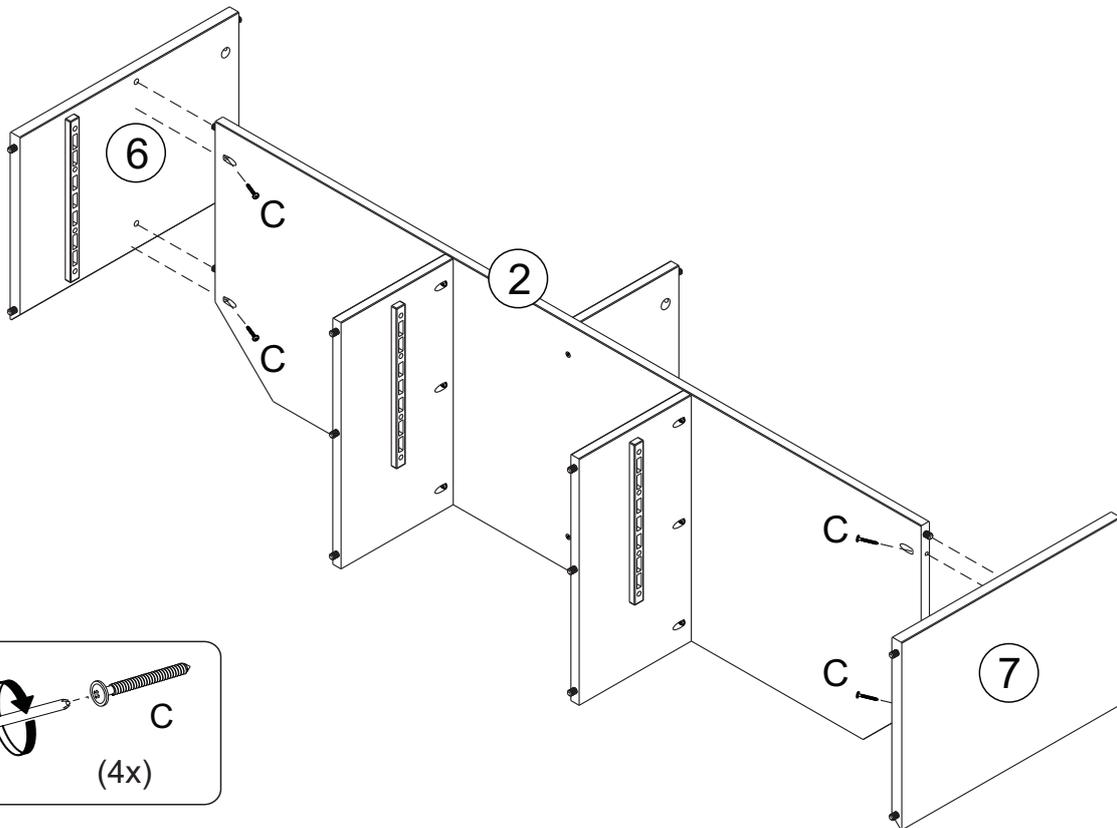


Step 7

Insert screw Cam Bolt (A) into top panel (1).

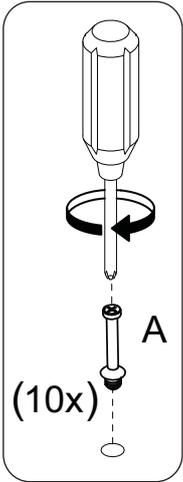


(10x)

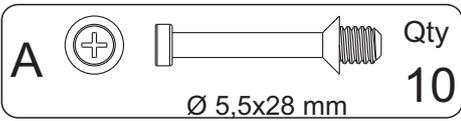
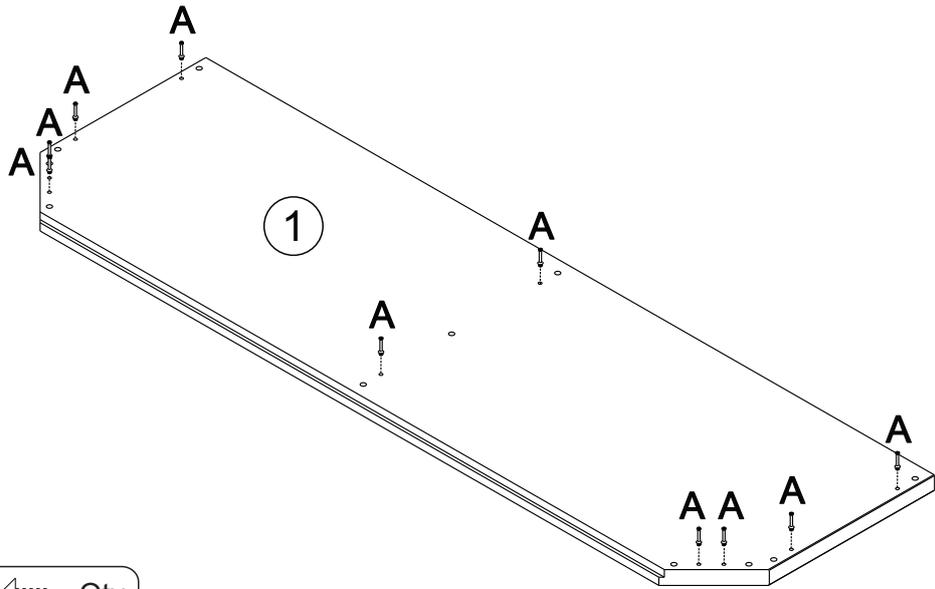


Step 8


Secure parts (8) to part (3) with screw (C). Insert stop (J) to part (3) with screw (E).

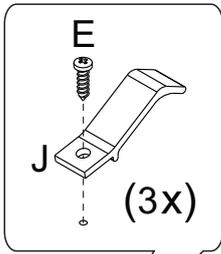




(3x)

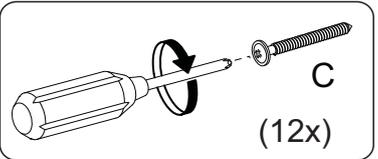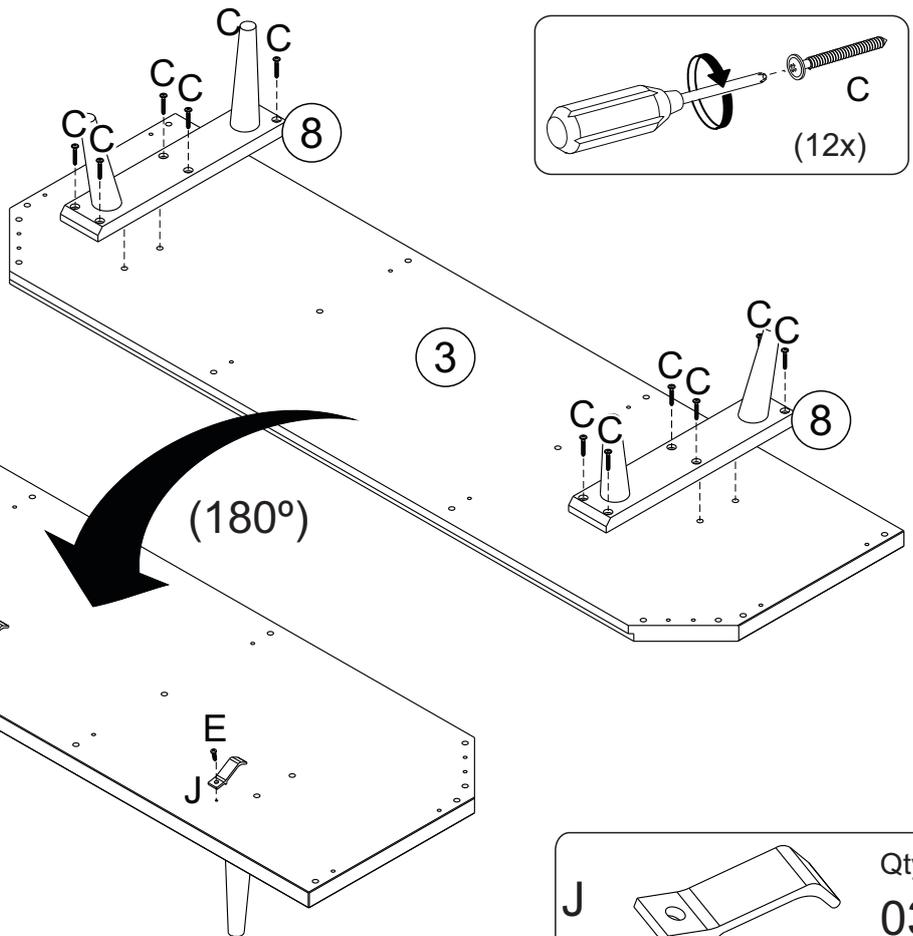

(12x)

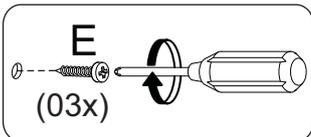


(03x)

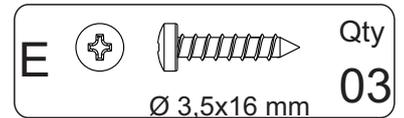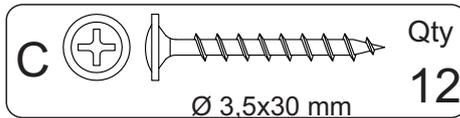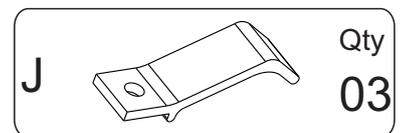





Step 9

Secure part (3) to parts (5), (6), (7) and (16).

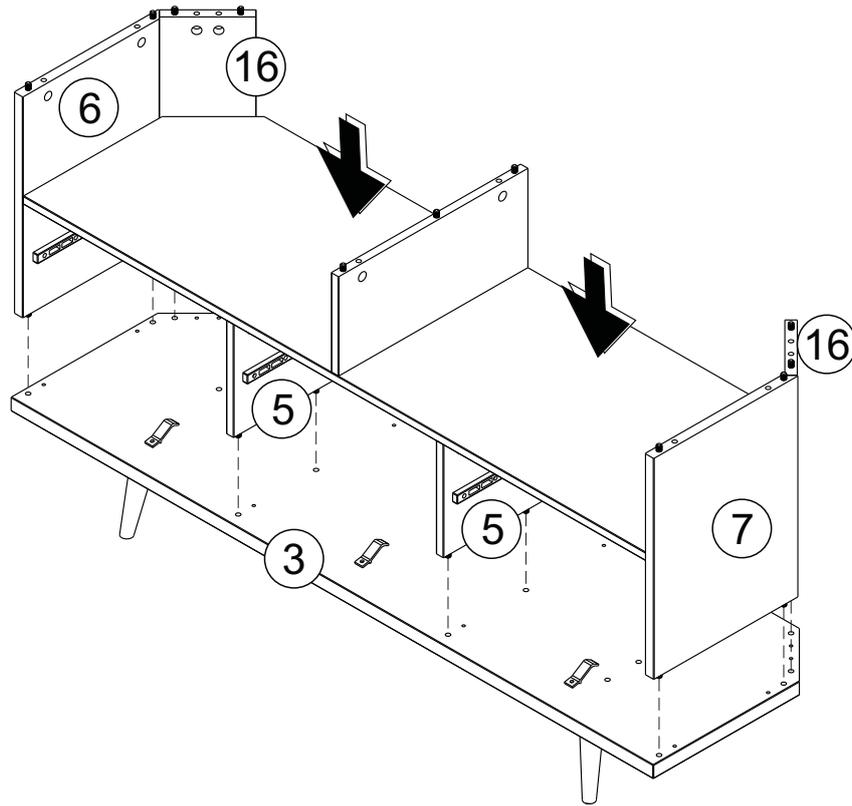




Step 10

Attach part (1) in the wood dowels of part (4), (6), (7) and (16) using cam bolt (B) and phillips screw driver (not included).

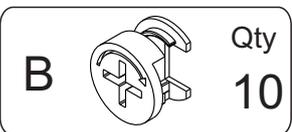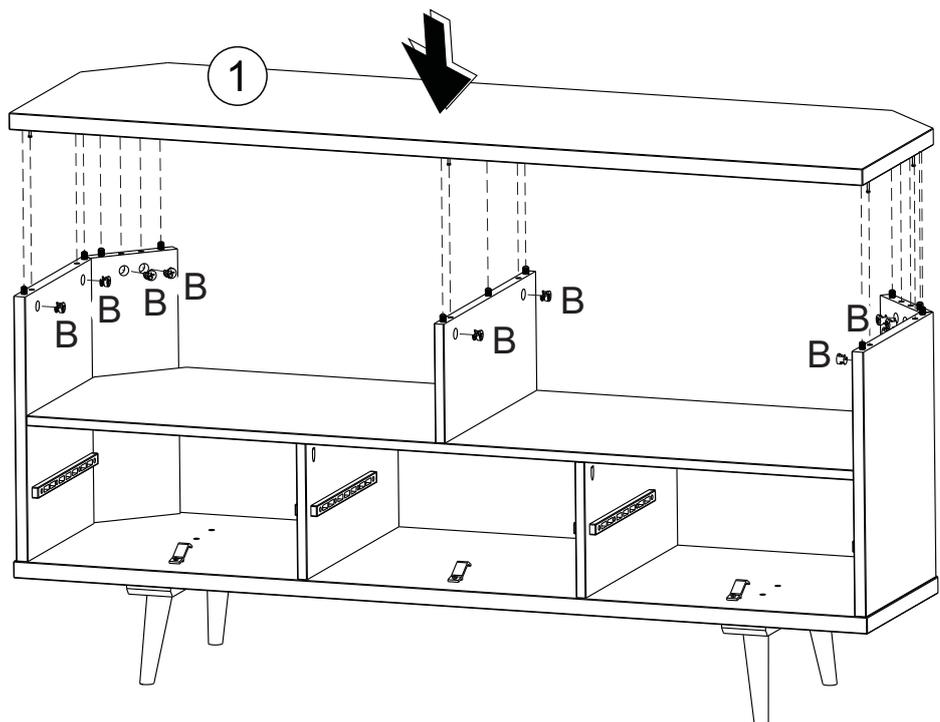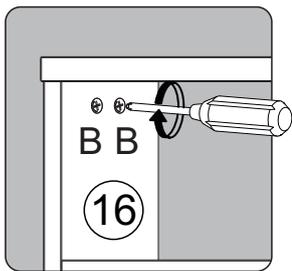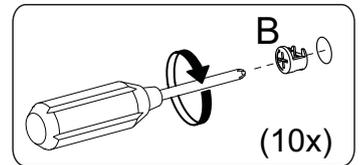





Step 11

Secure part (3) with screw (G).

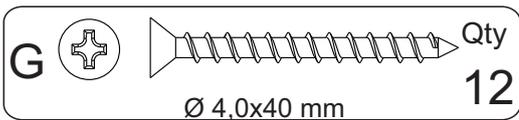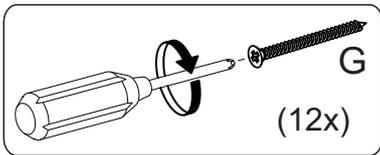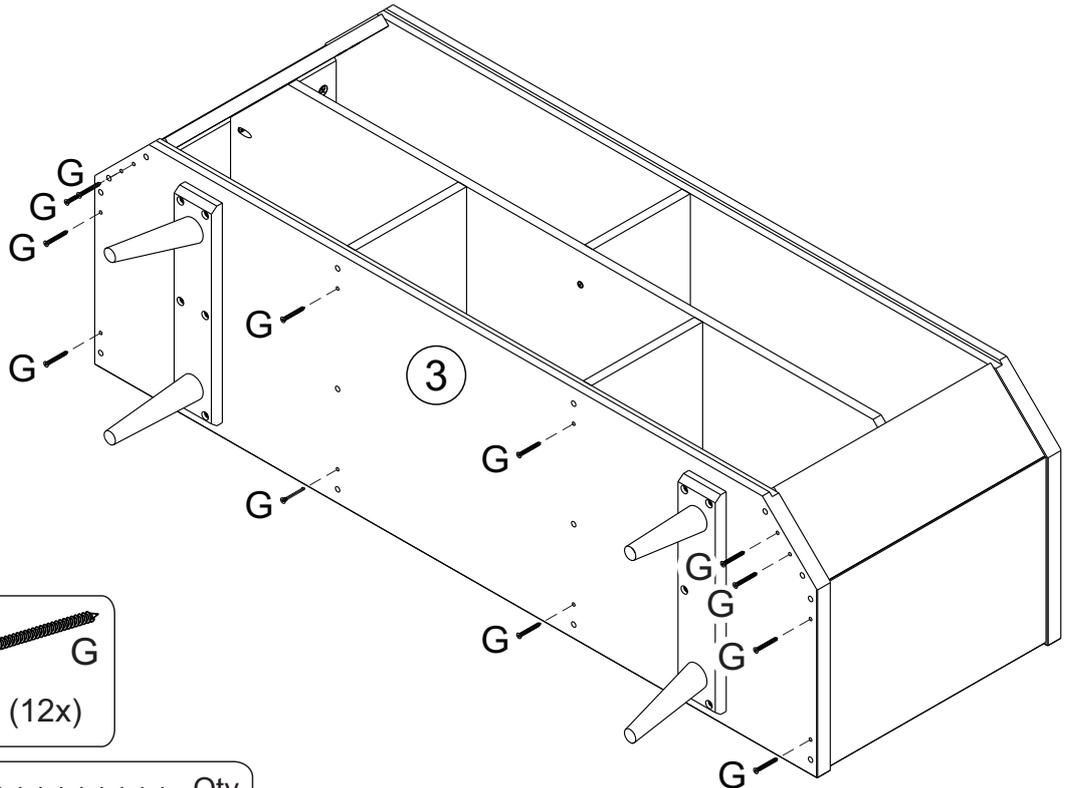


Step 12

Secure back panel (9) and (10) with screw (E) at some points as shown using the hardware (H).

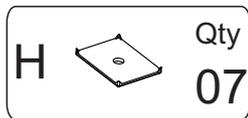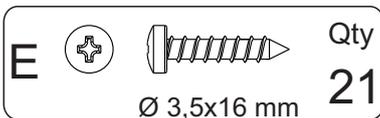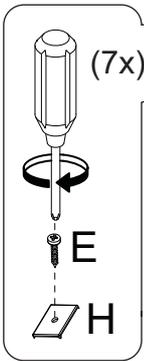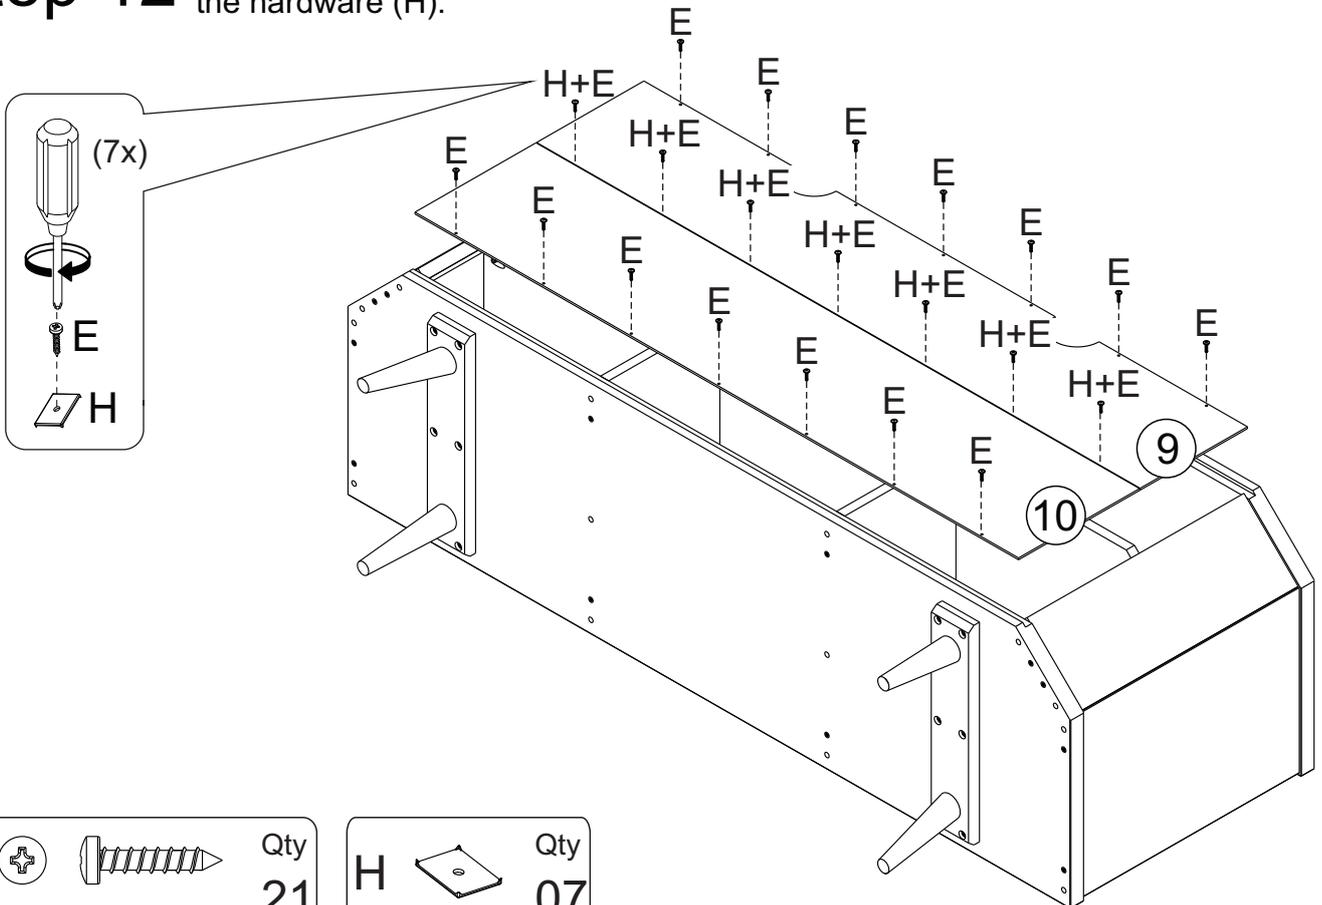


Step 13 Attach part (12) and (13) in the part (11) using screw (C).
Attach part (14) and (15) as shown using screw (C).

3x

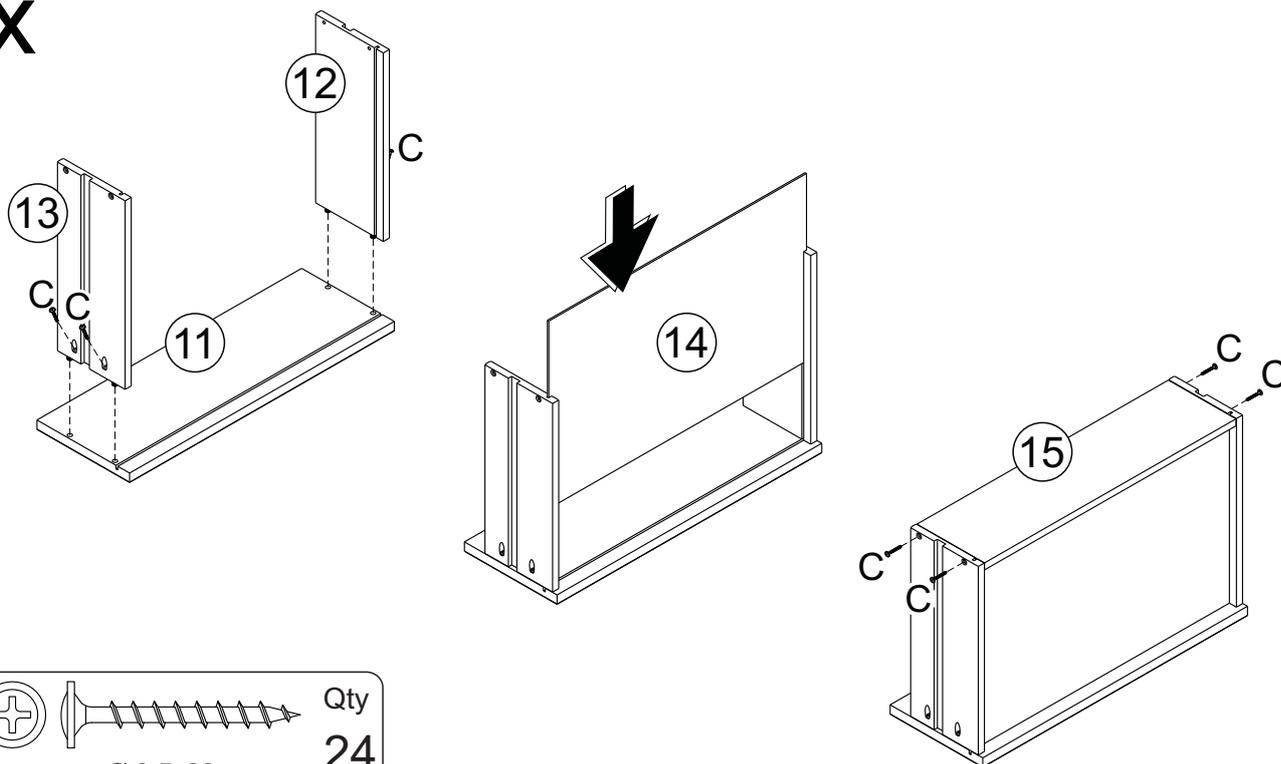

Step 14

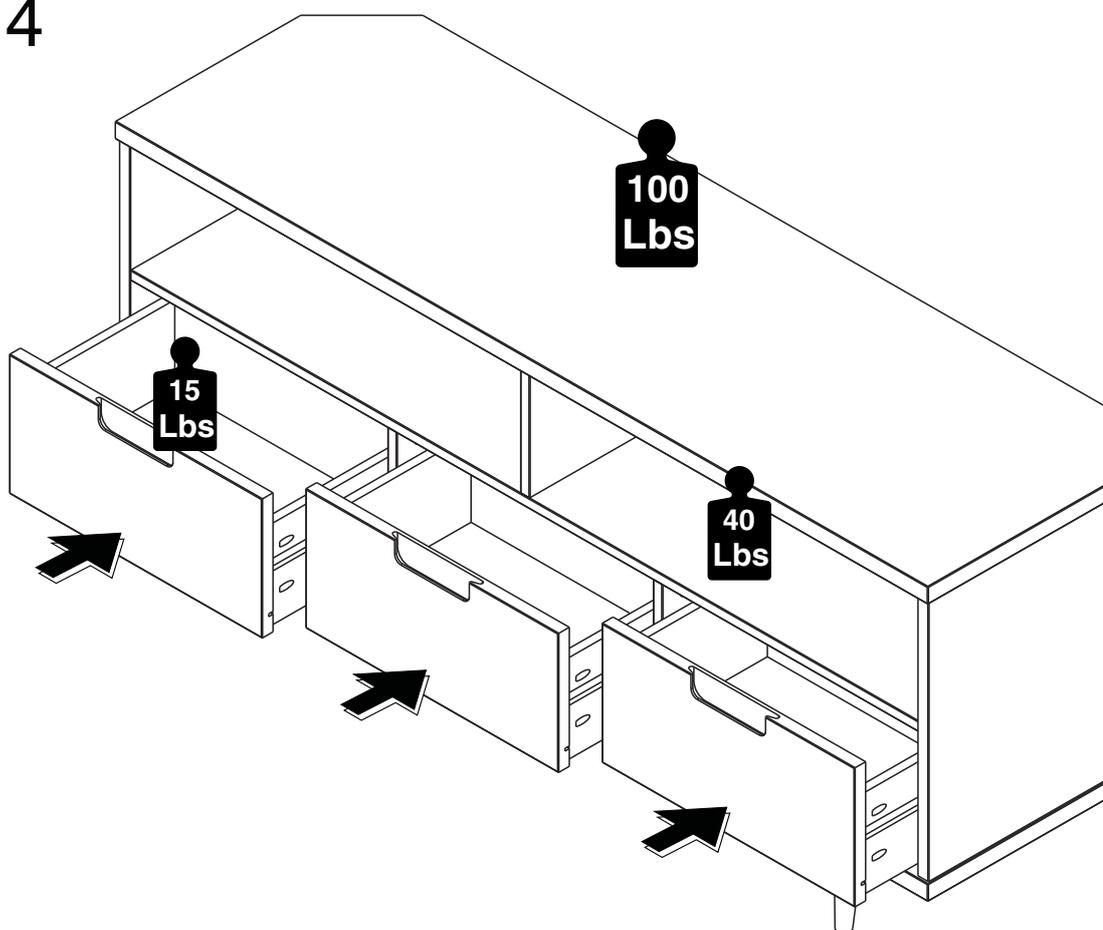

Assembly Complete!