american drew®

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

654-701/B01

TOOLS REQUIRED:

Allen wrench (supplied, part # E)
Spanner wrench (supplied, part # F)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Lay the Top of Pedestal on a clean and padded surface to prevent scratches and fasten to the Base with the Flat Washers (D), Lock Washers (C) and Bolt (A). Tighten with Allen wrench (E). (Figure 1)

2.Unlock the table locks and slide open the table halves. Remove the table leaf. (Figure 2)

3. Turn the Pedestal with Base upright. Place the top on the Pedestal. Align the holes of the mounting plate of the top with the hange bolts located on the top of Pedestal, using Flat Washer (D), Lock Washer (C), Nut (B) and tighten all bolt with Wrench (F). (Figure 3)

4. Place the Leaf to the Top. Lock the table locks, which are located on the underside of the table secure the table halves in place. (Figure 4)

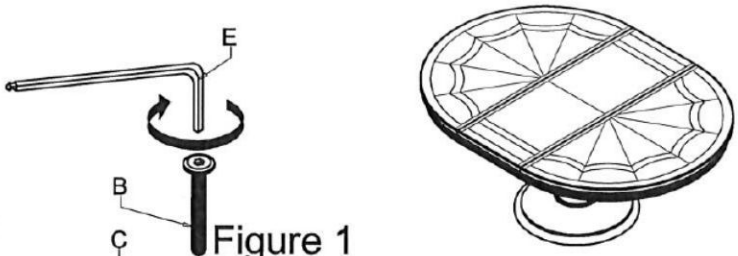
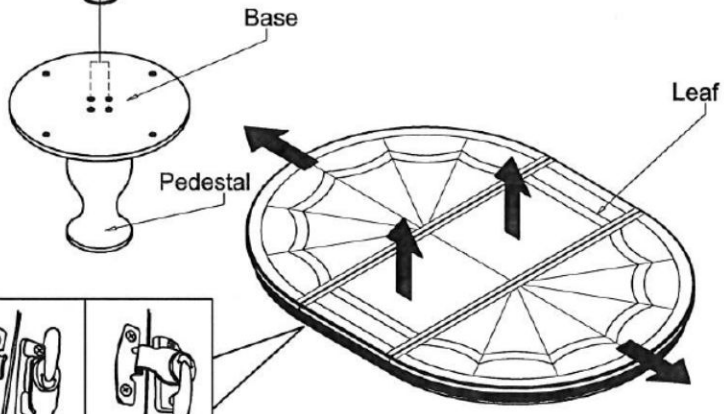


Figure 1



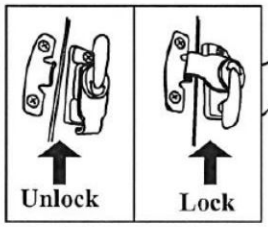


Figure 2

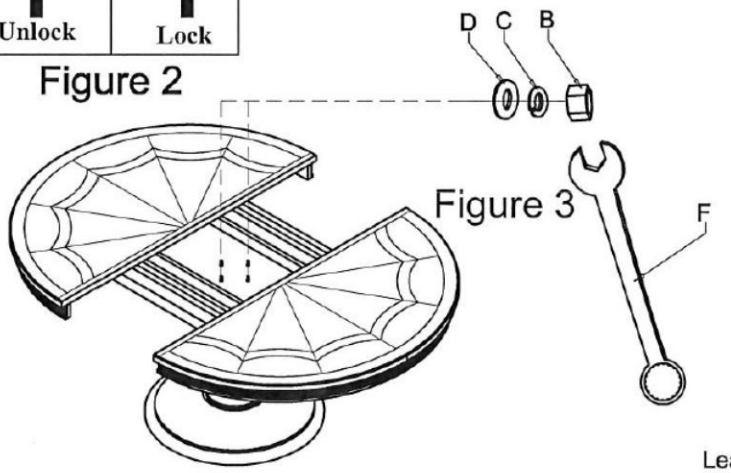


Figure 3

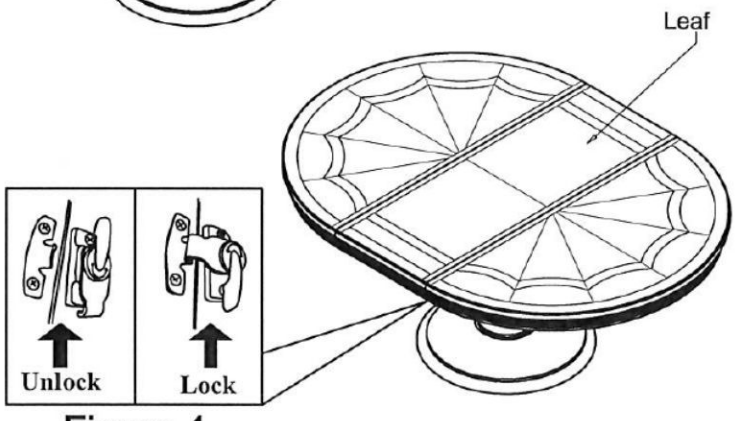


Figure 4

No.	Hardware List	Q'ty
A	Bolt Ø5/16"x4-1/2"	4
B	Hex Nut Ø5/16"	4
C	Lock Washer Ø5/16"	8
D	Flat Washer Ø5/16"	8
E	Allen Wrench 5mm	1
F	Spanner Wrench 12mm	1

Thank you for purchasing furniture from american drew!