


### BOX#1

A. HEADBOARD PANEL

1 PC

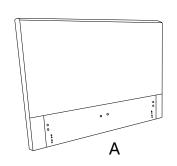


HARDWARE PACKED IN BOX#1				
1	ALLEN BOLT(1/4"x1")	<b>Dimin</b>	8 PCS	
2	FLAT WASHER(5/16")		8 PCS	
3	LOCK WASHER(5/16")		8 PCS	
4	ALLEN KEY(1/4")		1 PC	


## HARDWARE PACKED IN BOX#2 1 ALLEN BOLT(5/16"x1") 8 PCS 2 ALLEN BOLT(5/16"x2-1/2") 4 PCS 3 FLAT WASHER(5/16") 12 PCS 4 LOCK WASHER(5/16") 12 PCS 5 ALLEN KEY(5/16") 1 PC


### BOX#2


В.	LEFT SIDE RAIL	1 PC	
C.	RIGHT SIDE RAIL	1 PC	
D.	FOOTBOARD	1 PC	
E.	SLAT	39 PCS	
F.	CENTER SLAT SUPPORT	2 PCS	
G.	SIDE RAIL SLAT CLIP	26 PCS	
Н.	CENTER SUPPORT SLAT CLIP	26 PCS	
I.	SLAT SUPPORT LEG	4 PCS	
HARDWARE SET			























### ONE UPHOLSTERED BED ASSEMBLED

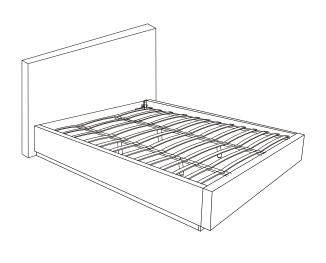











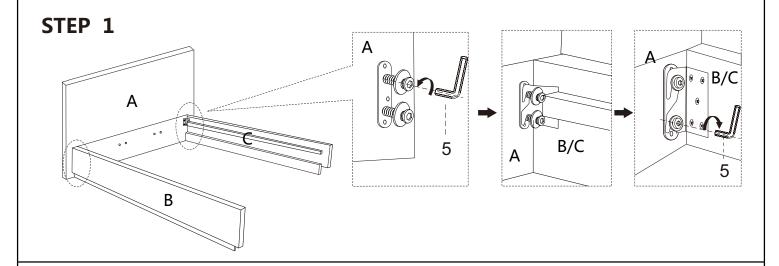

### STEP 2

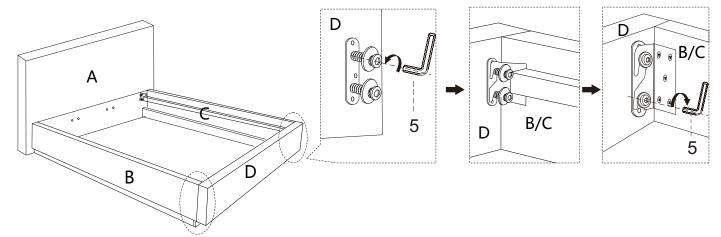




### **STOP**

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 3, 4, 5&6 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 3.


# STEP 3 NOTE: USE HARDWARE PACKED IN BOX #2 FOR STEPS 3 & 4. I UPDATED:JULY 23RD, 2022




### STEP 4

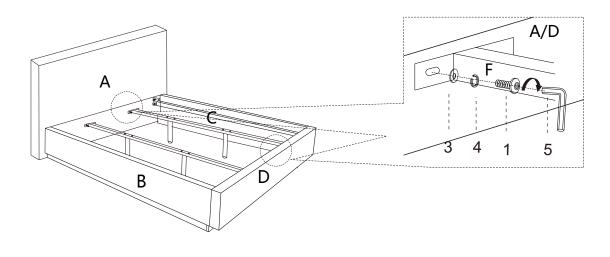


### **STEP 5: STARTING FROM HEADBOARD**

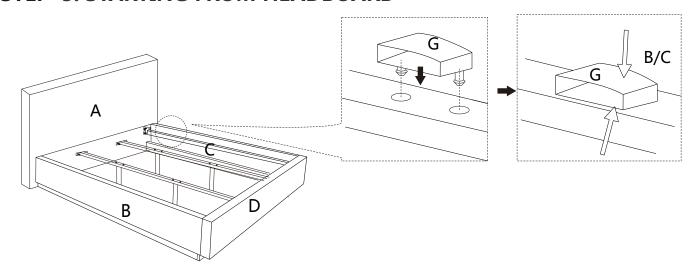


### STEP 6

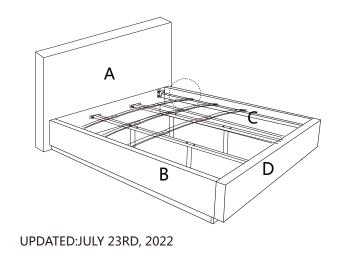

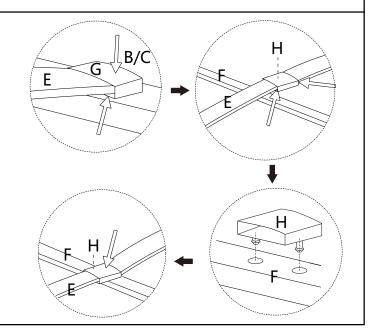



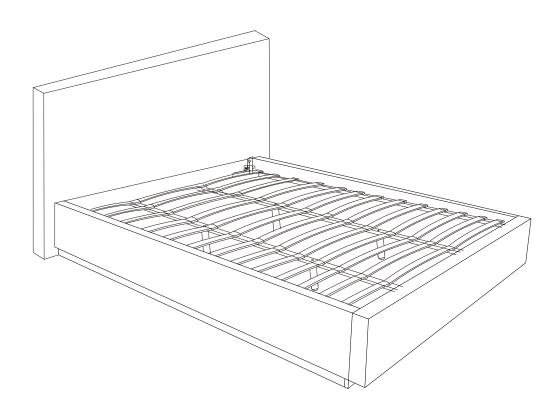

### ASSEMBLY COMPLETE.


### **INSTRUCTIONS FOR ADJUSTING LEVELERS:**

POSITION THE BED IN YOUR ROOM. LOCATE LEVELERS UNDER EACH SUPPORT LEG ( I ).

TURN COUNTER-CLOCKWISE TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG SUPPORT IS APPLYING EQUAL UPWARD PRESSURE ON THE CENTER SLAT.

UPDATED:JULY 23RD, 2022



### **MAINTENANCE INSTRUCTIONS:**

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING YOUR BED.



APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.



### **WARNING!**


SIDE RAIL CLEATS ARE HELD IN PLACE USING PHILLIPS HEAD SCREWS. ONCE THEY ARE REMOVED THE USER WILL NOT BE ABLE TO SAFELY RE-INSTALL THE SIDE RAIL CLEATS FOR FUTURE USE WITH A STANDARD BOX SPRING OR FOUNDATION.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

E. SLAT	39 PCS
F. CENTER SLAT SUPPORT	2 PCS
G. SIDE RAIL SLAT CLIP	26 PCS
H. CENTER SUPPORT SLAT CLIP	26 PCS
I. SLAT SUPPORT LEG	4 PCS

### STEP 1:

USE A PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED) TO UNSCREW THE PHILLIPS SCREWS AND REMOVE THE PRE-ASSEMBLED SIDE RAIL CLEATS.

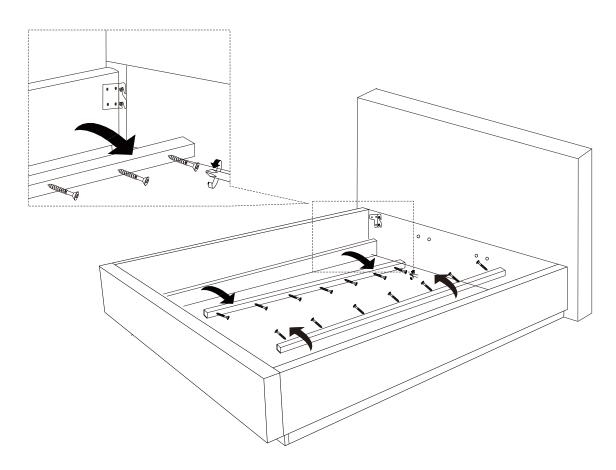

UPDATED:JULY 23RD, 2022