




DESIGNED IN CALIFORNIA

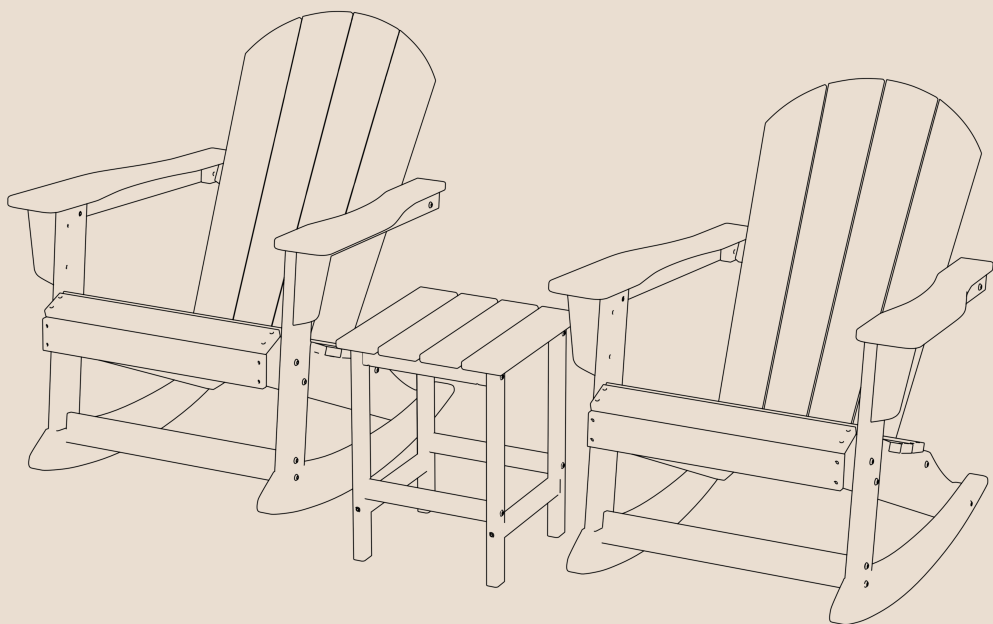

— OUTDOOR ROCKING POLY ADIRONDACK —
CHAIR WITH SIDE TABLE 3-PIECE SET

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

<https://westintrends.com/welcome>



QUESTIONS OR COMMENTS?

If you have questions reach out to
cs@westintrends.com

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

<https://westintrends.com/apps/product-registration>



ACCESSIBILITY - COMMUNITY - VALUE - SUSTAINABILITY

TABLE OF CONTENTS

ASSEMBLY INSTRUCTIONS

Outdoor Rocking Poly Adirondack Chair 4

Outdoor Poly Adirondack Side Table 10



DESIGNED IN CALIFORNIA




OUTDOOR ROCKING POLY ADIRONDACK CHAIR

! NOTICE

Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Please adjust the speed slowly when you use electric drill for assembling to avoid screw slipping.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



SCREWDRIVER
BLADES
(PROVIDED)



CHAIR
330LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

BOLT
M6 x 80mm



2 PCS

2

SCREW
M6 x 80mm



4 PCS

3

BOLT
M6 x 65 mm



2 PCS

4

BOLT
M6 x 60 mm



8 PCS

5

SCREW
M6 x 55mm



4 PCS

6

M6 NUT



8 PCS

7

M6 WASHER




8 PCS

PARTS

A


CHAIR SEAT

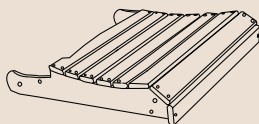

1 PC

B

CHAIR BACKREST

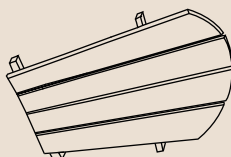

1 PC

C

LEFT CHAIR ARM



1 PC

PARTS

D


RIGHT CHAIR ARM



1 PC

E


LEFT CHAIR LEG

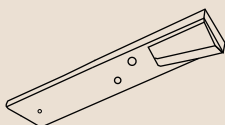

1 PC

F

RIGHT CHAIR LEG

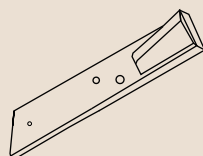

1 PC

G

LEFT ROCKING BASE



1 PC

H


RIGHT ROCKING BASE



1 PC

I


FRONT RAIL

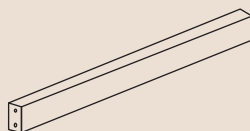

1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

Look at following overall view of this chair and learn the exact position of each part to be assembled.

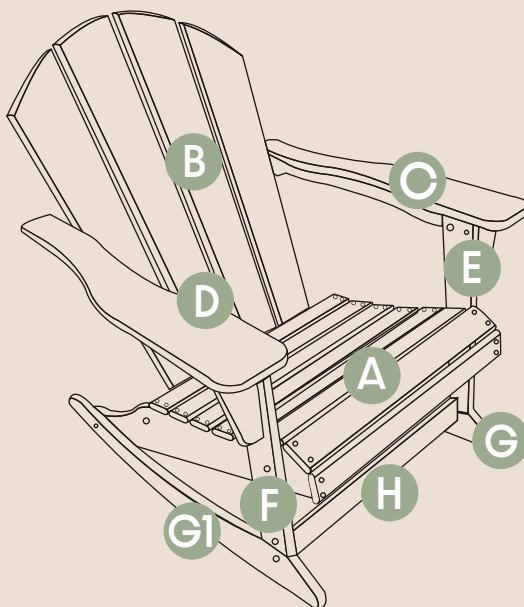


PRODUCT ASSEMBLY

1

Attach **Part C Left Chair Arm** to **Part E Left Chair Leg** with 1 pc of **Hardware #4 Bolt**, **Hardware #7 Washer** and **Hardware #6 Nut**.

Do the same to **Part F Right Chair Leg** and **Part D Right Chair Arm**.


Do not tighten screws too much at this stage.

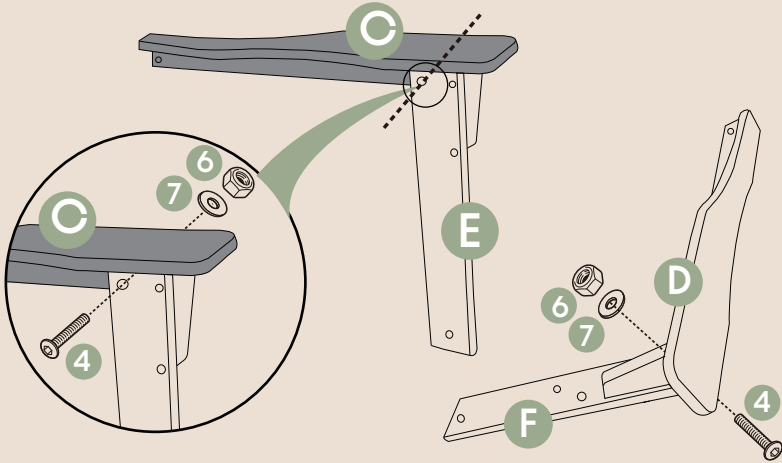

PRODUCT ASSEMBLY

2


Attach **Part F Right Chair Leg** and **Part E Left Chair Leg** to **Part A Chair Seat** with 4 pcs of **Hardware #4 Bolt**, **Hardware #7 Washer** and **Hardware #6 Nut**.

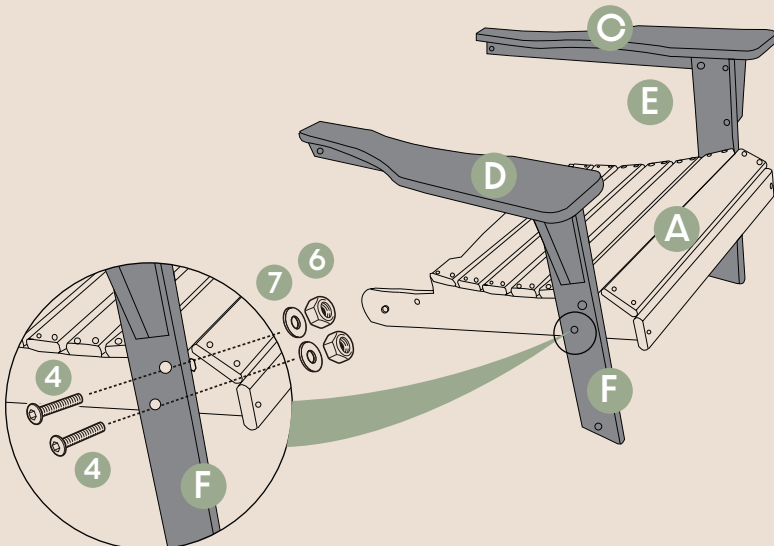

PRODUCT ASSEMBLY

3

Attach **Part B Chair Backrest** to **Part A Chair Seat** and **Part D Right Chair Arm** as well as **Part C Left Chair Arm** with 2 pcs of **Hardware #1 Bolt** and 2 pcs of **Hardware #4 Bolt** as below.

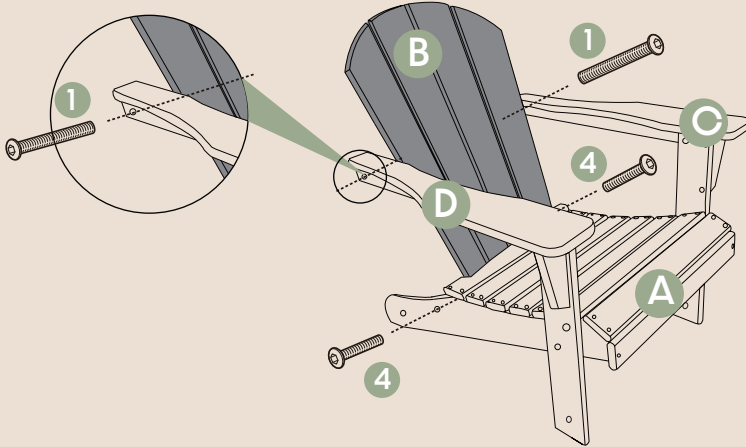


PRODUCT ASSEMBLY

4

Turn the chair upside down, place **Part G Left Rocking Base** to **Part E Chair Left Leg** as below and attach them with 2 pcs of **Hardware #2 Screw**.

Attach **Part G Left Rocking Base** to **Part A Chair Seat** with 1 set of **Hardware #3 Bolt**, **Hardware #7 Washer** and **Hardware #6 Nut**.

Do the same to attach **Part G1 Right Rocking Base**.

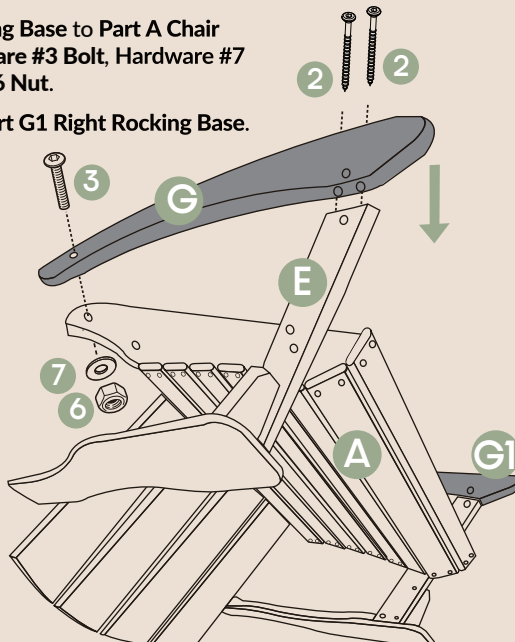


PRODUCT ASSEMBLY

5

Attach **Part H Front Rail** to **Part G Left Rocking Base** and **Part E Left Chair Leg** with 2 pcs of **Hardware #5 Screw**.

Tighten all the bolts and nuts again to finish the assembly.

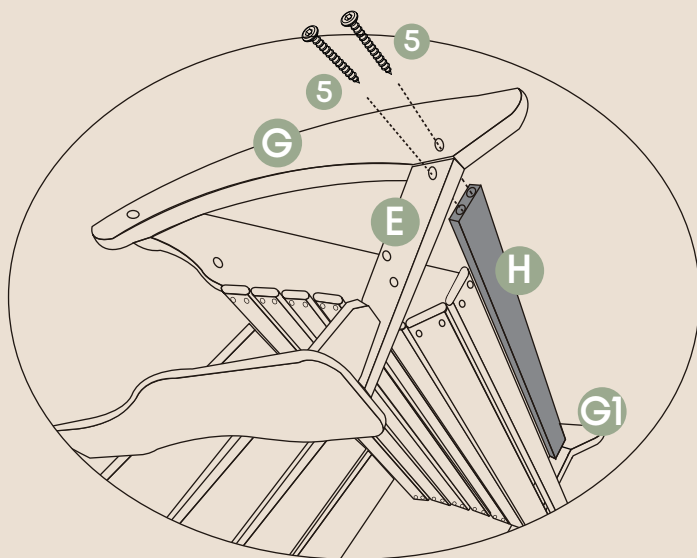

PRODUCT ASSEMBLY


6

Tighten all the screws, bolts and nuts to ensure a steady use of this chair.





DESIGNED IN CALIFORNIA

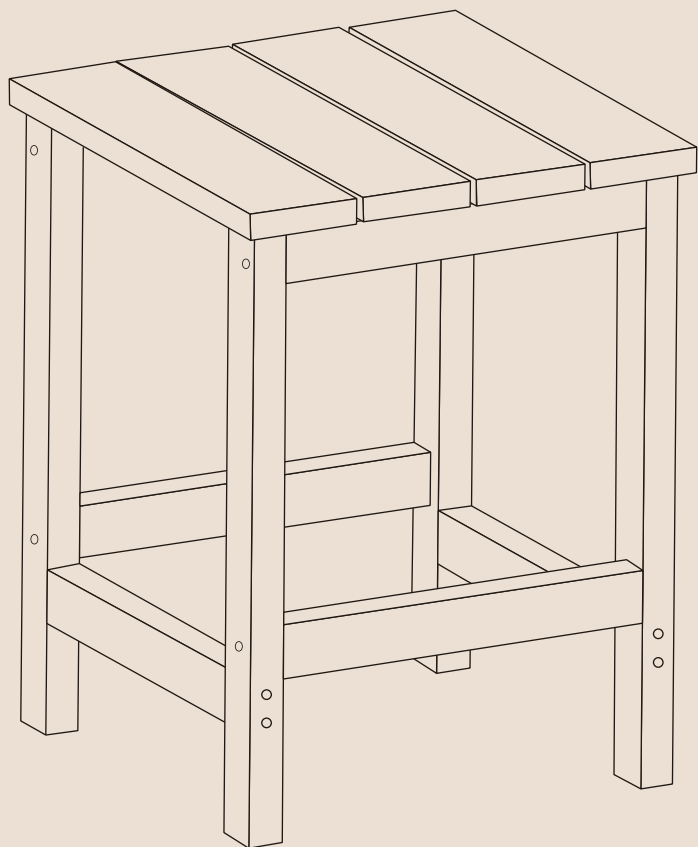

OUTDOOR POLY ADIRONDACK SIDE TABLE

! NOTICE

Do not overtighten screws or bolts. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tools to prevent cracking the PE boards when assembling.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



TABLE
100 LBS
CAPACITY



1 PERSON
ASSEMBLY



UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

BOLT
M6 x 45mm




8 PCS

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



2 PCS

C

WOODEN BRACE

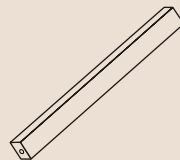


2 PCS

PRODUCT ASSEMBLY

1


Attach **Part B Table Leg** to **Part A Table Top** with 2 pcs of **Hardware #1 Bolt** using an **Allen Wrench**.

Do not tighten the bolts too much at this stage.

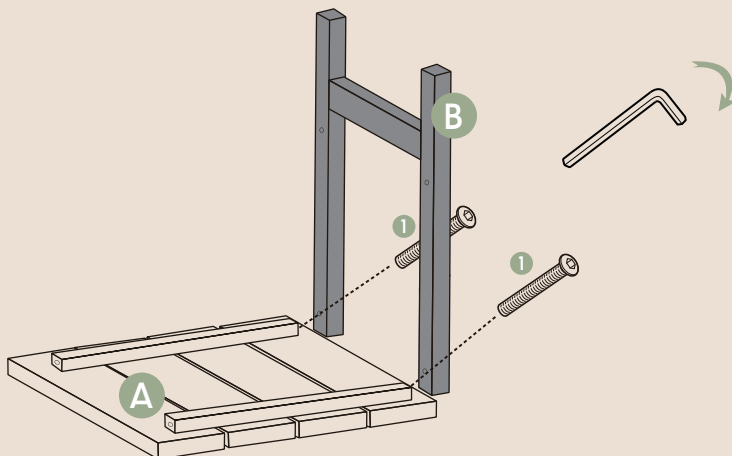

2



Attach **Part C Table Wooden Braces** to **Part B Chair Legs** with 2 pcs of **Hardware #1 Bolt**.

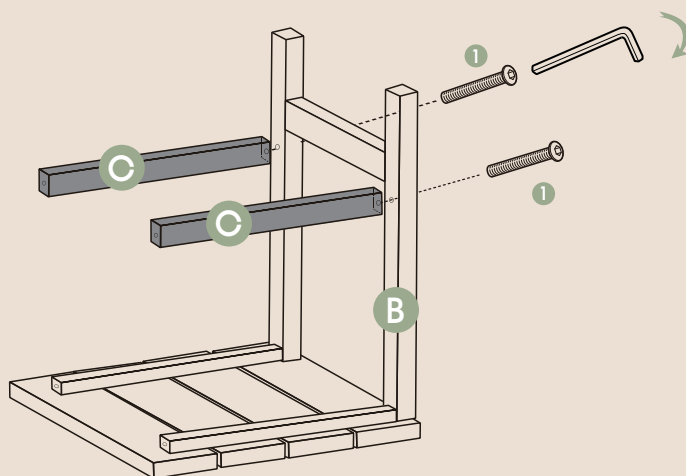

3

Attach **Part B Table Leg** to **Part A Table Top** and **Part C Wooden Brace** with 2 pcs of Hardware #1 Bolt using an Allen Wrench.

Tighten all bolts and screws to finish the assembly.

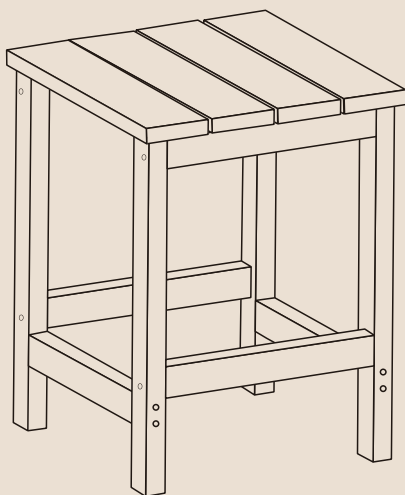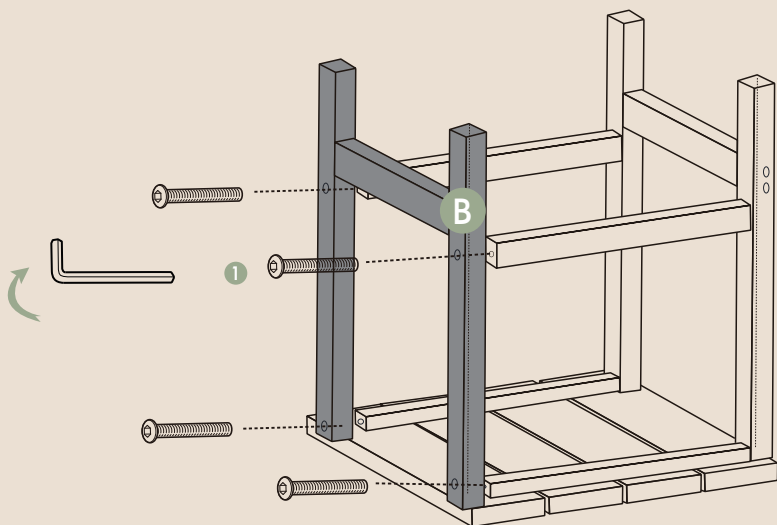

REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove debris and dirt.