


ASSEMBLY INSTRUCTIONS


Over Toilet Shelving w/2 Doors

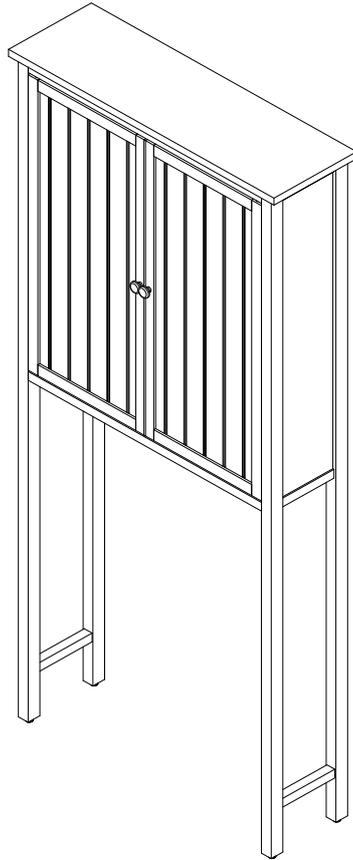


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.

Order replacement parts and hardware at "boltonfurniture.com"


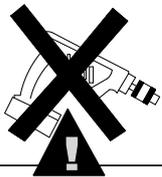


- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
- . Please assemble on a clean soft surface to avoid damage.

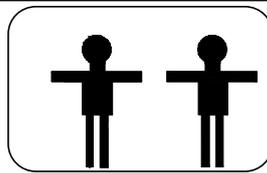

50 minutes


Tool Included

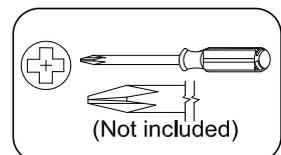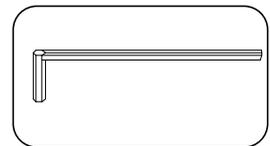


(Not included)

www.boltonfurniture.com

Part List-Over Toilet Shelving w/2 Doors

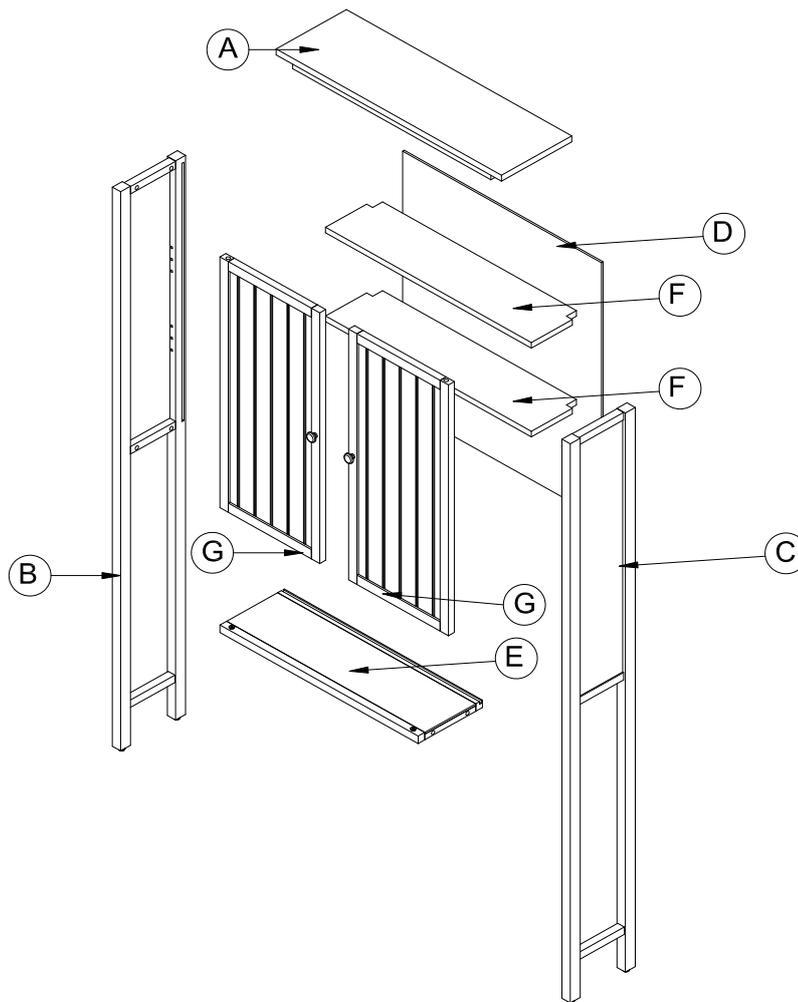


Identifying the hardware-Identify the hardware using the illustrations below.


H  08 M6X35mm	I  02 M6X45mm	J  02	K  02
L  08	M  02	N  02	O  01
P  01 Anti-Tip Bag			

www.boltonfurniture.com

STEP 1

H  02
M6X35mm


O  01

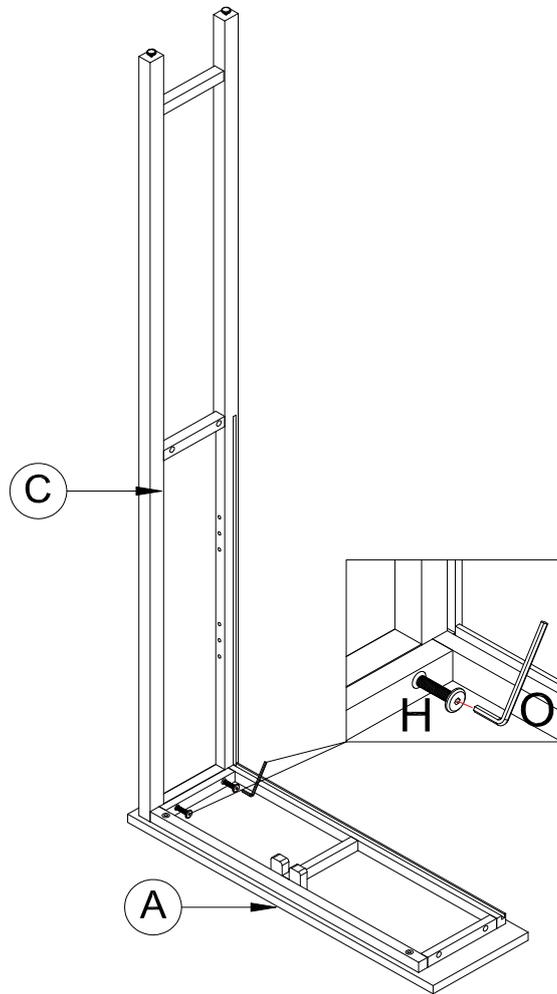


STEP 2

H  02
M6X35mm


O  01

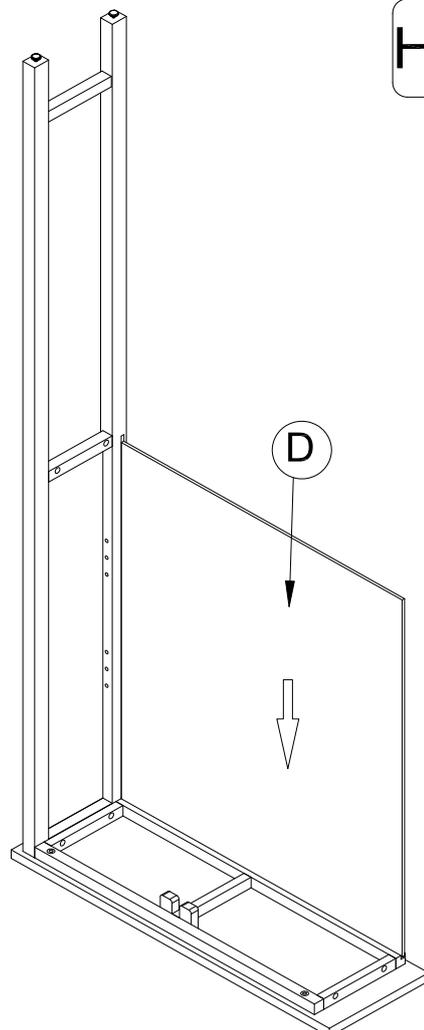

STEP 3

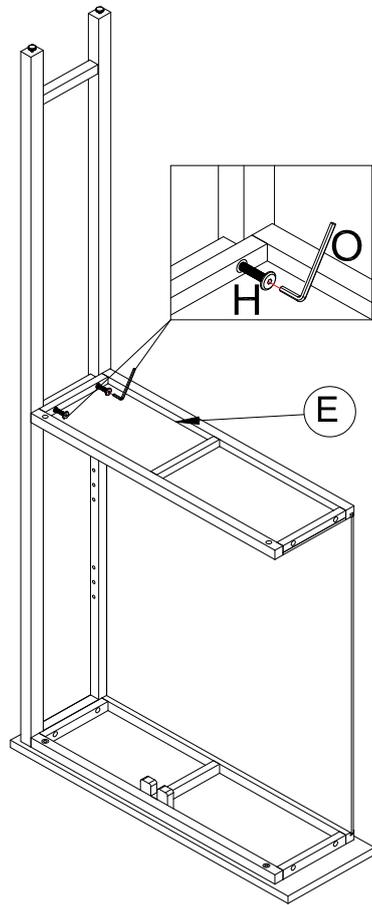

STEP 4

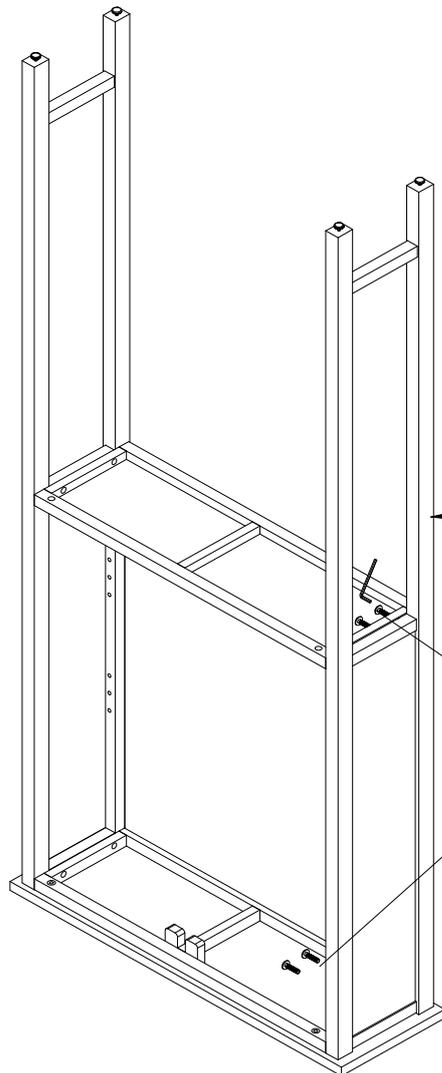


STEP 5

L




08

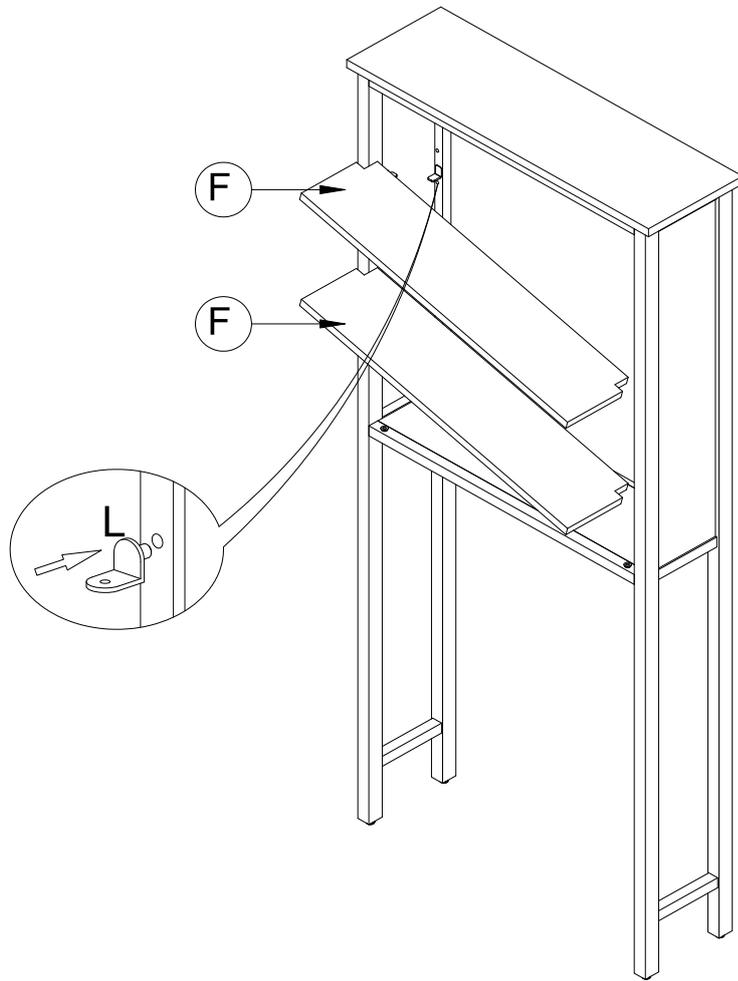



STEP 6

- | | | | | | |
|----------------|---|----|---|---|----|
| I |  | 02 | J |  | 02 |
| M6X45mm | | | | | |
| K |  | 02 | O |  | 01 |


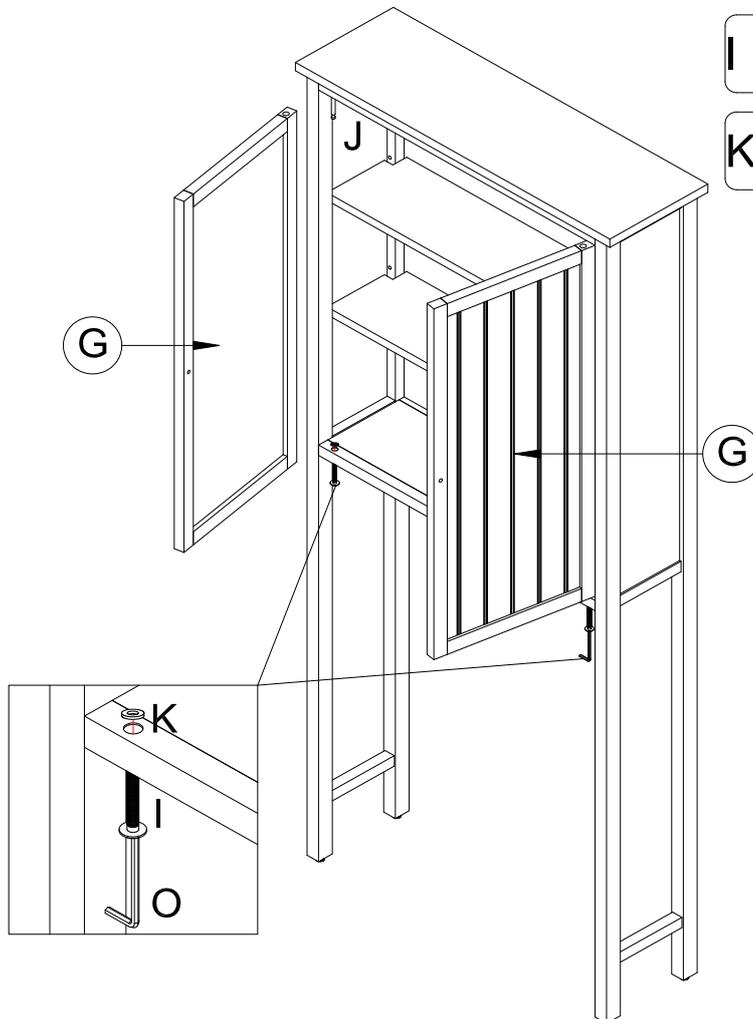


STEP 7





M		02	N		02		01
							(Not included)

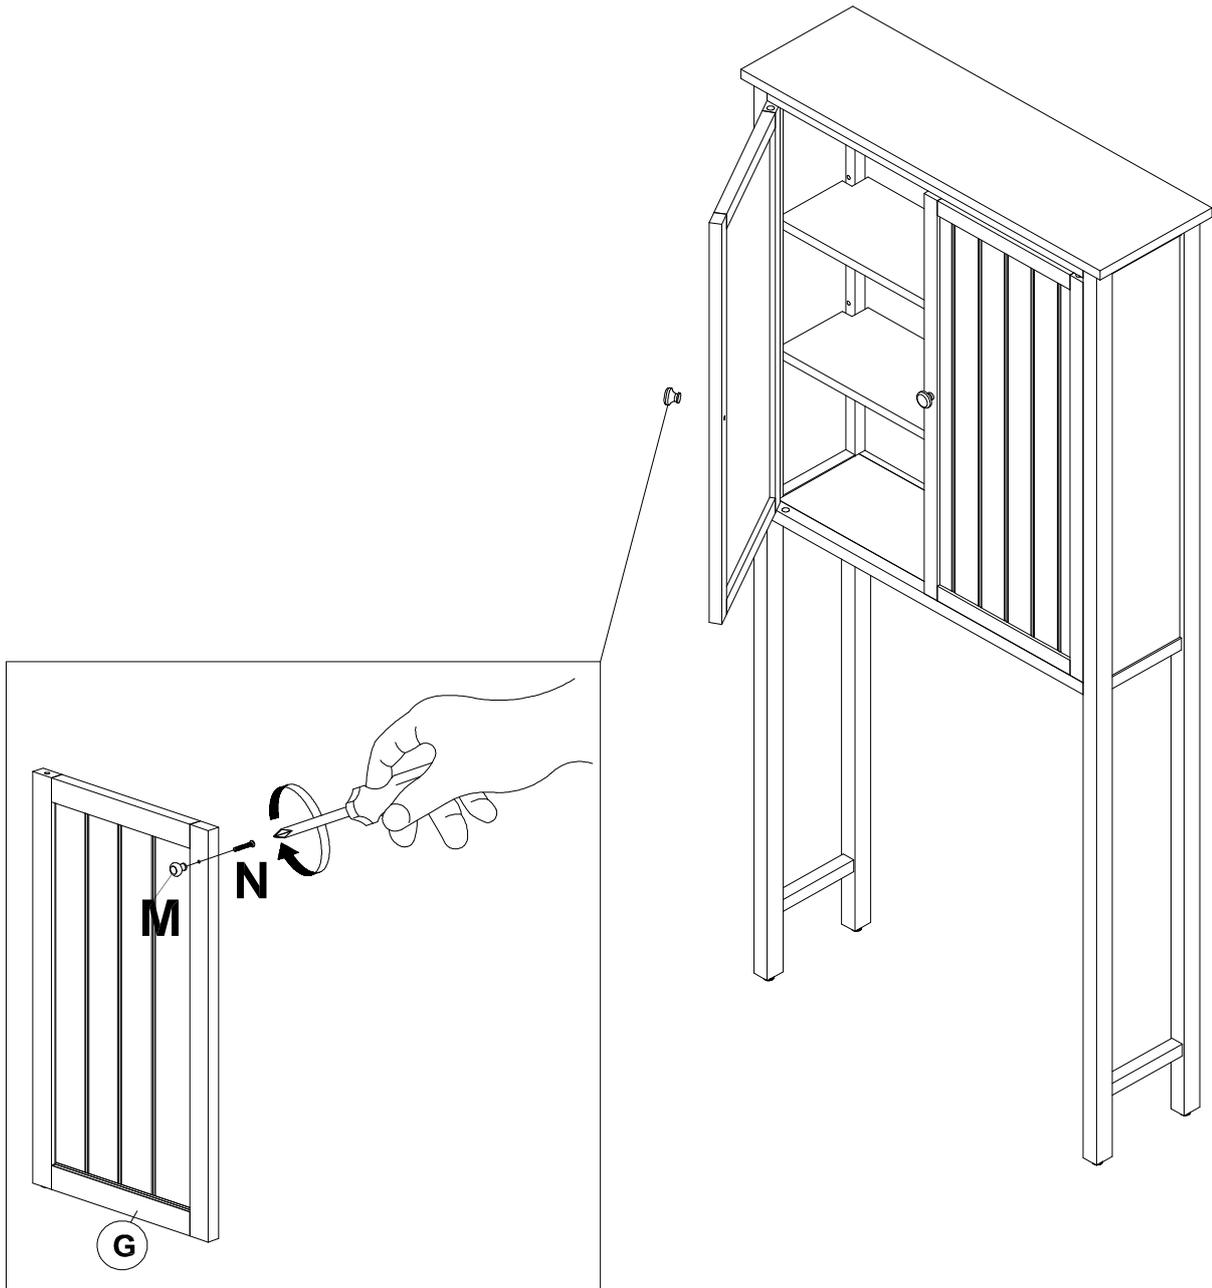


"P" ANTI-TIP BAG

A	 4x14 Screw	02	C	 Plastic wall bracket	02
B	 4x35 Screw	02	D	 Nylon strap 140mm	01

Secure to Stud behind Wallboard

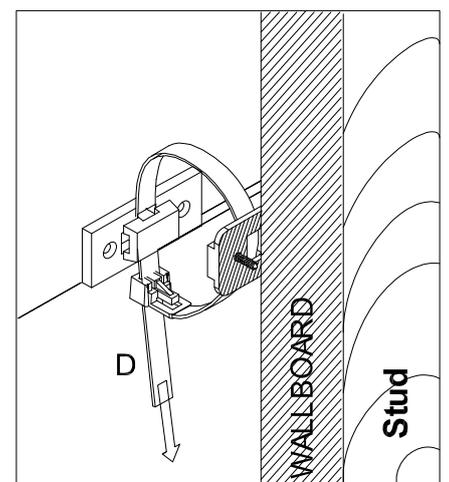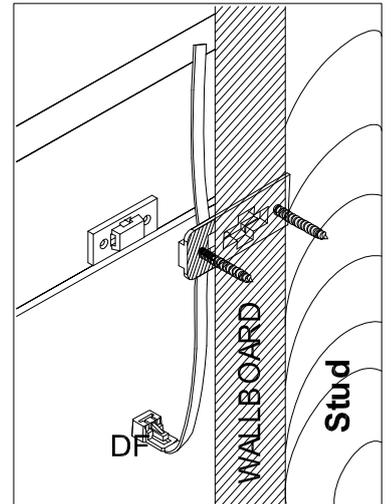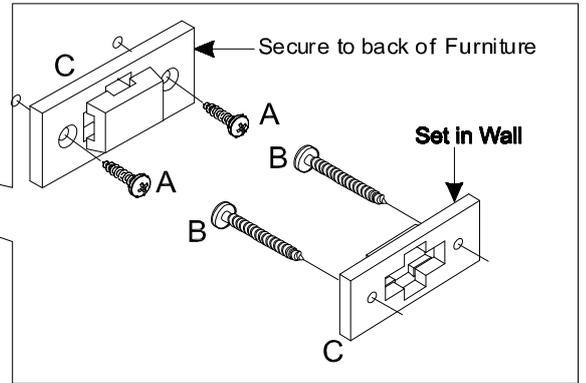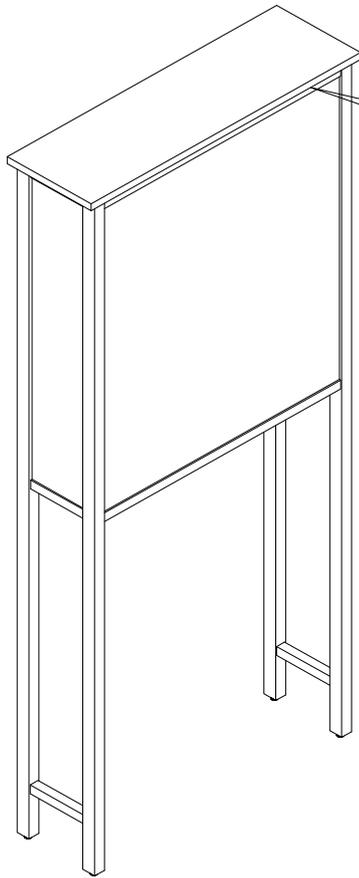

Secure to Stud behind Wallboard!

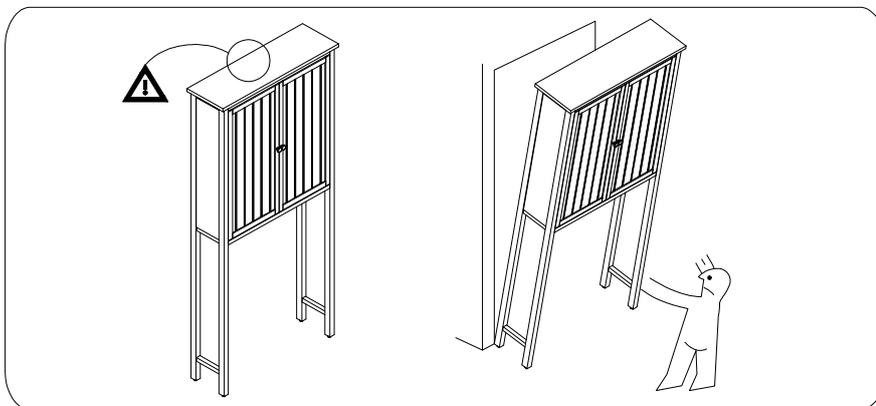

www.boltonfurniture.com