

TRILOCK DUMMY FITTING INSTRUCTIONS


- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Drill holes (suggest pilot holes first 3mm, 1/8") then the correct size 10mm, 3/8" from both sides of the door.

Contemporary Series

- Install threaded posts to the outside faceplate.

Traditional Series

- Install blind screws and brass posts to Trilock external faceplate (this is the faceplate without the rectangle snib push-button).
- Insert dummy plug into the inside of both plates before affixing faceplates to door. (To help hold dummy plugs in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

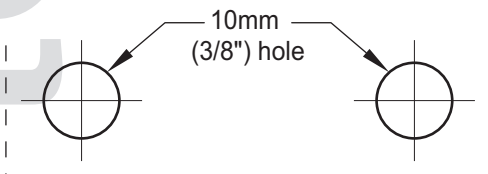


FOLD HERE



FOLD HERE

Fit here on door edge

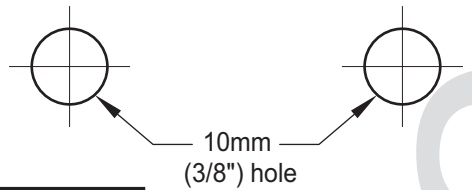

TRILOCK DUMMY FITTING INSTRUCTIONS


- Fold template where indicated.
- Position template on door edge at desired height. (Generally to line up with operating Trilock on opposite door)
- Firmly hold template to door and mark the four hole centres as indicated.
- Drill holes (suggest pilot holes first 3mm, 1/8") then the correct size 10mm, 3/8" from both sides of the door.

Contemporary Series

- Install threaded posts to the outside faceplate.

Traditional Series

- Install blind screws and brass posts to Trilock external faceplate (this is the faceplate without the rectangle snib push-button).
- Insert dummy plug into the inside of both plates before affixing faceplates to door. (To help hold dummy plugs in position, apply a strip of adhesive tape if required.)
- Mount the outside faceplate to door.
- Align the inside faceplate to door and fit mounting screws and tighten into threaded posts.

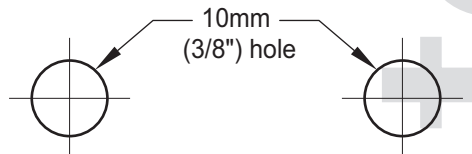

Installation template for Gainsborough Trilock
Traditional & Contemporary Series

