


HEARST MIRROR ASSEMBLY INSTRUCTIONS



PART AND FITTING PACKAGING DETAIL


BOX #1
A. MIRROR
B. SUPPORT MIRROR

1 PC
2 PCS

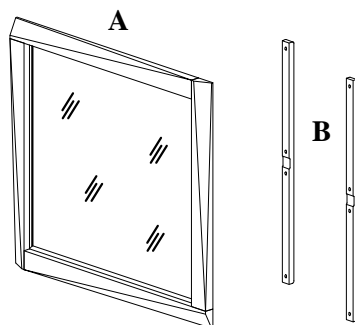



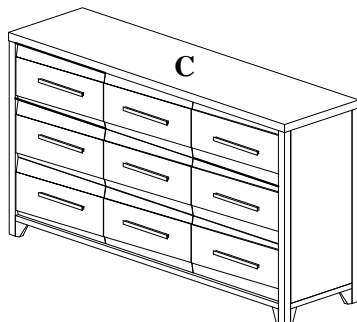

BOX #2*
C. DRESSER

1 PC



* SOLD SEPARATELY

HARDWARE PACKED IN BOX #1

1	ALLEN BOLT M6 x 45 MM	08 PCS	2	WASHER M6	08 PCS
					
3	LOCK WASHER M6	08 PCS	4	ALLEN KEY (4MM)	01 PC
					



WARNING

FOR YOUR SAFETY AND CONVENIENCE
ASSEMBLY BY TWO PEOPLE IS RECOMMENDED


OPTION 1 FIXING MIRROR ON TO WALL

PRE-INSTALLED MIRROR BRACKETS ARE TEARDROP SHAPED. TEST CONNECTION BETWEEN MIRROR BRACKETS AND MOUNTING HARDWARE BEFORE INSTALLATION FOR A SECURE FIT.

INSTALL MOUNTING HARDWARE ON THE WALL. MAKE SURE THE DISTANCE BETWEEN MOUNTING HARDWARE CENTERS ON THE WALL MATCHES THE DISTANCE BETWEEN BRACKET CENTERS ON THE MIRROR.

CAUTION: WE RECOMMEND INSTALLING MOUNTING HARDWARE IN WALL STUDS OR A BOARD THAT IS SECURED TO STUDS. CONSULT A PROFESSIONAL INSTALLER BEFORE INSTALLING IN DRYWALL.

HANG THE MIRROR FROM THE MOUNTING HARDWARE. ENSURE THE TEARDROP BRACKETS HAVE CAUGHT THE MOUNTING HARDWARE.

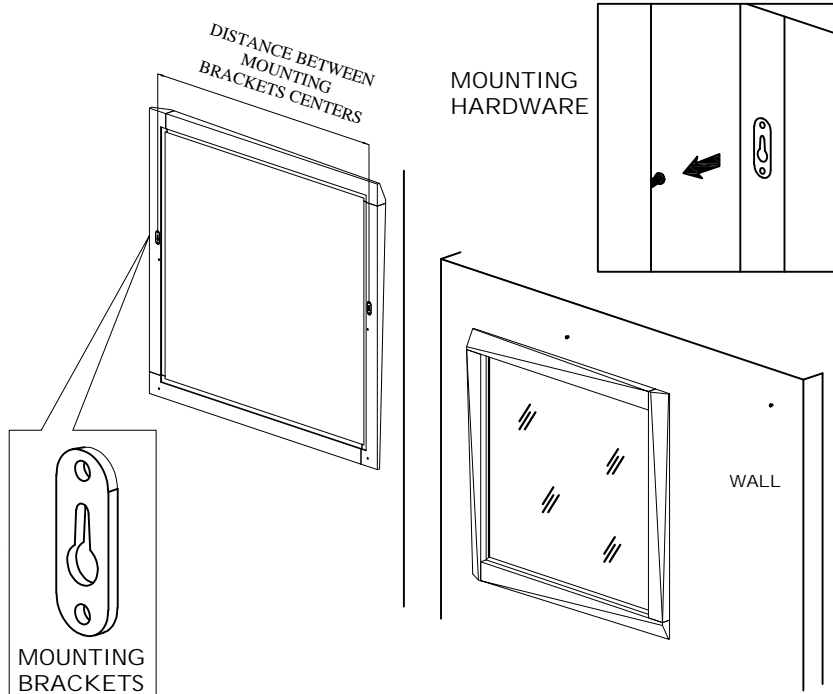

OPTION 2 FIXING MIRROR ON TO DRESSER

STEP 1:
USE PILOT HOLES AS REFERENCE
TO CONNECT MIRROR (A) & MIRROR
SUPPORT (B) USING ALLEN BOLTS
(1), LOCK WASHER(3) AND
WASHER(2). TIGHTEN THE BOLTS
USING ALLEN KEY(4). REPEAT THE
STEP FOR SECOND MIRROR SUPPORT.

STEP 2:
FOLLOW THE ILLUSTRATION TO FIX
MIRROR (A) TO DRESSER (C) USING ALLEN
BOLTS (1), LOCK WASHER(3) AND
WASHER(2). ON MIRROR SUPPORT FROM
BACK SIDE,
USE PILOT HOLES AS REFERENCE FOR EASY
ASSEMBLY. TIGHTEN THE BOLTS USING
ALLEN KEY (4).

