KINCAID

SOLID WOOD SINCE 1946


www.kincaidfurniture.com
phone :828-728-3261.

Assembly Instructions

63-135HV/63-138RV/63-137V Bed 5-0
63-136HV/63-139RV/63-137V Bed 6-6

Hardware List

CODE	DESCRIPTION	QTY
A	Threaded Bolts Ø 5/16" x 4"	8
B	Curve Washers Ø 5/16"	8
C	Nut Ø 5/16"	8
D	Spanner Wrench 12mm	1

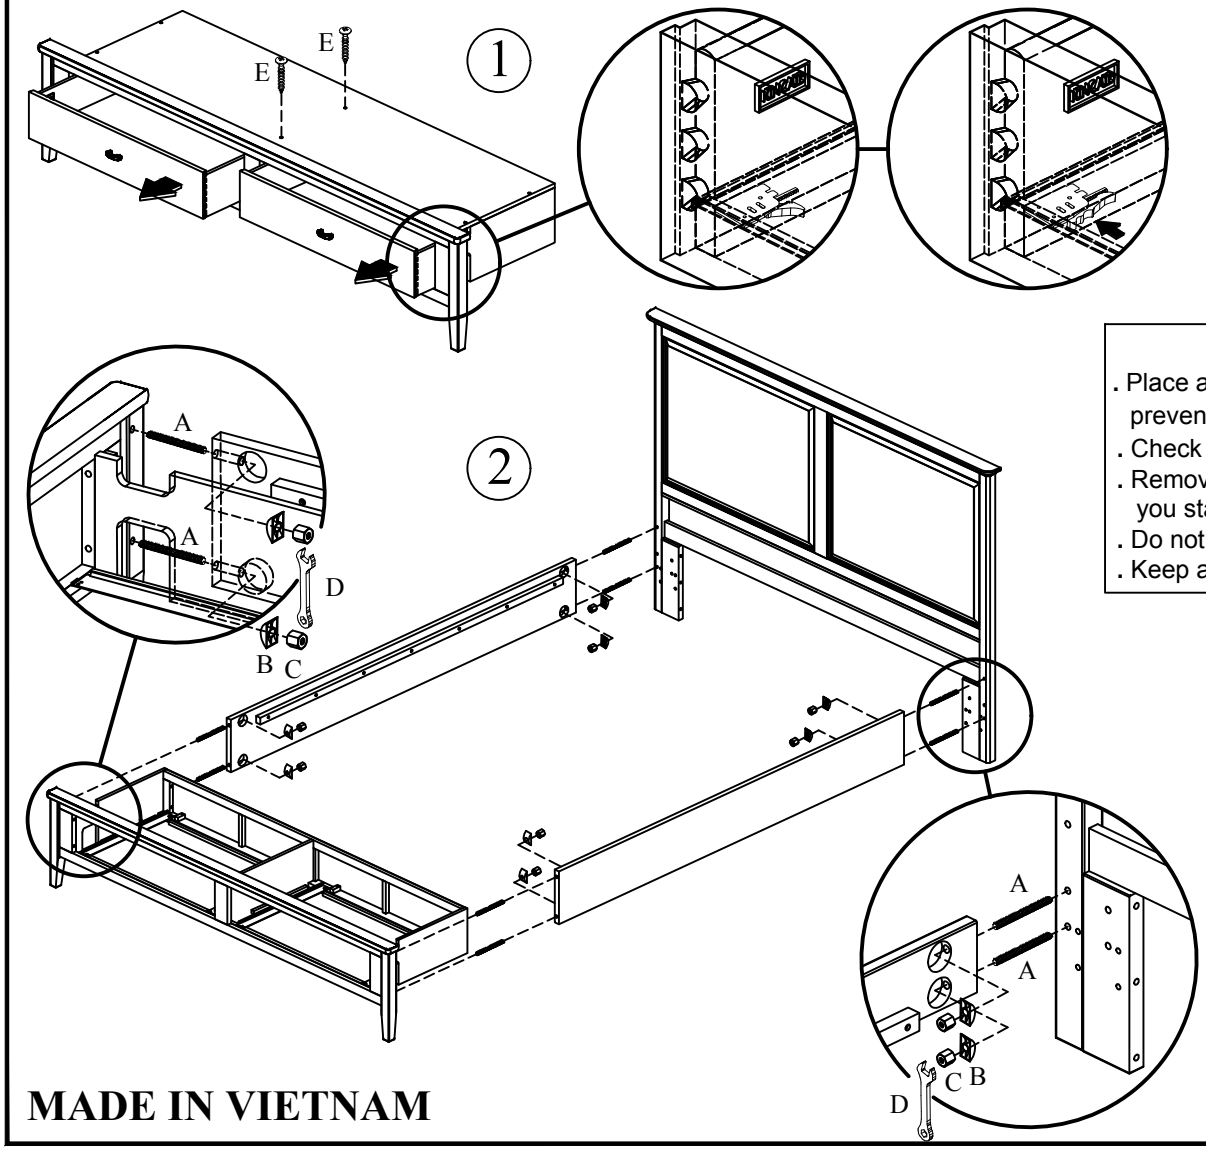

MADE IN VIETNAM

IMPORTANT NOTES

- Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples and packing straps before you start to assemble.
- Do not tighten all crews and bolts until completely assembled.
- Keep all hardware out of the reach of children

Step 1: Press the left side plastic under the drawer to the left and press the right side plastic under the drawer to the right together then pull out the drawer.

Step 2: Loosen and remove the the screws (E) and cover board.

Step 3: Insert the eight threaded bolt (A) into the headboard and footboard. Tighten by hand only.

Step 4: Insert the side rails onto the threaded bolts protruding from the headboard. Attach curve washer (B) and nut (C) onto the threads and secure by hand at first. Tighten evenly using the open wrench (D).

Step 5: Insert the side rails onto the threaded bolts protruding from the footboard. Attach curve washer (B) and nut (C) onto the threads and secure by hand at first. Tighten evenly using the open wrench (D).