## **T-Leg Installation**

• 4mm Allen Wrench • 6mm Allen Wrench


## **Included Tools**

- Wrench 5
  - 5mm Allen Wrench
- Philips Screwdriver

**Additional Tools Required** 


## **AWARNING**

This desk is heavy. Two or more people are required for assembly. Attempting to assemble this desk alone may cause injury. Take care when handling metal parts. Sharp edges may cause injury.

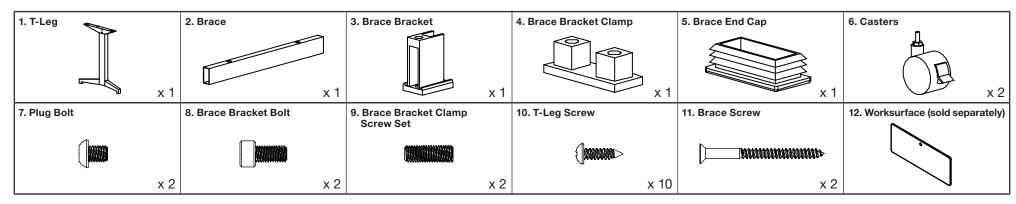

## **Assembly Instructions**

- 1. Install brace bracket to the leg using brace bracket bolts
- 2. Set brace bracket clamp into the brace bracket and slide brace over it
- 3. Tighten the brace bracket clamp screws to secure the brace
- 4. Align holes in the desk top with the holes in the leg
- Install T-Leg screws and brace screws (do not tighten until all screws have been started)
- 6. Install casters
- 7. Install plug bolts

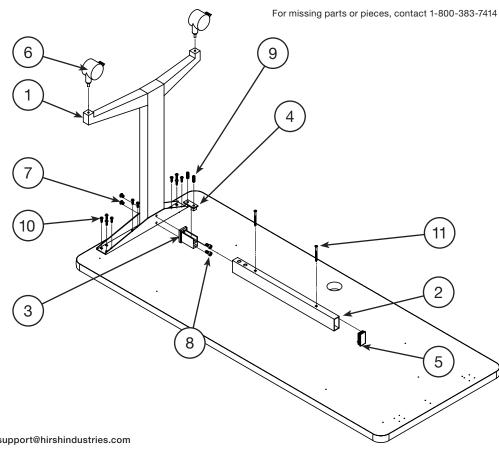

3636 Westown Parkway, Suite 100 • West Des Moines, IA 50266 • 800-383-7414 • hirshindustries.com • salessupport@hirshindustries.com