


TOWNSEND LOW PROFILE FULL/QUEEN BED

ASSEMBLY INSTRUCTIONS




BOX #1

- A. HEADBOARD 1PC
B. FOOTBOARD 1PC

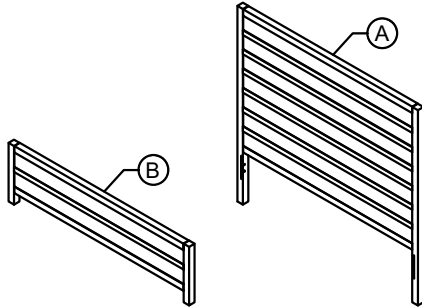


BOX #2

- C. SIDE RAIL 2 PCS
D. BED SLAT 3 PCS
E. LEG SUPPORT 3 PCS
BED HARDWARE BOX*

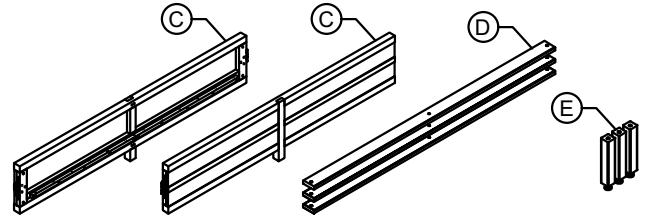

TOWNSEND LOW PROFILE BED ASSEMBLED

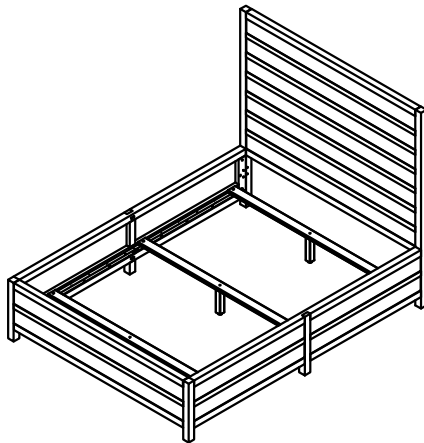


BED HARDWARE PACKED IN BOX #2


1	ALLEN BOLT (6X40mm)		4 PCS
2	WOOD SCREW (8x30mm)		7 PCS
3	ALLEN KEY		1 PC

TOOL REQUIRED : PHILLIPS HEAD
SCREWDRIVER (NOT PROVIDED)

**YOUR BOX
MAY CONTAIN
EXTRA HARDWARE**



STEP 1 :

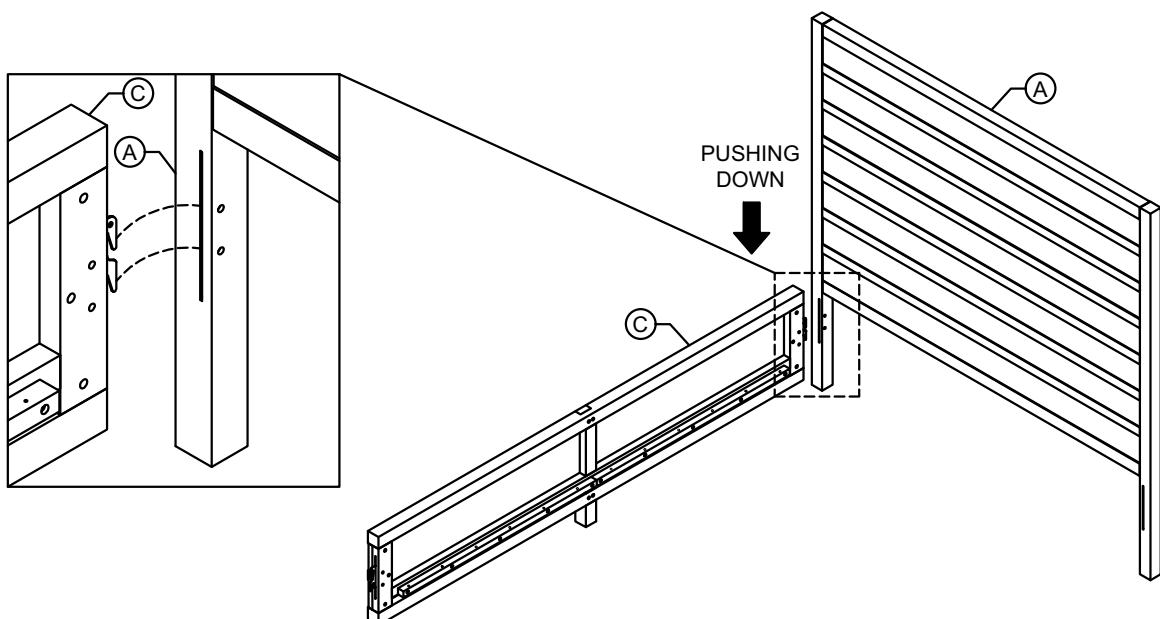

MODUS
FURNITURE

This diagram illustrates the assembly of the front panel (A) to the frame (B). The front panel (A) is shown with a hinge (C) attached to its side. The hinge (C) is then shown being attached to the frame (B). The diagram shows the hinge (C) being inserted into the frame (B) and secured with screws. The front panel (A) is then shown being attached to the frame (B) using the hinge (C).



IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.


IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

TOWNSEND LOW PROFILE FULL/QUEEN BED

ASSEMBLY INSTRUCTIONS



STEP 5 :

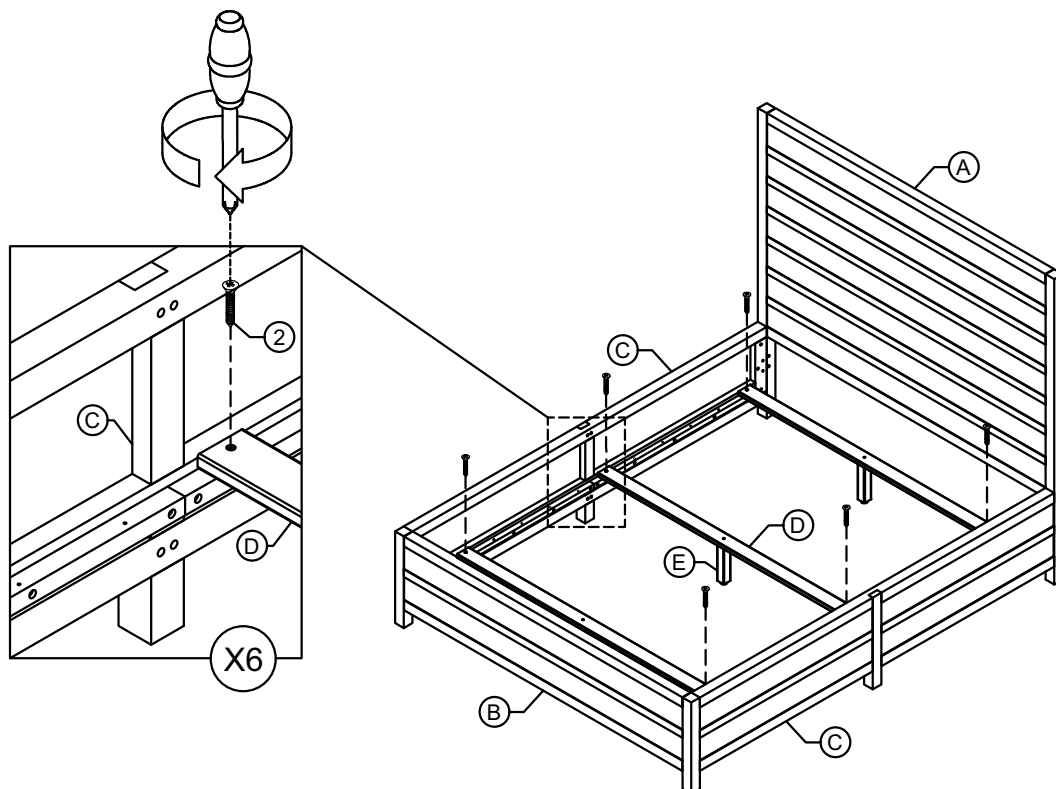


INSTRUCTIONS FOR ADJUSTING LEVELER :

Position the bed in your space and locate the leveler under each leg support (E).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support .

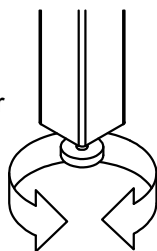

MAINTENANCE INSTRUCTION :

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it. Dragging can damage the leg support.
- Readjust levelers after moving your bed.

TOWNSEND LOW PROFILE FULL/QUEEN BED

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT 3 PCS
E. LEG SUPPORT 3 PCS

1. ALLEN BOLT (6X40mm) 4 PCS
2. WOOD SCREW (8X30mm) 7 PCS

STEP 1:

USE ALLEN KEY (3) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

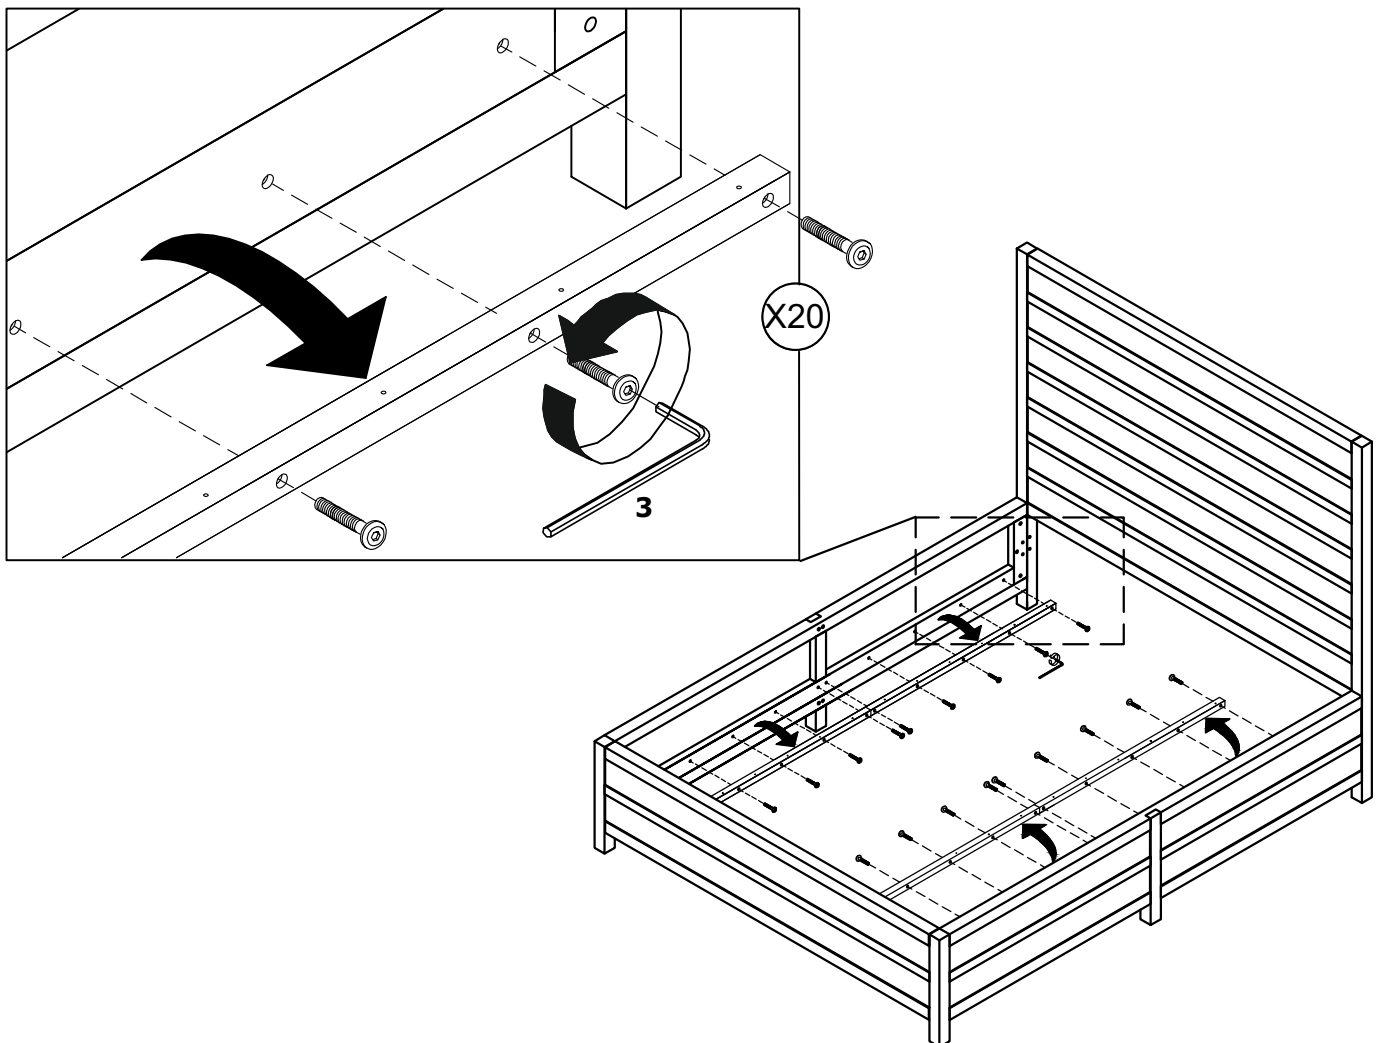

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.


TOWNSEND LOW PROFILE E-KING/C-KING BED

ASSEMBLY INSTRUCTIONS




BOX #1

- A. HEADBOARD 1PC
B. FOOTBOARD 1PC

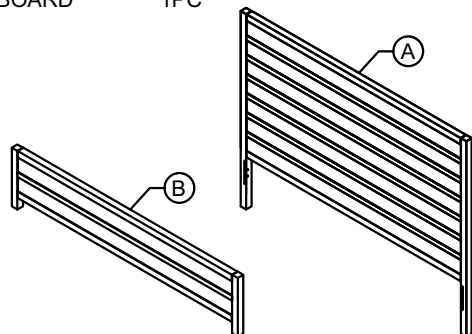


BOX #2

- C. SIDE RAIL 2 PCS
D. BED SLAT 3 PCS
E. LEG SUPPORT 6 PCS
BED HARDWARE BOX*

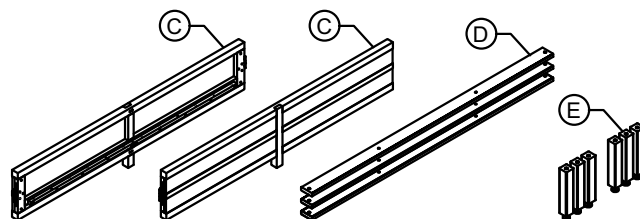

TOWNSEND LOW PROFILE BED ASSEMBLED

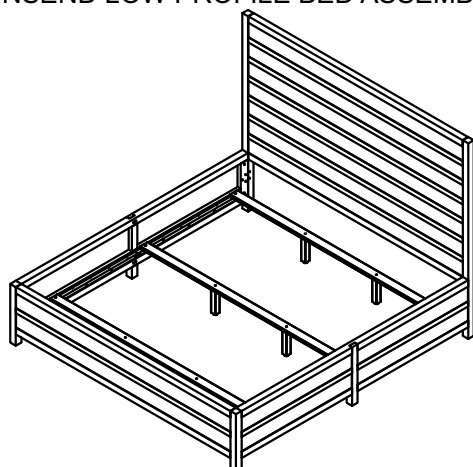


BED HARDWARE PACKED IN BOX #2


1	ALLEN BOLT (6X40mm)		7 PCS
2	WOOD SCREW (8X30mm)		7 PCS
3	ALLEN KEY		1 PC

TOOL REQUIRED : PHILLIPS HEAD
SCREWDRIVER (NOT PROVIDED)

**YOUR BOX
MAY CONTAIN
EXTRA HARDWARE**

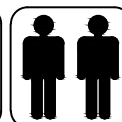

STEP 1 :

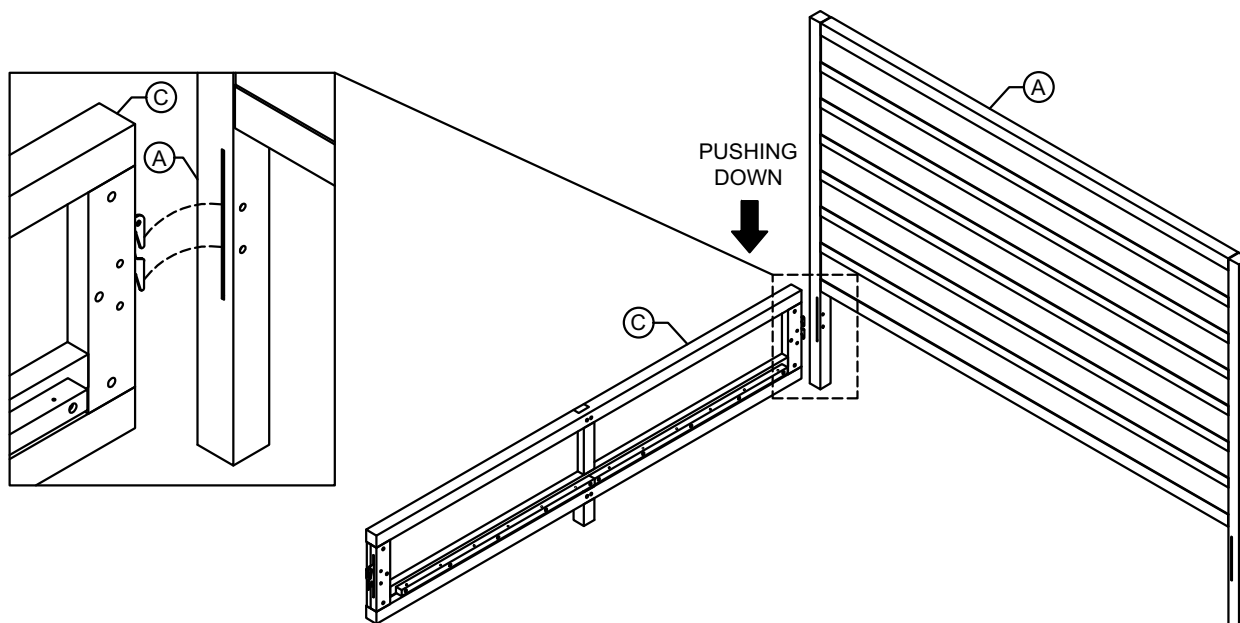

MODUS
FURNITURE

3:

Diagram 3 illustrates the assembly of the headboard and side rails. The main view shows the headboard (A) being attached to the side rails (B) using brackets (C). A detailed inset on the right shows the bracket (C) being secured to the side rail (B) with screws.



IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.


IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

TOWNSEND LOW PROFILE E-KING/C-KING BED

ASSEMBLY INSTRUCTIONS



STEP 5 :

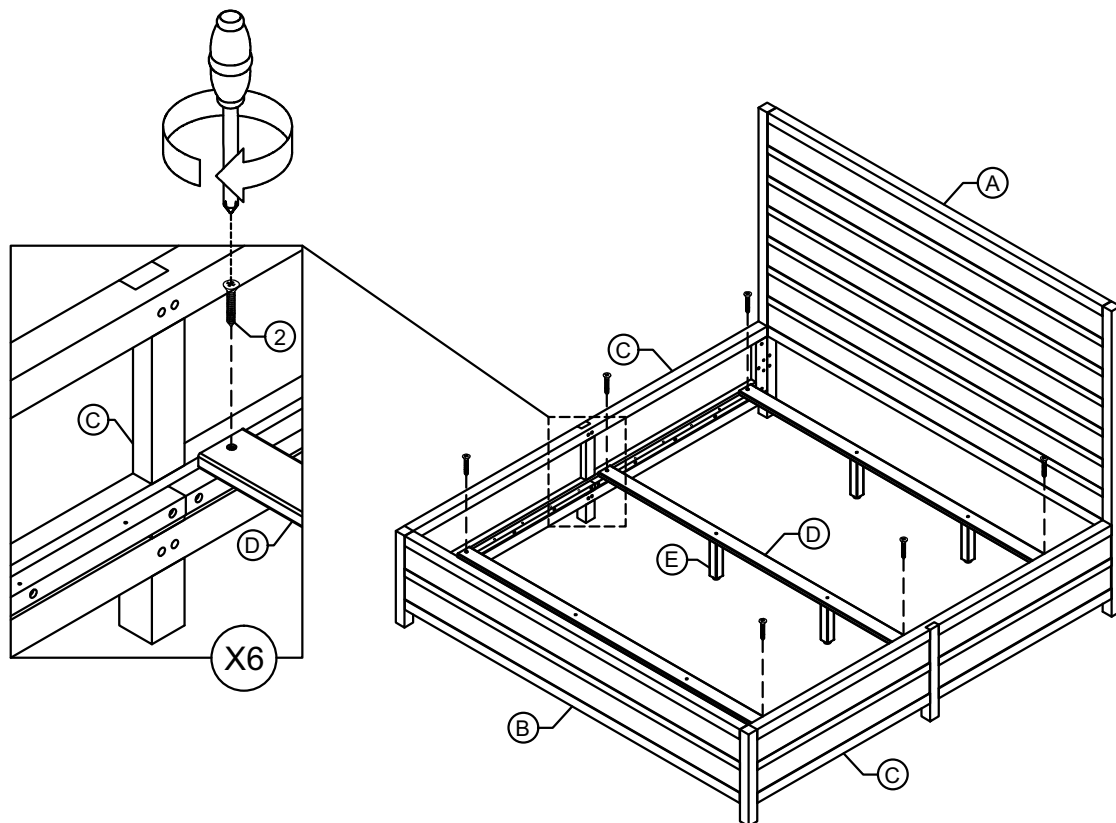


INSTRUCTIONS FOR ADJUSTING LEVELER :

Position the bed in your space and locate the leveler under each leg support (E).

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support .

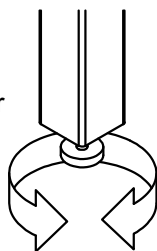

MAINTENANCE INSTRUCTION :

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it. Dragging can damage the leg support.
- Readjust levelers after moving your bed.

TOWNSEND LOW PROFILE E-KING/C-KING BED

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT 3 PCS
E. LEG SUPPORT 6 PCS

1. ALLEN BOLT (6X40mm) 7 PCS
2. WOOD SCREW (8X30mm) 7 PCS

STEP 1:

USE ALLEN KEY (3) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

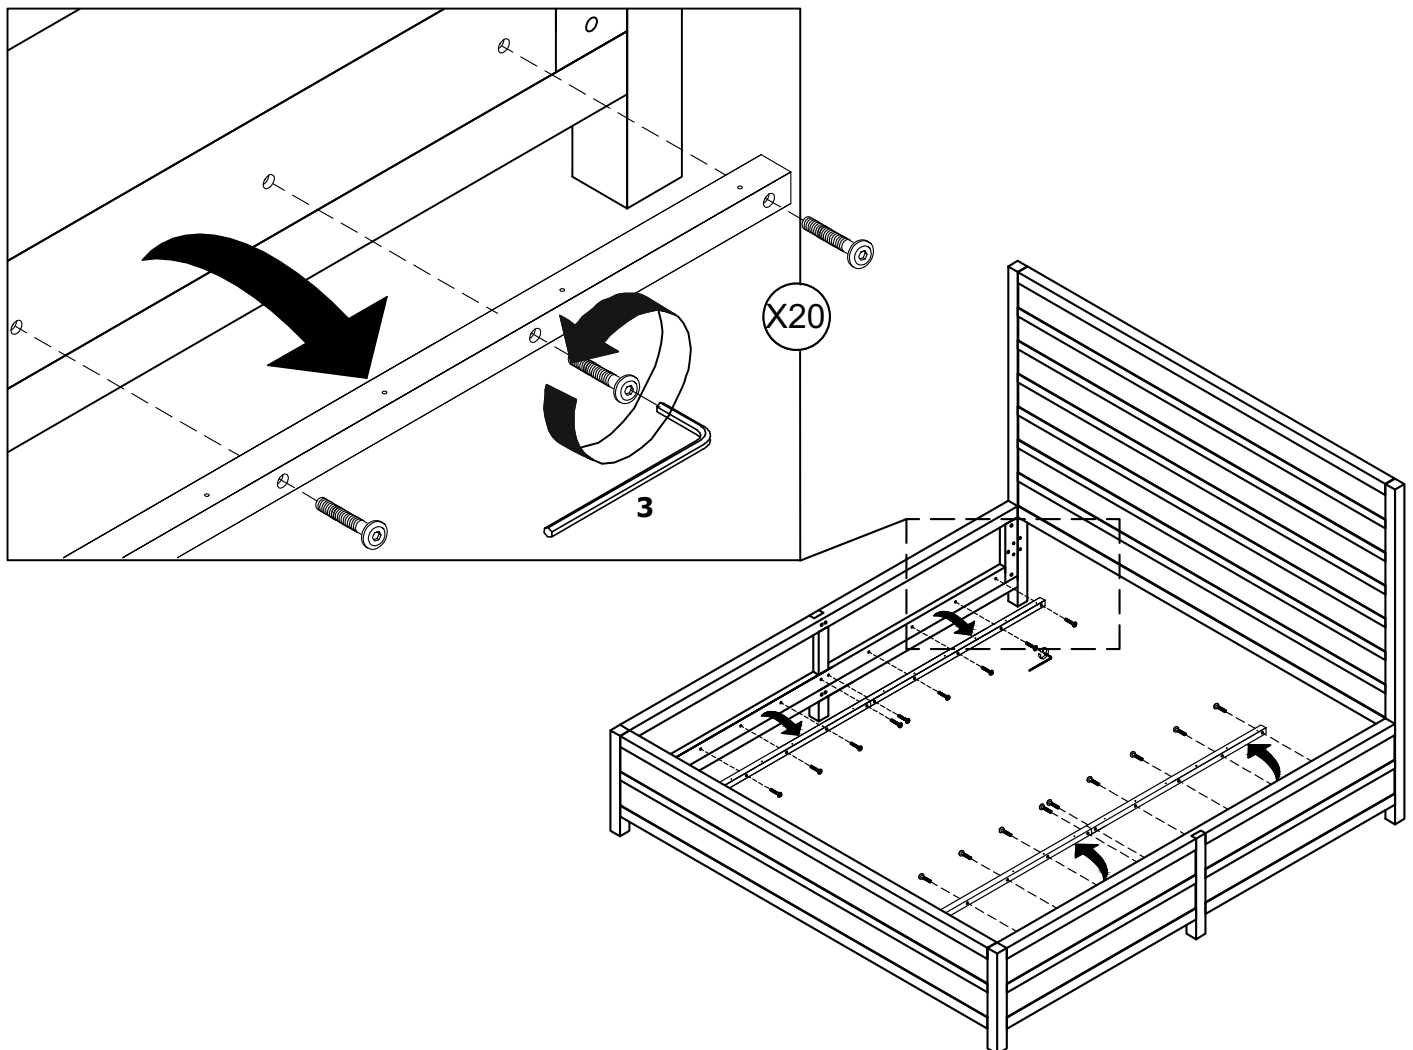

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.