


CVENT-2AB Installation Instructions

Installing Accelerator Bushing on 2" Concentric Vent Kit Instructions


- 1** Apply Pro-Prime PVC Primer evenly around the outside diameter of the CVENT cap top and the inside diameter of the CVENT-2AB bushing.
- 2** After primer is set, apply Pro-Weld PVC Cement evenly to the outside diameter of the CVENT cap top and the inside diameter of the CVENT-2AB bushing.
- 3** Firmly press CVENT-2AB onto the top of the CVENT cap top.
- 4** Allow Pro-Weld PVC Cement to dry before use.

Accelerator Bushing (CVENT-2AB)

Apply the **INSIDE SURFACE AREA** with Pro-Prime PVC Primer and then with the Pro-Weld PVC Cement after the Primer is set.

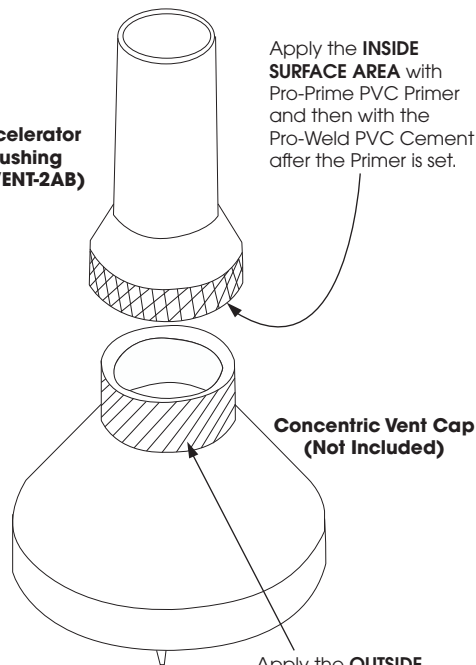

Apply the **OUTSIDE SURFACE AREA** with Pro-Prime PVC Primer and then with the Pro-Weld PVC Cement after the Primer is set.

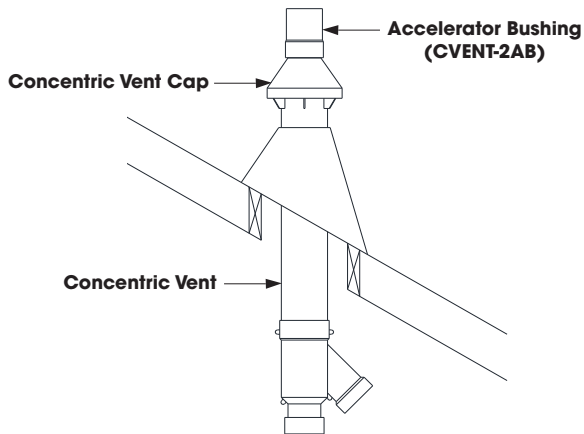

6650 Sugarloaf Pkwy.
Duluth, GA 30097
800.995.2222
diversitech.com
DOC145116