


NOTES:

- Can be mounted with socket facing up or down.


REQUIRED TOOLS:

- Flat Head Screw Driver

INCLUDED HARDWARE +TOOLS:



Wiring Kit (x1)

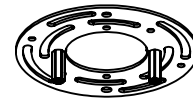

Circle Bracket Assembly



8-32 x 3/8" Screws (x2)

ASSEMBLY INSTRUCTIONS

1. Attach Circle Bracket Assembly to the junction box using provided screws in Wiring Kit. Position Circle Bracket Assembly so Standoffs are aligned horizontally.
2. Wire fixture to junction box using provided Wiring Kit. Consult electrician if necessary.
3. Slip Canopy over Circle Bracket Assembly and align holes on Canopy with the holes on the Bracket Standoffs. Attach the Canopy to the Circle Bracket Assembly using 8-32 x 3/8" Screws . Tighten securely.
4. Install bulb.
5. Attach shade using included Fitter Screws and enjoy.

