KINCAID®
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTIONS

Item: 59-132/133/134
GARDEN METAL BED

www.kincaidfurniture.com
Phone : 828-728-3261



GARDEN KING BED


GARDEN QUEEN BED

IMPORTANT NOTES :

. Place all parts on the clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
. Check to be sure that you have all parts and hardware.
. Remove all wrapping materials, including staples and packing straps before you start to assemble.
. Do not tighten all screws and bolts untill completely assembled.
.Keep all hardware out of the reach of children.

Figure 1

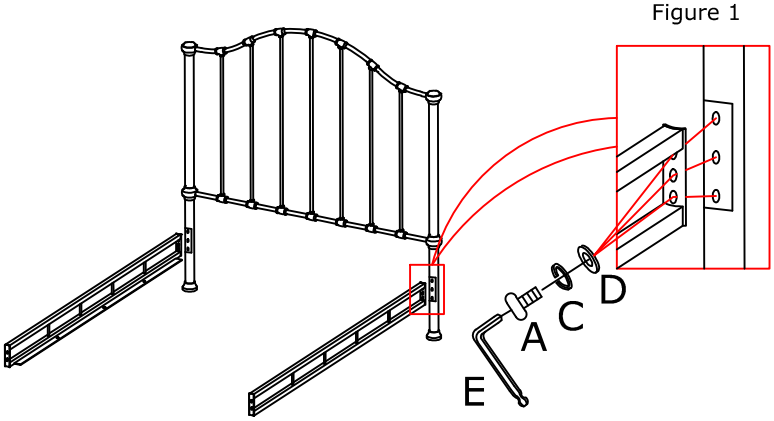


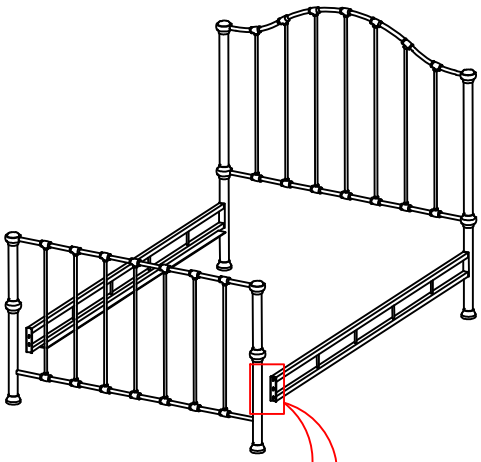


Figure 2

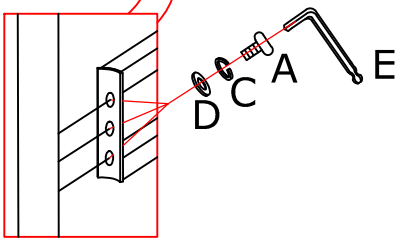

Step 1: Attach the side rail to the footboard and headboard using bolt(A), spring washer(C), flat washer(D) and tighten with the allen wrench(E). (Figure 1 and 2).

HARDWARE LIST

ITEM	DRAWING	DESCRIPTION	Q' TY
A		Bolt (Ø5/16"*7/8"L)	12 PCS
B		Bolt (Ø1/4"*5/8"L)	18 PCS
C		Spring Washer (Ø5/16")	12 PCS
D		Flat Washer (Ø5/16"*16mm)	12 PCS
E		Allen Wrench(5mm)	1 PC
F		Spring Washer (Ø1/4")	12 PCS
G		Flat Washer (Ø1/4"*13mm)	12 PCS
H		Allen Wrench(4mm)	1 PC
I		Nut (Ø1/4")	12 PCS
J		Wrench 10mm	1 PC

MADE IN VIETNAM

KINCAID®
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTIONS
Item: 59-132/133/134
GARDEN METAL BED

www.kincaidfurniture.com
Phone : 828-728-3261

Step 2: Attach slats to the side rail using bolt (B), flat washer (G), spring washer (F), nut (I) and tighten with wrench (J) and Allen Wrench (H). (Figure 3)

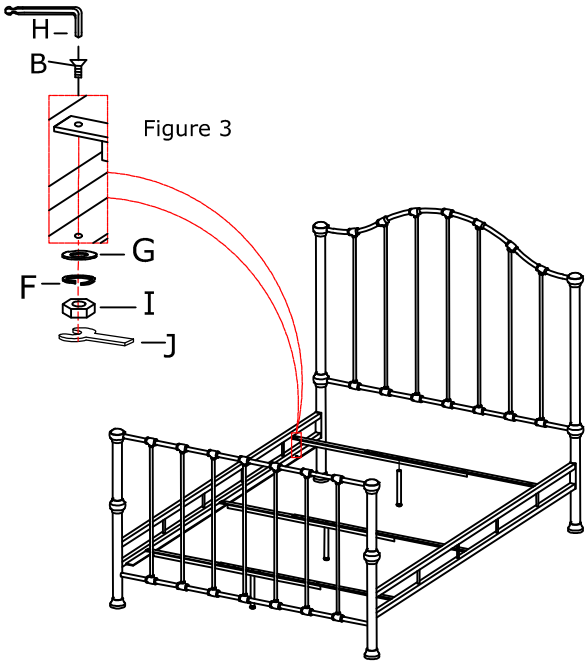


Figure 3

FOR QUEEN BED:
Step 3: Connect two slats together using bolt (B), flat washer (G), spring washer (F), nut (I) and tighten with wrench(J) and Allen Wrench (H). (Figure 4)

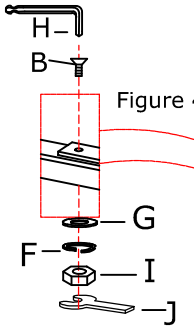


Figure 4

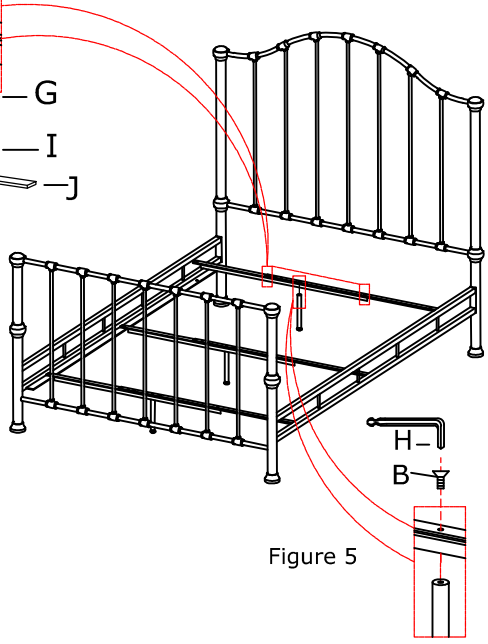


Figure 5

Step 4: Attach the support with slats using bolt(B) and tighten with allen wrench (H). (Figure 5).

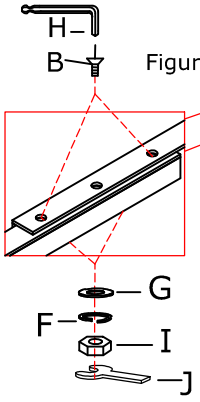
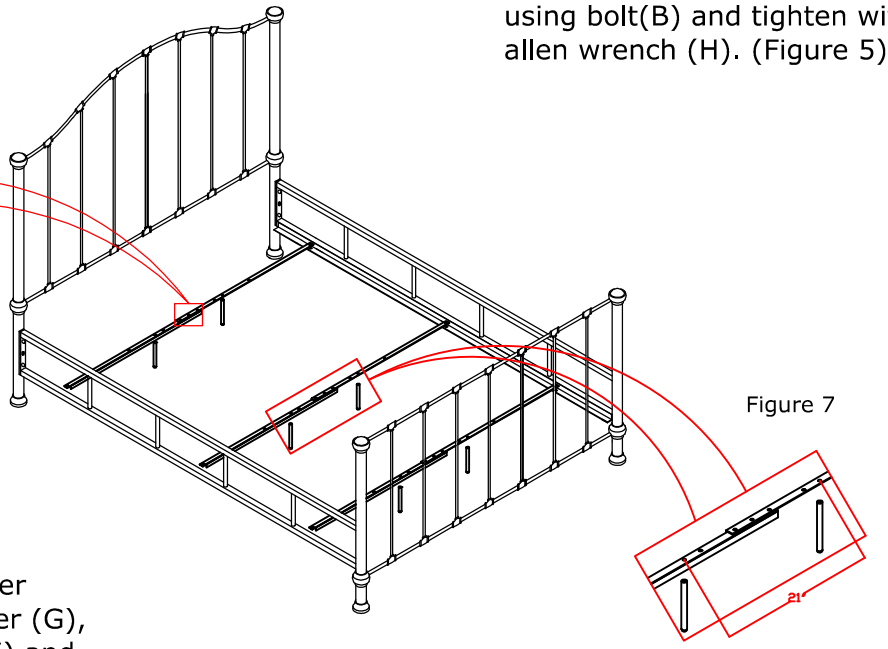


Figure 6


Figure 7

FOR KING BED:
Step 3: Connect two slats together using bolt (B), flat washer (G), spring washer (F), nut (I) and tighten with wrench(J) and Allen Wrench (H). (Figure 6)

Step 4: Attach the support with slats using bolt(E) and tighten with allen wrench (H). (Figure 7).

MADE IN VIETNAM