
a m e r i c a n d r e w®
· inspired design ·

ASSEMBLY INSTRUCTIONS

483-910

Tel: 828-728-3261
www.americandrew.com

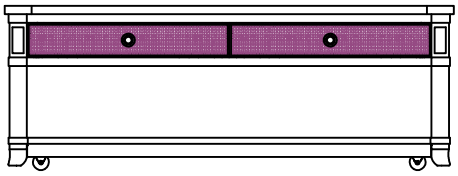


TOOLS REQUIRED:

Allen Wrench (supplied, part # E)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. CAUTION: Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

Figure 1

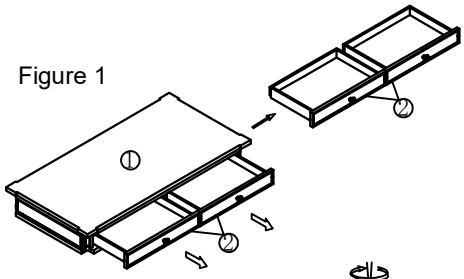

INSTRUCTIONS:

1.Pull out the drawer② of the upper top panel①. As shown in Figure 1.

2. Turn the table top on the smooth and clean soft surface.

3. Attach four posts③ to the top,using Bolt (A),Lock Washer (B), Flat Washer (C) and tighten with Allen Wrench (E). As shown in Figure 2 (STEP 1).

4.Put the bottom shelf④ onto the posts .

5.Attach four casters⑤ to the bottom shelf, using Bolt (D), Lock Washer (B), Flat Washer (C) and tighten with Allen Wrench (E). As shown in Figure 2 (STEP 2).

6.Turn the table up after assembled. Attach drawer to the upper top panel. Tighten all bolts before using it. As shown in Figure 3.

Figure 2


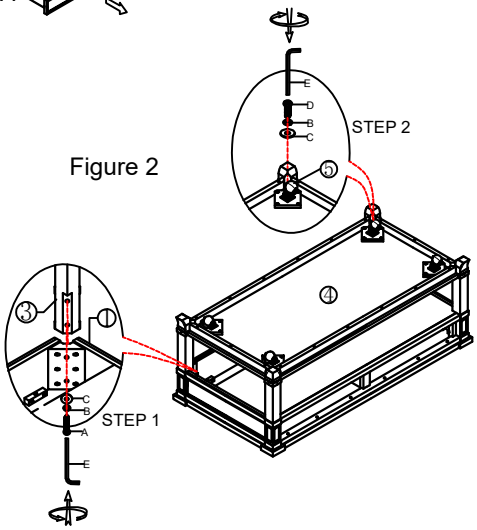


Figure 3

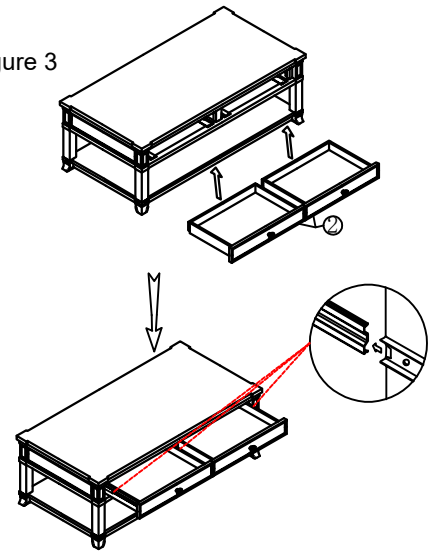

NO	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Bolt	5/16"x2"	8pcs
B		Lock washer	Ø5/16"	12pcs
C		Flat washer	Ø5/16"x3/4"	12pcs
D		Bolt	5/16"x3/4"	4pc
E		Allen Wrench	100*50*4mm	1pc

Thank you for purchasing furniture from american drew!