
a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

803-690C

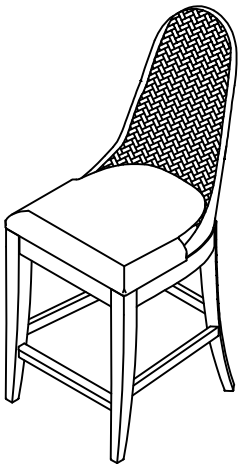

TOOLS REQUIRED:

Spanner Wrench (supplied, part # D)
Phillips Head Screwdriver (Not Provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach the front leg and back leg to the corner block of the chair seat, using Flat Washer (C), Lock Washer (B), Nuts (A) and tighten all nuts with Spanner Wrench (D). (See Figure 1)

2. Turn the inclined for attach brace, using Round head screw (E) and Philips head screwdriver (not provided). (See Figure 2)

3. Tighten all bolts and nuts before use.

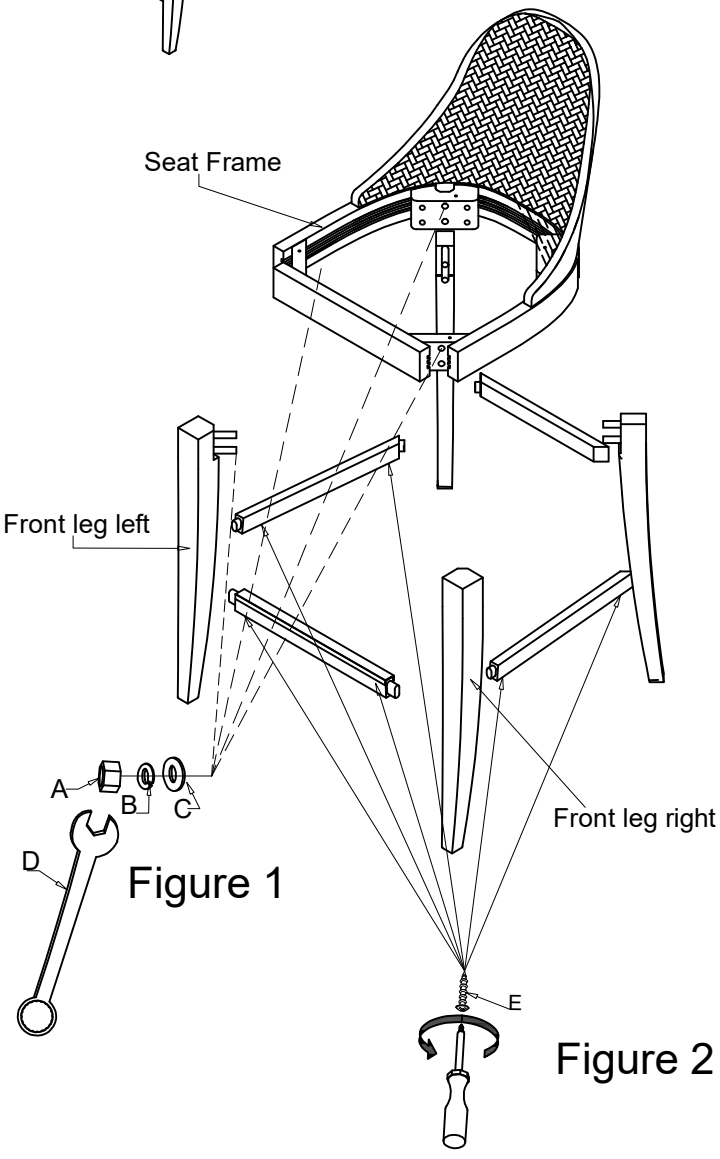



Figure 1

Figure 2

No.	Hardware List		Q'ty.
A		Hex Nut Ø5/16"xD12xH6mm	8
B		Lock Washer Ø5/16xØ14x1mm	8
C		Flat Washer Ø5/16xØ22x1.5mm	8
D		Spanner Wrench 12mm	1
E		Round head screw Ø8xL1-1/2"	8

Thank you for purchasing furniture from american drew!