


WWT
WESTINTRENDS
WWT

DESIGNED IN CALIFORNIA

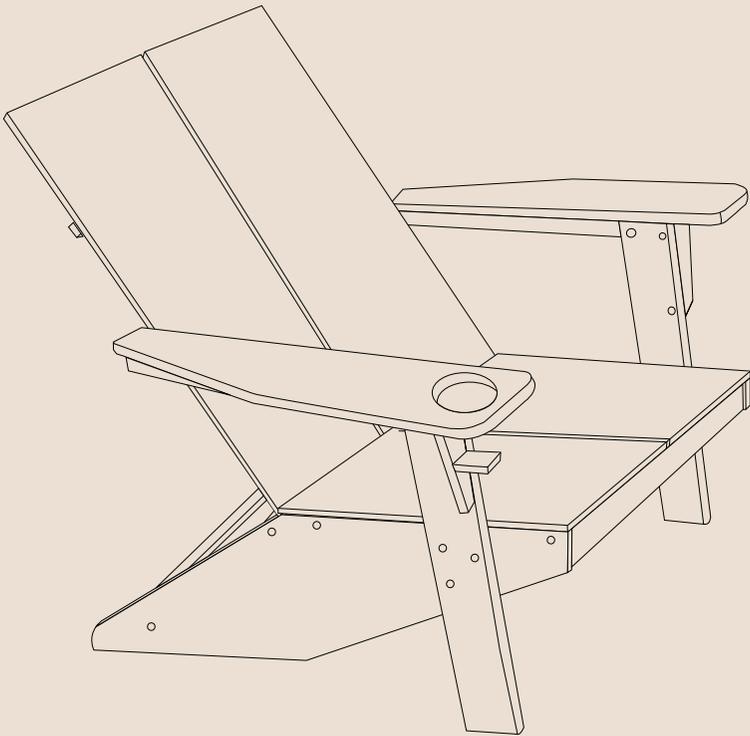

— MODERN POLY ADIRONDACK CHAIR —

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

[*https://westintrends.com/welcome*](https://westintrends.com/welcome)



QUESTIONS OR COMMENTS?

If you have questions reach out to
cs@westintrends.com

FOLLOW, SHARE, & LEARN



PRODUCT REGISTRATION

[*https://westintrends.com/apps/product-registration*](https://westintrends.com/apps/product-registration)



! CARE & MAINTENANCE

Please keep this instruction for your future reference.

- Be careful when assembling, avoid damaging the top surface.
- Clean the chair with lukewarm water, mild detergent & soft cloth.
- Firmly secure all bolts before use, Do not use any part of this item as a step ladder.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Do not overtighten screws. (Insert all screws before tightening screws.)
- Please do not exceed the weight limitations of this item.




TOOLS REQUIRED



HARDWARE




PARTS

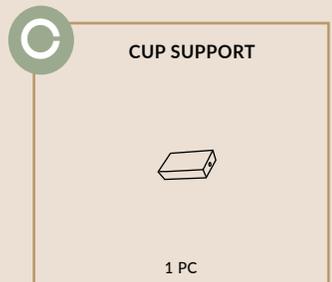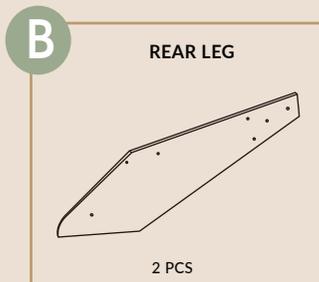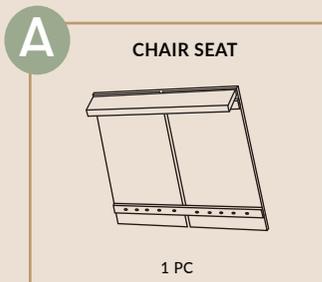

PARTS

D


RIGHT CHAIR ARM



1 PC

E


LEFT CHAIR ARM



1 PC

F


CHAIR BACKREST

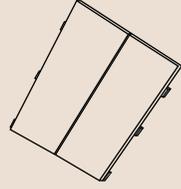

1 PC

G


RIGHT CHAIR LEG

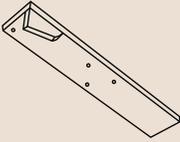

1 PC

H


LEFT CHAIR LEG

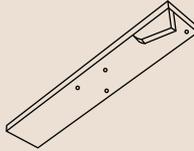

1 PC

I


BACK RAIL



1 PC

PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this chair and learn the exact position of each part to be assembled.

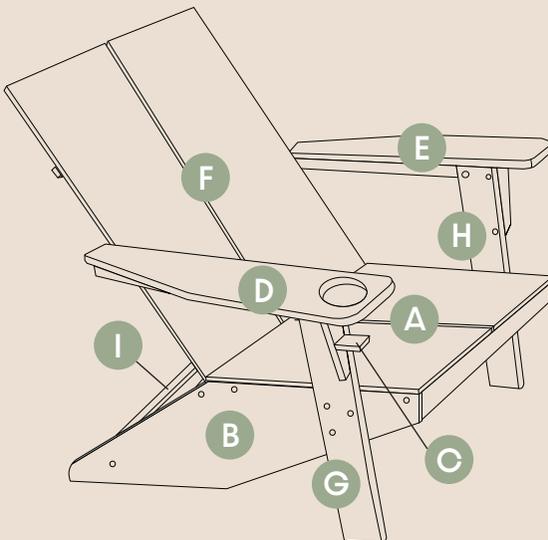

PRODUCT ASSEMBLY


1

Attach 2 pcs of **Part B Rear Leg** to **Part A Chair Seat** with 4 pcs of **Hardware #4 Screw**.

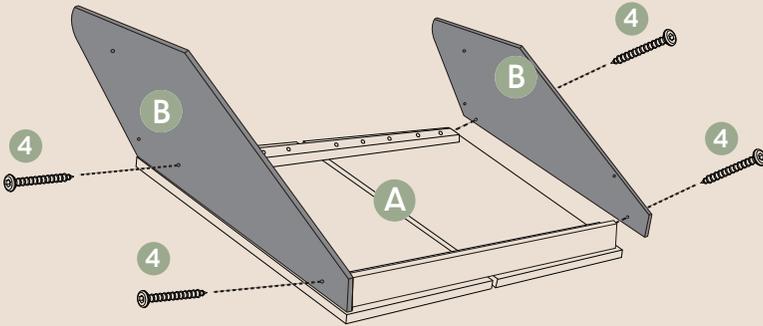


2

Attach **Part I Back Rails** between **Part B Rear Legs** with 2 pcs of **Hardware #4 Screw**.

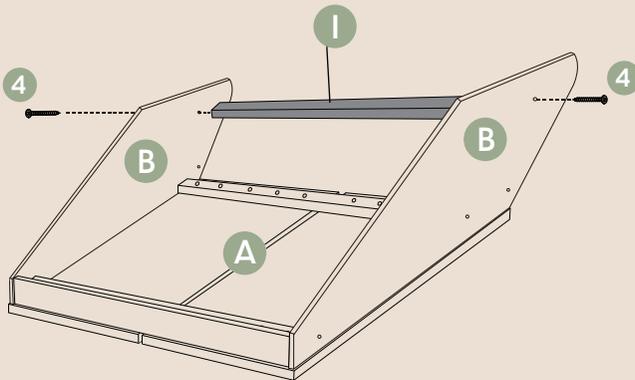


3

Attach Part C Cup Support to Part G Right Chair Leg with 1 pc of Hardware #5 Screw.

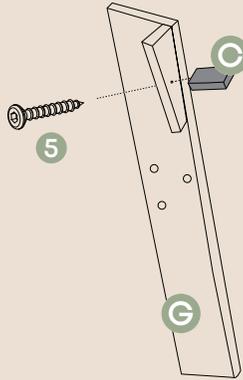

4


Attach Part G Right Chair Leg to Part B Rear Leg with 3 sets of Hardware #2 Bolt, #7 Washer and #6 Nut.

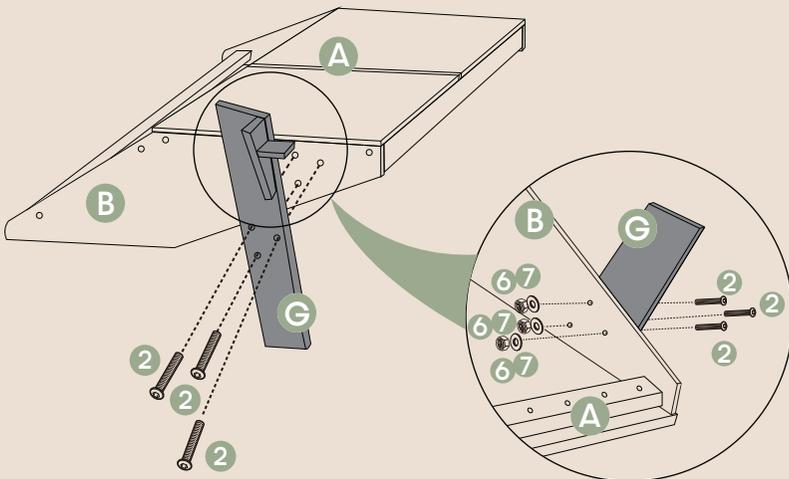

PRODUCT ASSEMBLY

5


Attach **Part H Left Chair Leg** to **Part B Rear Leg** with 3 sets of **Hardware #2 Bolt, #7 Washer and #6 Nut**.

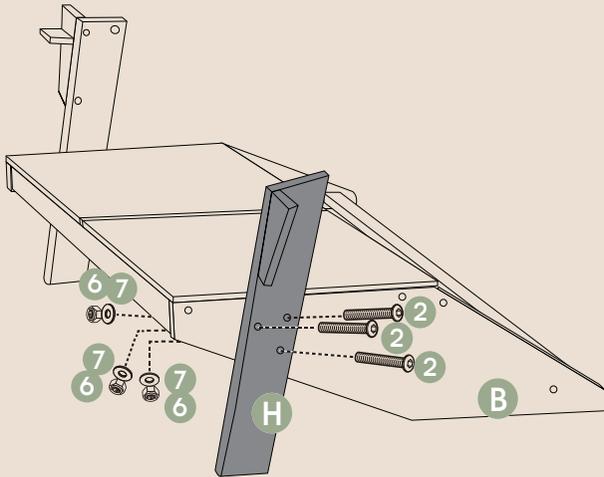

6

Attach **Part E Left Chair Arm** to **Part H Left Chair Leg** with 1 set of **Hardware #1 Bolt, #7 Washer and #6 Nut**.

Do the same to assemble **Part D Right Chair Arm** to **Part G Right Chair Leg**.

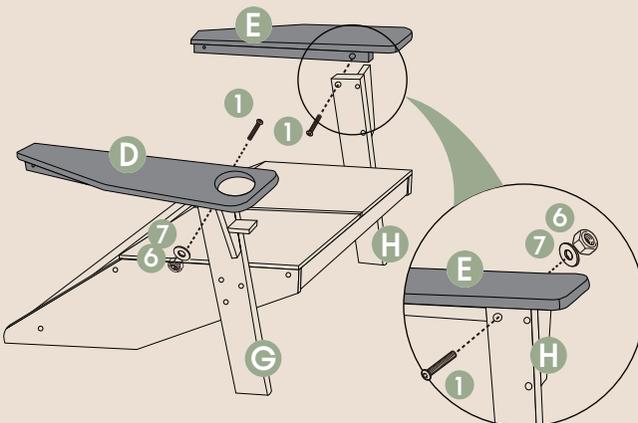


PRODUCT ASSEMBLY

7

Attach **Part F Chair Backrest** to **Part D Right Chair Arm** and **Part E Left Chair Arm** with 2 pcs of **Hardware #3 Screw**.


Attach **Chair Backrest** to 2 pcs of **Part B Rear Legs** with 2 pcs of **Hardware #4 Screw**.

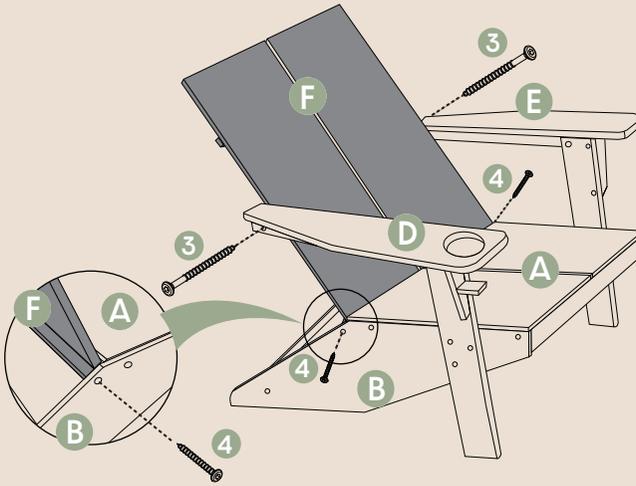

8

Tighten all the screws when the parts are loosely attached.

Enjoy the chair now.

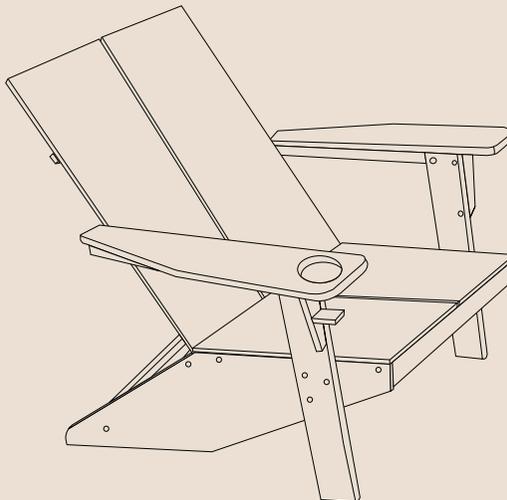

REGISTRATION & REFUND POLICY

<https://westintrends.com/apps/product-registration>



<https://westintrends.com/policies/refund-policy>



HAVING TROUBLE

- **Not sure how to assemble or missing pieces?**

Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - **DO NOT exceed 1500 PSI** - this will remove debris and dirt.