



OUTDOOR FOLDING ADJUSTABLE
ADIRONDACK CHAIR WITH CUP
HOLDER & HIDEAWAY OTTOMAN

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION

https://westintrends.com/apps/product-registration



(!) CARE & MAINTENANCE

Do not overtighten screws. (Insert all screws before tightening screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be very careful when folding chair to avoid smashing your hands or fingers.













HARDWARE




















PARTS








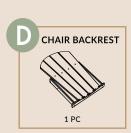


PARTS










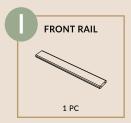

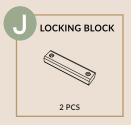



PRODUCT ASSEMBLY - OVERALL VIEW


Look at following overall view of this chair and learn the exact position of each part to be assembled.



PRODUCT ASSEMBLY




Attach Part G Support Leg to Part A Chair Seat with 2 pcs of Hardware #2 Bolt and Hardware #9 Washer and Hardware #7 Nut.

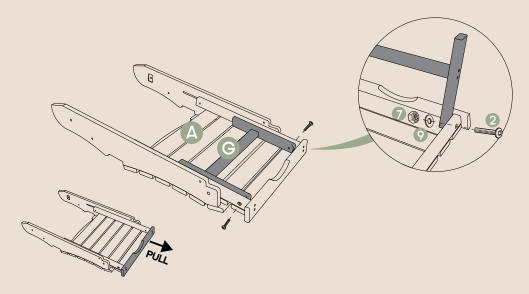

2

Attach Part I Front Rail to Part B Right Chair Leg and Part C Left Chair Leg with 4pcs of Hardware #5 Screw.

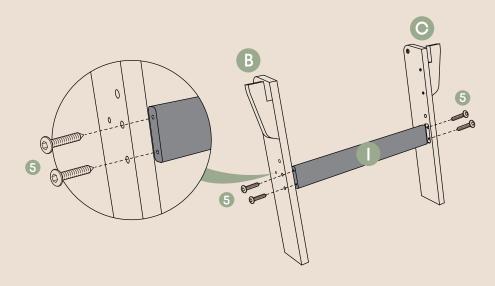


PRODUCT ASSEMBLY




Connect the finished part of Step 2 to the finished part of Step 1 with 2 pcs of **Hardware #2 Bolt** and **Hardware #9 Washer** and **Hardware #7 Nut**.

Do not tighten the bolts too much at this step.

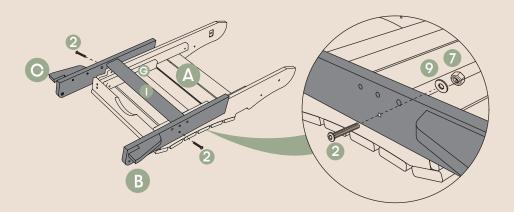



Place the steel pins into both legs to lock them in place.

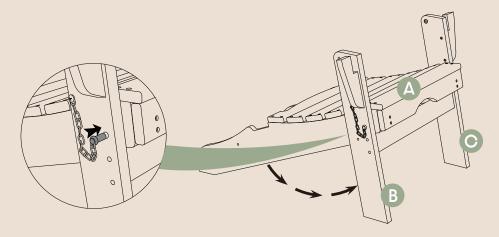




Attach Part F Left Chair Arm to Part C Left Chair Leg with 1 pc of Hardware #4 Bolt and Hardware #9 Washer and Hardware #8 Nut.

Do same to Part E Right Chair Arm and Part B Right Chair Leg.

Do not tighten the bolts too much at this step.

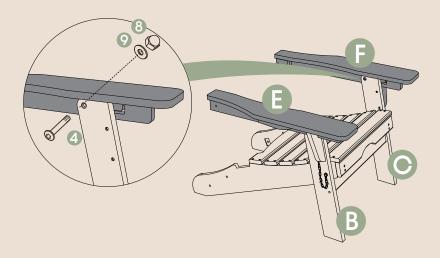




Fix Part D Chair Backrest into Part A Chair Seat and then attach Part D Chair Backrest to Part F Left Chair Arm with 1 pc of Hardware #1 Bolt and Hardware #9 Washer and Hardware #7 Nut

Do same to Part D Chair Backrest and Part E Right Chair Arm.


Do not tighten the bolts too much at this step.

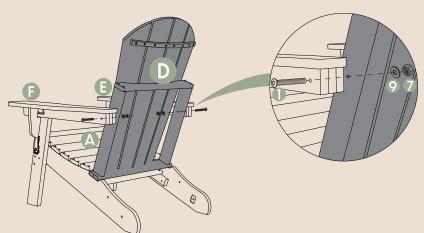




Attach Part J Locking Block to Part D Chair Backrest (both sides) with 2 pcs of Hardware #5 Screw and attach Part J Locking Block to Part A Chair Seat (both sides) with 2 pcs of Hardware #3 Bolt and Hardware #9 Washer and Hardware #7 Nut.

Attach Part H Back Rail to Part A Chair Seat with 2 pcs of Hardware #5 Screw.

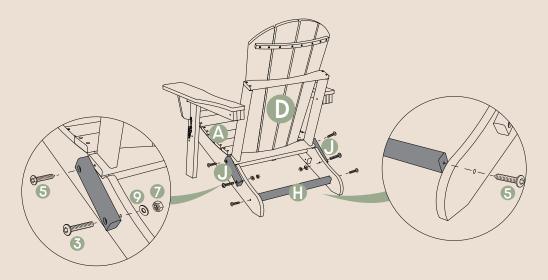

8

Attach Part K Cup Holder to Part E Right Chair Arm with 2 pcs of Hardware #6 Screw Tighten all screws after assembly is complete.

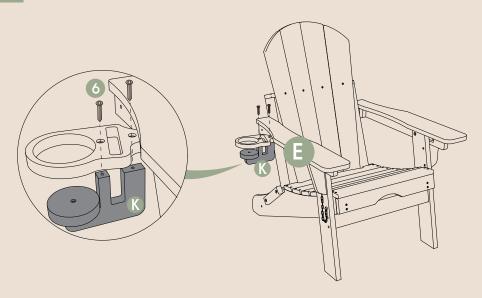

Congratulations! You finished the assembly of this Adirondack chair.

Pull the steel pins out of both legs to fold the chair as below.



REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

Not sure how to assemble or missing pieces?
 Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #. Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove any debris and dirt.