



ASSEMBLY INSTRUCTIONS


Benjamin Mirror & Wren Dresser 233121 & 233131

Thank you for purchasing this quality product from A.R.T. Furniture. Be sure to check all packing material for parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

Note: Some furniture is heavy, it is recommended that two people assemble this item to avoid injury or damage.

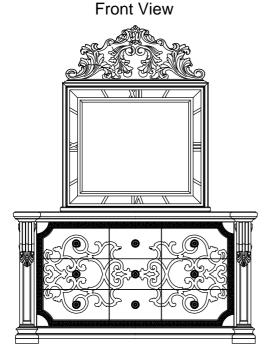


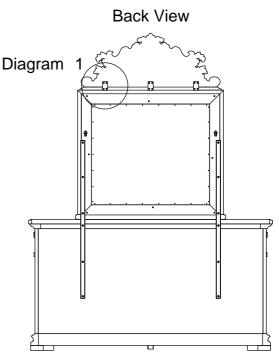

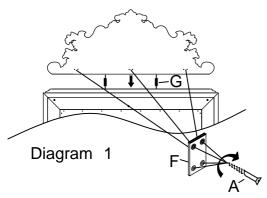

E B D C	
Back View	<i>></i>
Diagram 2	

No.	Hardware List		
Α		Wood Screw	12
В		½" X 1½" Bolt	10
С	0	Flat Washer	10
D	0	Lock Washer	10
Е		Wrench	1
F		Connection Metal Plate	3
G		Dowel	2
		Anti-Tip Kit	1

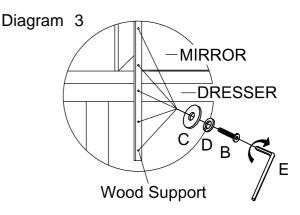

Page 1