

JUNO PENDANT STEM KITS

Step 1. Assemble pendant kits per Figures 1 & 2.

Step 2. Assemble bracket to Trac per Figure 3.

Step 3. Hang Trac onto stem by slipping the bracket over the nut on the end of the stem. Tighten the nuts to secure Trac (Figure 4).

Step 4. On Trac-Master® Trac, tighten the locking screw to stop pendant from sliding on Trac.

Step 5. Use two kits for 2', 4' and 6' trac sections, three kits for 8' trac section and four kits for 12' trac sections.

T90 – T-BAR PENDANT STEM KIT

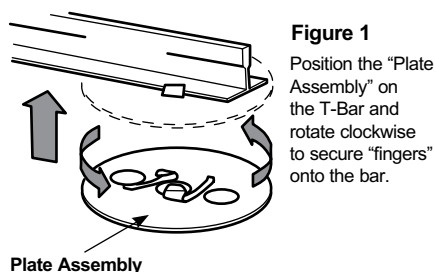


Figure 1
Position the "Plate Assembly" on the T-Bar and rotate clockwise to secure "fingers" onto the bar.

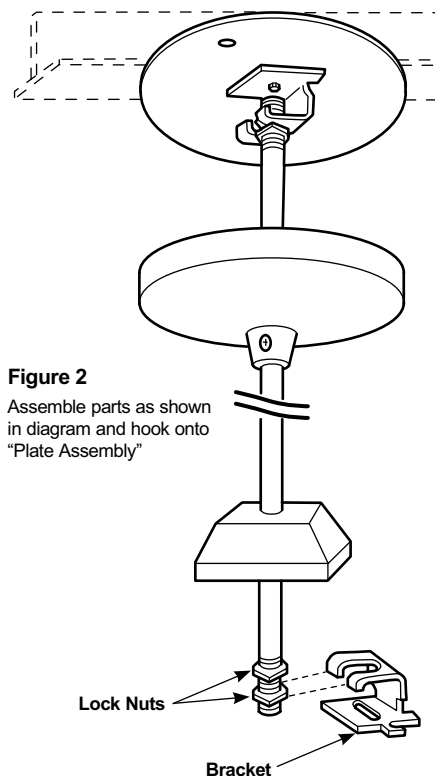


Figure 2
Assemble parts as shown in diagram and hook onto "Plate Assembly"

T91 – RIGID CEILING PENDANT STEM KIT


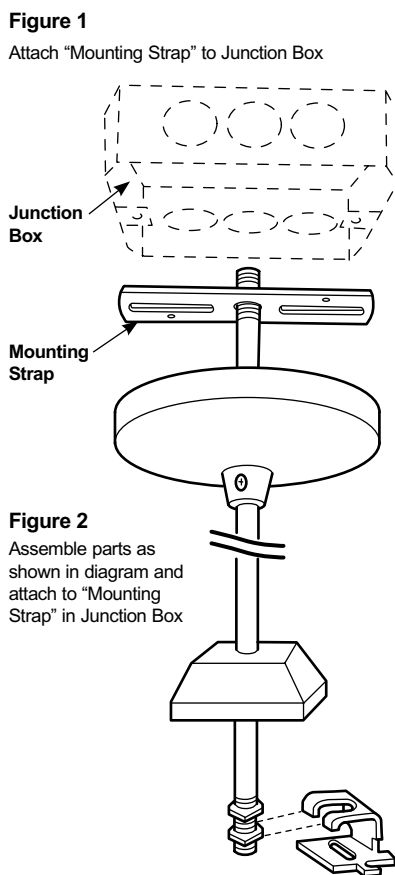


Figure 1
Attach "Mounting Strap" to Junction Box

Figure 2
Assemble parts as shown in diagram and attach to "Mounting Strap" in Junction Box

T93 – WIREWAY COVER FOR ELECTRIFIED TRAC

When electrifying the Trac, replace the small, square bracket cover with the T93 Wireway Cover to conceal the wires.

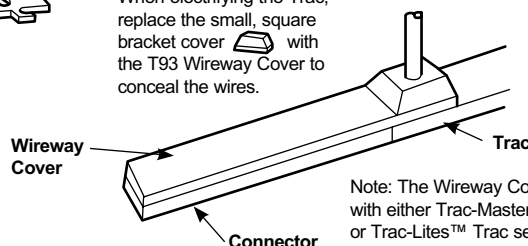

Note: The Wireway Cover can be used with either Trac-Master® (Single Circuit) or Trac-Lites™ Trac sections.

TRAC-MASTER® TRAC

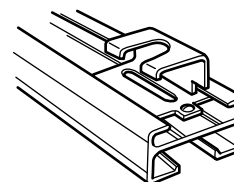


Figure 3
Slide the bracket down the wireway channel to position desired and lock in place

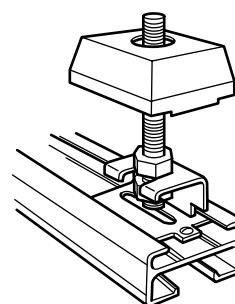


Figure 4
To hang Trac, slip bracket over the nut on bottom of stem

TRAC-LITES™ TRAC

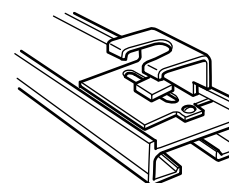


Figure 3
Use square headed bolt and acorn nut to attach bracket to Trac utilizing existing holes or those drilled by installer

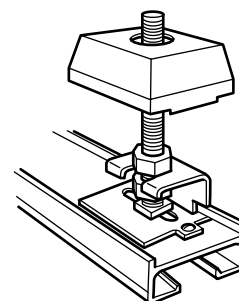


Figure 4
To hang Trac, slip bracket over the nut on bottom of stem