


NEVIS PANEL LOW PROFILE TWIN/FULL/QUEEN BED

ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE


BOX #1

- A. HEADBOARD 1 PC
B. FOOTBOARD 1 PC

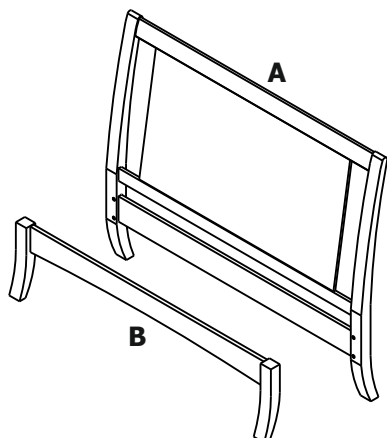


BOX #2



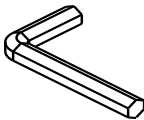



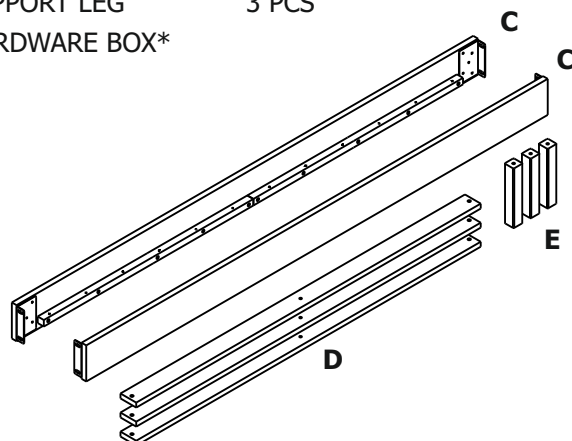- C. SIDE RAIL 2 PCS
D. BED SLAT 3 PCS
E. SUPPORT LEG 3 PCS
BED HARDWARE BOX*

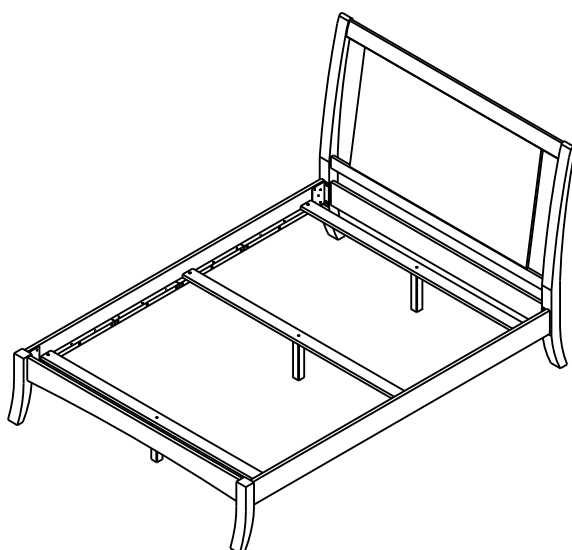

NEVIS PANEL LOW PROFILE ASSEMBLED






BED HARDWARE PACKED IN BOX #2


1	PHILLIPS HEAD BOLT(8x20mm)	8 PCS	2	WOOD SCREW (8x30mm)	7 PCS	3	ALLEN KEY	1 PC
								
4	ALLEN BOLT (6x40mm)	4 PCS	5	SPRING WASHER (M8)	8 PCS	6	FLAT WASHER (M8)	8 PCS
								

TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)


YOUR BOX
MAY CONTAIN
EXTRA HARDWARE




STEP 1 :

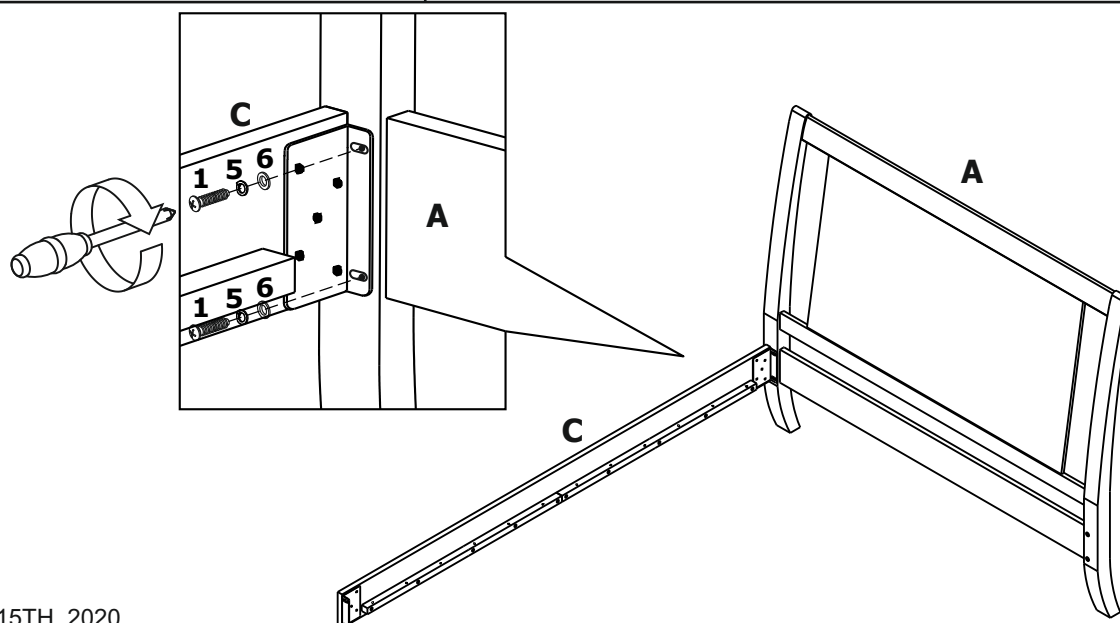

STEP 2 :

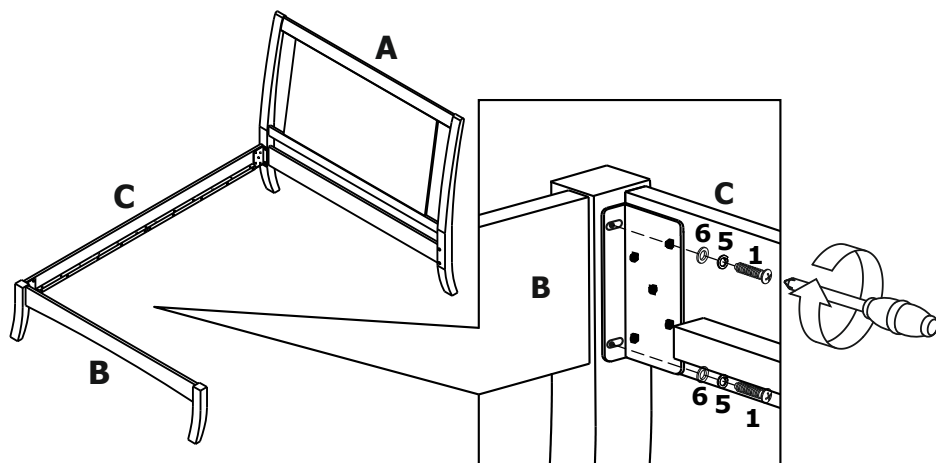


STEP 3 :

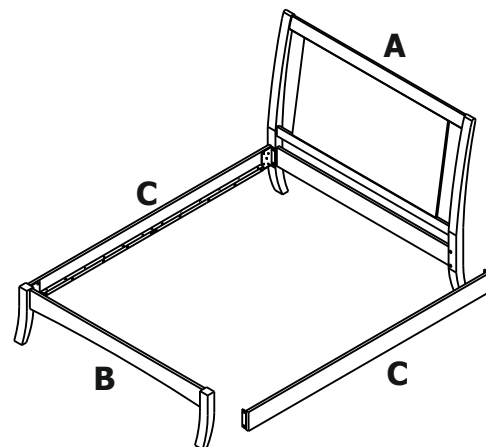


STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

STEP 4 :

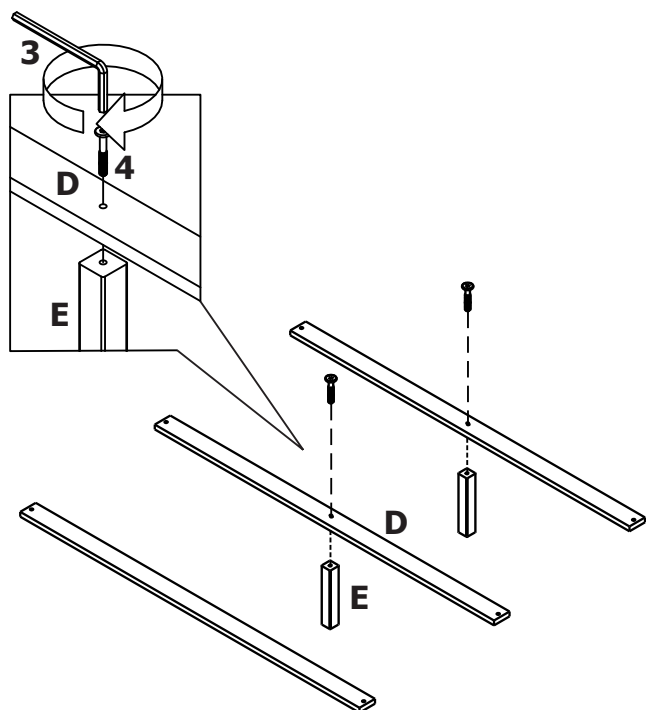

STEP 5 :

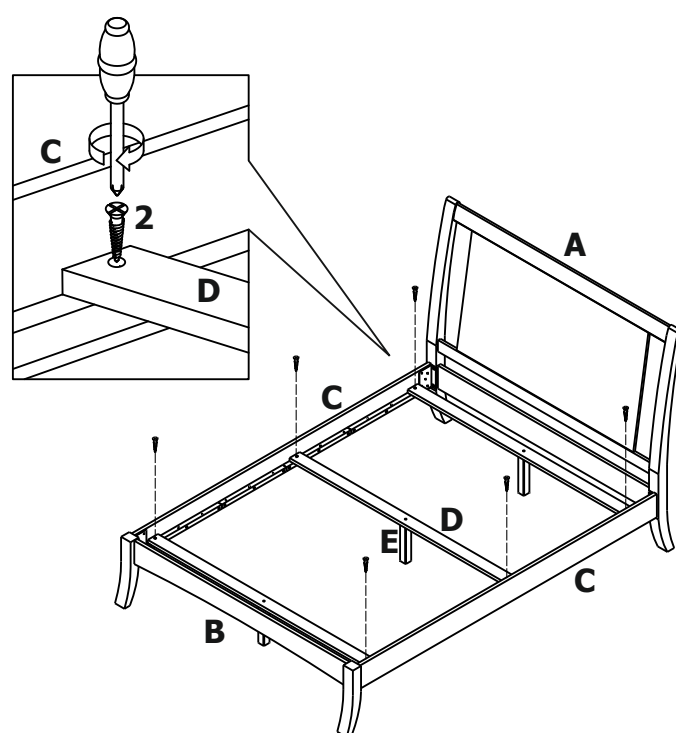


INSTRUCTIONS FOR ADJUSTING LEVELERS :

POSITION THE BED IN YOUR ROOM.
LOCATE LEVELERS UNDER EACH
SUPPORT LEG (E).

TURN LEVELERS COUNTER-CLOCKWISE
TO EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH SUPPORT
LEG IS APPLYING EQUAL UPWARD
PRESSURE ON THE BED SUPPORT SLAT.

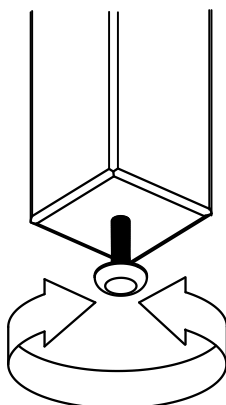

MAINTENANCE INSTRUCTIONS :

- REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE SUPPORT LEG.
- READJUST LEVELERS AFTER MOVING YOUR BED.

NEVIS PANEL LOW PROFILE TWIN/FULL/QUEEN BED

APPENDIX A:ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. BED SLAT
E. SUPPORT LEG

3 PCS
3 PCS

2. WOOD SCREW (8x30mm)


7 PCS

4. ALLEN BOLT (6x40mm)

4 PCS

STEP 1 :

USE ALLEN KEY **(3)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

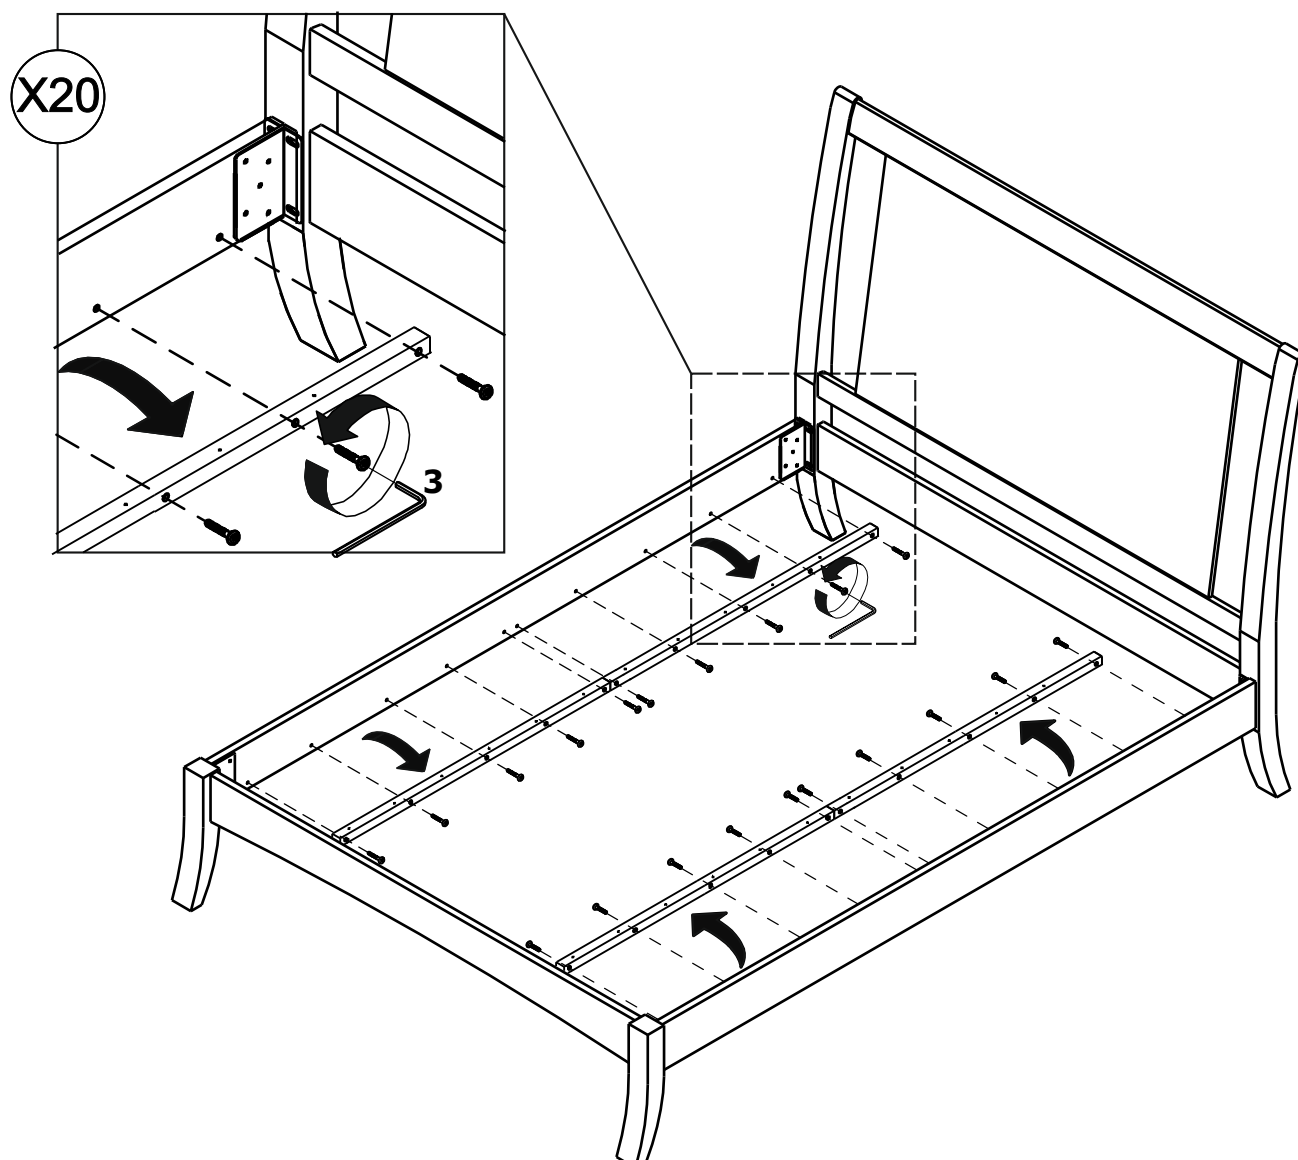

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED : JUNE 15TH, 2020