



Large Allen Screw – 16 Pcs  
Small Allen Screw – 4 Pcs




Allen Key – 1 Pc

## Assembly Instructions Maxfield 3-Tier Bar Cart




Bottom Wood Tray – 1 Pc

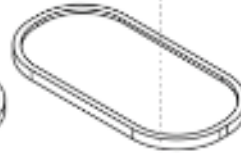

Middle Wood Tray – 1 Pc




Top Metal Tray – 1 Pc

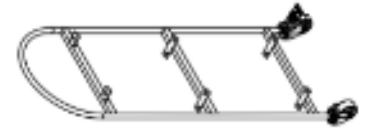


Right Trolley Frame – 1 Pc




Left Trolley Frame – 1 Pc

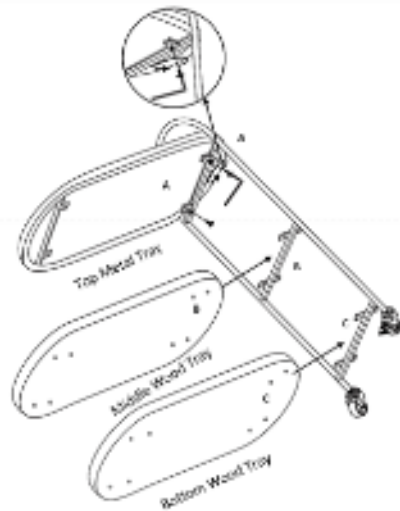

Placed the right trolley frame to 90 degree direction and fix top metal tray with small screws accordingly fix mid & bottom wooden trays with large screws in the direction of 'A', 'B' & 'C' sticker placed on all trays and frame as shown in above Image.

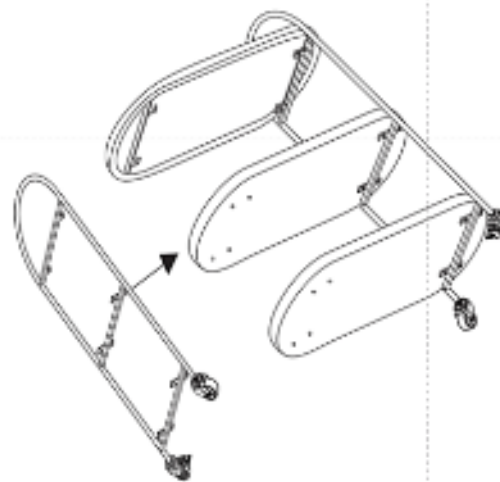

After Securing all three trays to right frame, secure all trays with left frame as shown in above Image.

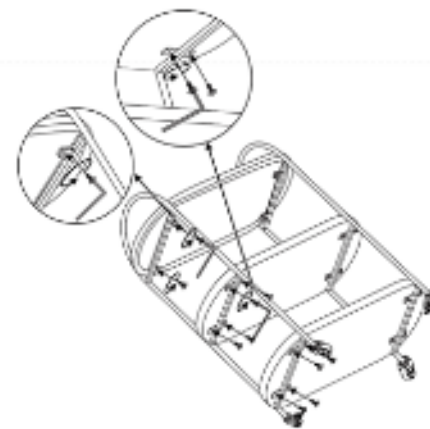

Fix all trays securely as shown in above Image.



Assembled