


# KINGSTON

KITCHEN & BATH

## INSTALLATION INSTRUCTIONS

### Overflow Hole Cover

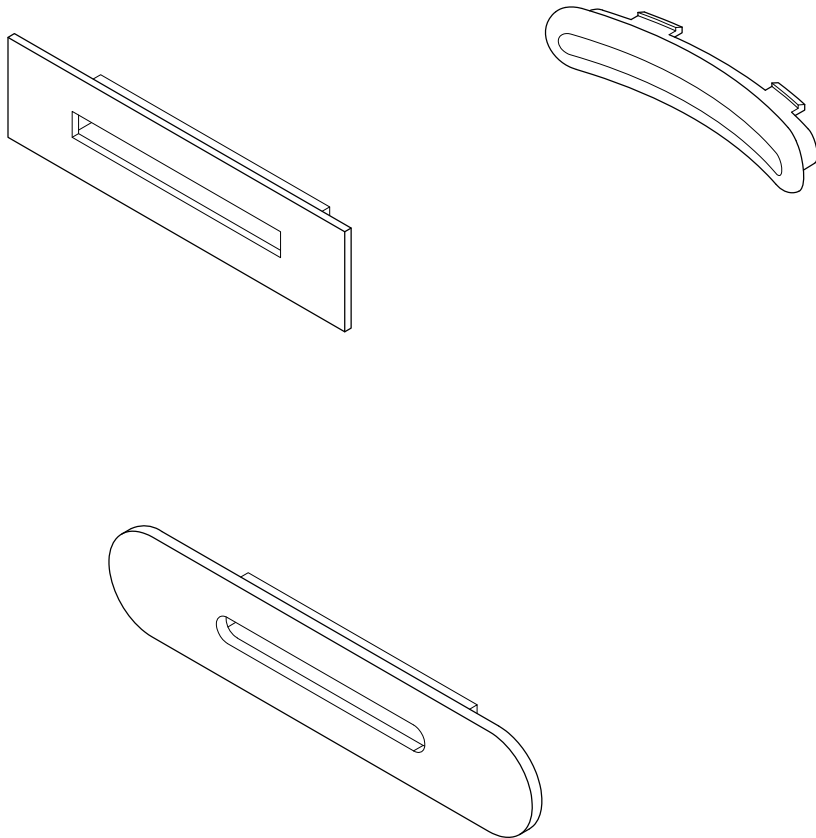

## NOTICE

Failure to follow all directions may cause leaks  
which may result in water damage

www.kingstonbrass.com  
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS  
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com  
12775 Reservoir Street, Chino, CA 91710

## TOOLS REQUIRED

 Allen Wrench

### Installation Steps:

1. Remove the old overflow trim with an Allen wrench.  
Insert Allen wrench inside the rectangular hole then slowly pull the overflow trim on its left and right corner of the rectangular hole.
2. After the old overflow trim is removed from the tub, clean the surface around the overflow hole with a damp cloth.
3. Insert the new overflow trim onto the tub. Slowly and carefully push it all the way inside and make sure it fits tightly.

