



NATIONAL SAFETY APPAREL

An ISO 9001 with Design certified company

GARMENT MEASUREMENT CHART

PRODUCT CODE:

G99CR----

DESCRIPTION:


Cryogenic Gloves

How to Measure:

1. Palm

Measure the circumference of your hand with a tape measure around the knuckles of your hand

**Measure your dominant hand – right hand if you are right-handed, left hand if you are left-handed*

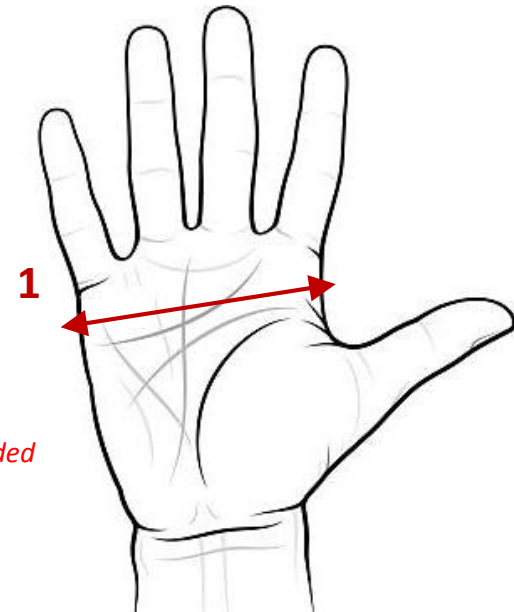

Size	SM	MD	LG	XL
Palm*:	6" – 6 ½"	7" – 7 ½"	8" – 8 ½"	9" – 9 ½"

*This guide is only a indicator. there may still be some variation person to person