

BOKA WOOD/UPH FULL BED

ASSEMBLY INSTRUCTIONS




PARTS AND FITTING PACKAGING DETAIL

BOX #1

- A. HEADBOARD
- B. LEFT LEG
- C. RIGHT LEG
- D. STRETCHER


1 PC
1 PC
1 PC
1 PC

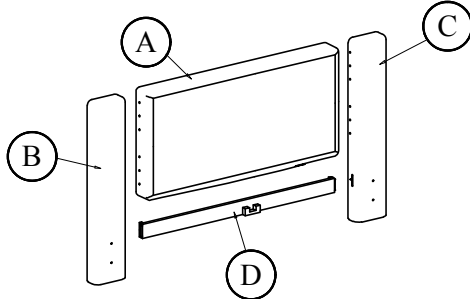

BOX #2

- E. FOOTBOARD
- F. SLAT ROLL


1 PC
1 SET

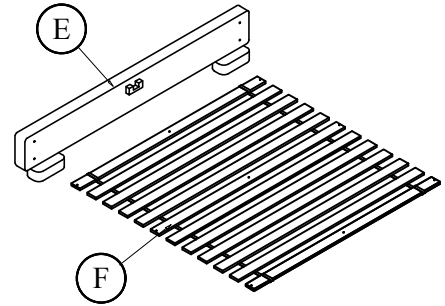


BOX #3

- G. SIDE RAILS
- H. CENTER SUPPORT
- I. SUPPORT LEG

2 PCS
1 PC
5 PCS

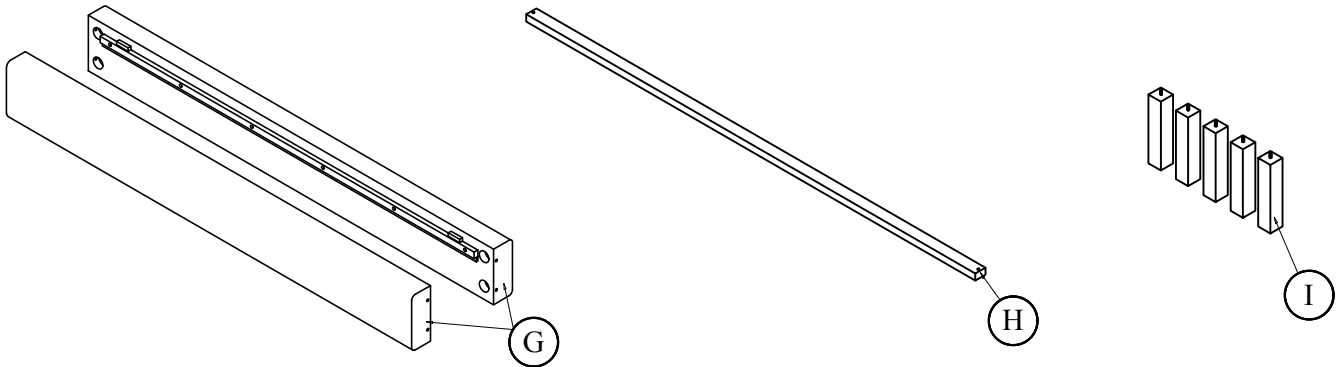

FULLY ASSEMBLED

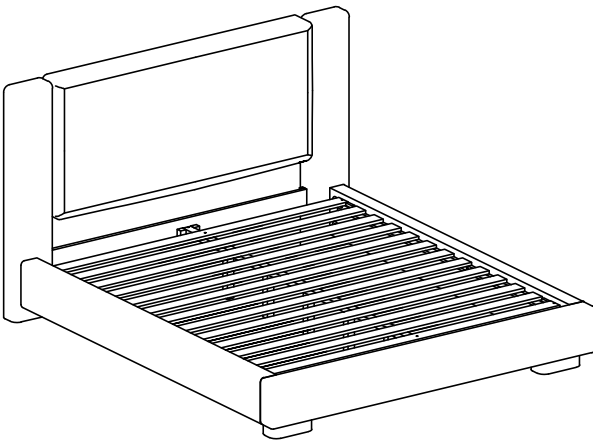


HARDWARE KIT PACKED IN BOX #1

NO.	DESCRIPTION	IMAGE	QTY
1	ALLEN BOLT (8x50mm)		8 PCS
2	ALLEN BOLT (6x40mm)		2 PCS
3	LOCK WASHER (M9)		10 PCS
4	FLAT WASHER (M8x20)		8 PCS
5	FLAT WASHER (M6x13)		2 PCS
6	ALLEN KEY		1 PC

HARDWARE KIT PACKED IN BOX #2

7	THREADED BOLT (8x70mm)		8 PCS
8	ARC WASHER (2x14x26mm)		8 PCS
9	LOCK WASHER (M9)		8 PCS
10	HEX NUT (M8)		8 PCS
11	WRENCH		1 PC
12	WOOD SCREW (4x35mm)		2 PCS
13	WOOD SCREW (4x25mm)		9 PCS
14	ALLEN KEY		1 PC




MODUS
FURNITURE


BOKA WOOD/UPH FULL BED

ASSEMBLY INSTRUCTIONS


STEP 3

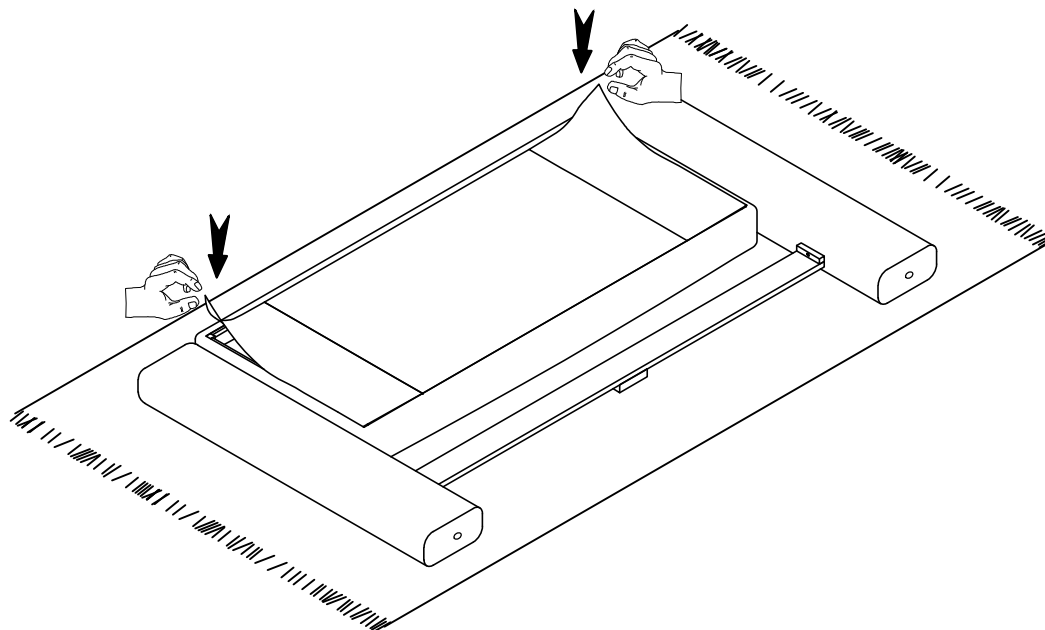

STEP 4

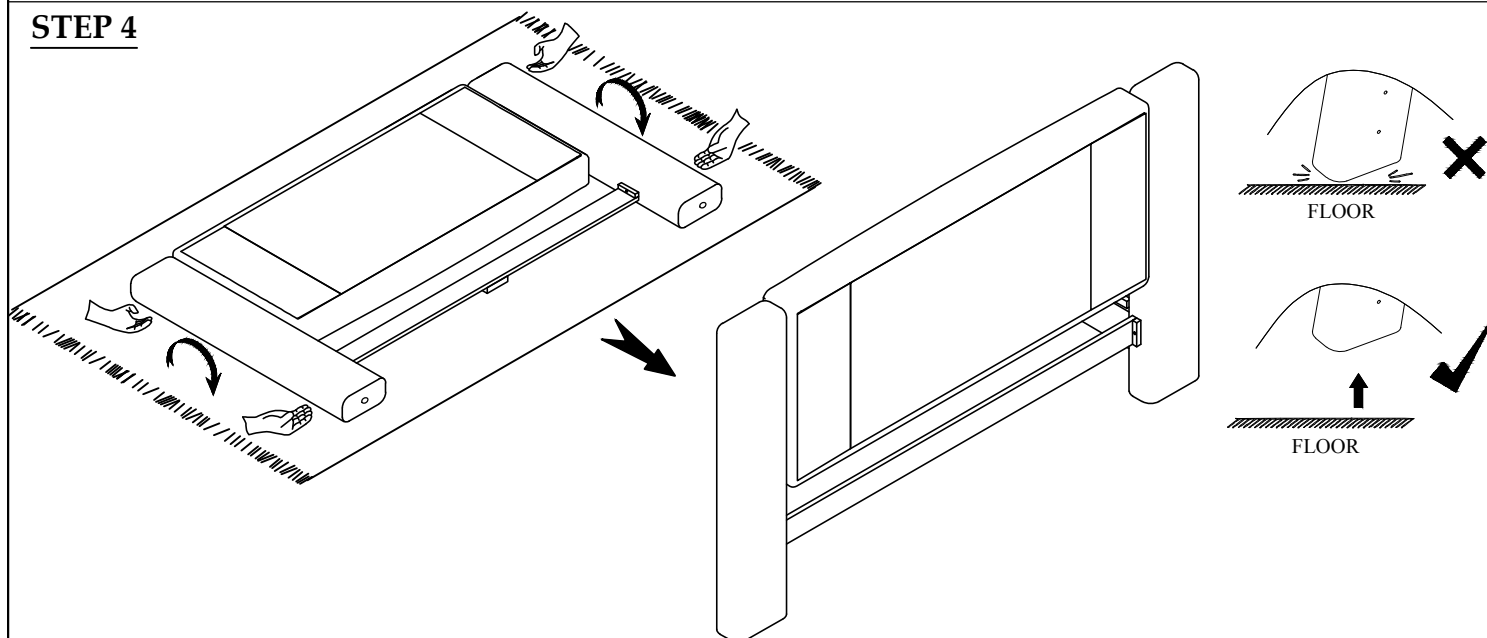

STEP 5

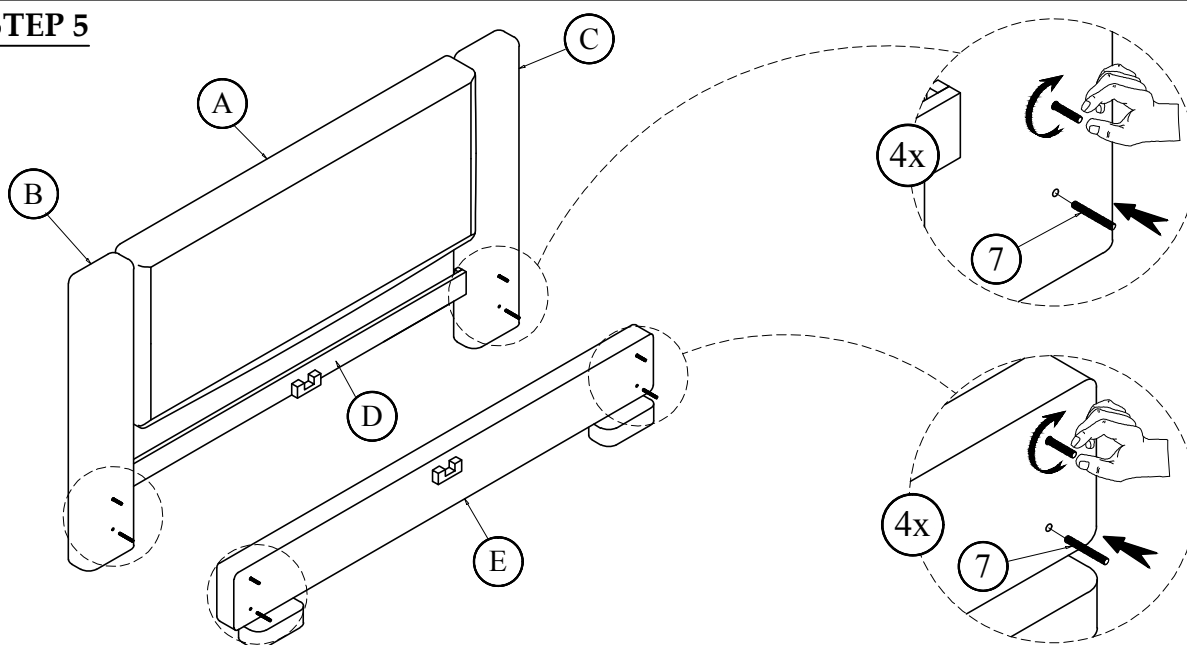


BOKA WOOD/UPH FULL BED


ASSEMBLY INSTRUCTIONS



STEP 6

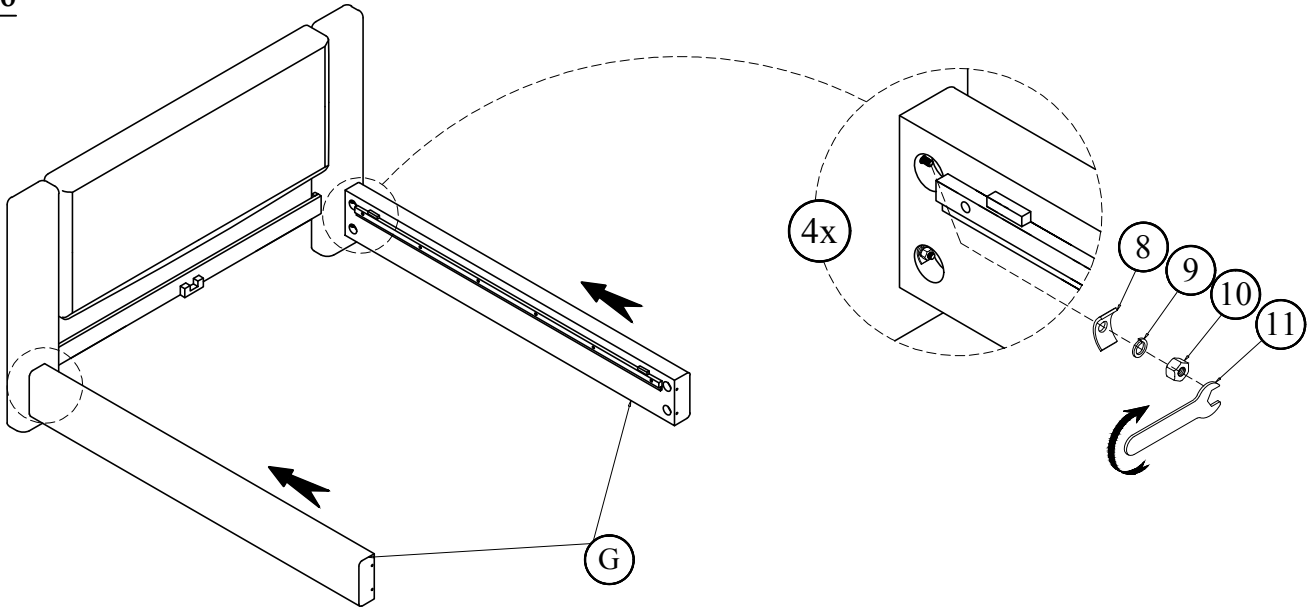


STEP 7

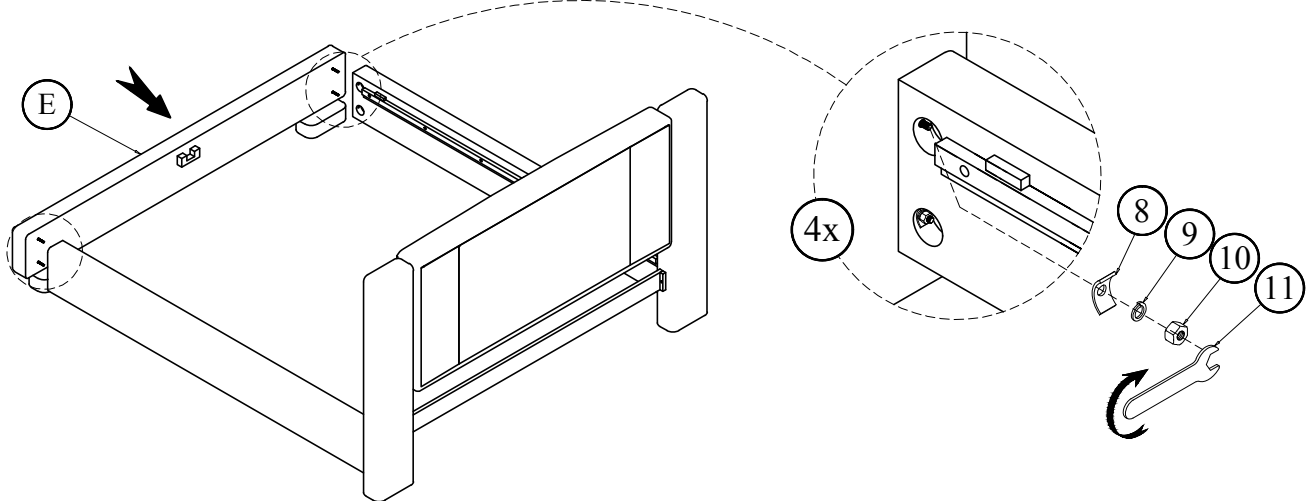

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 8, 9, 10 & 11 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8

STEP 8

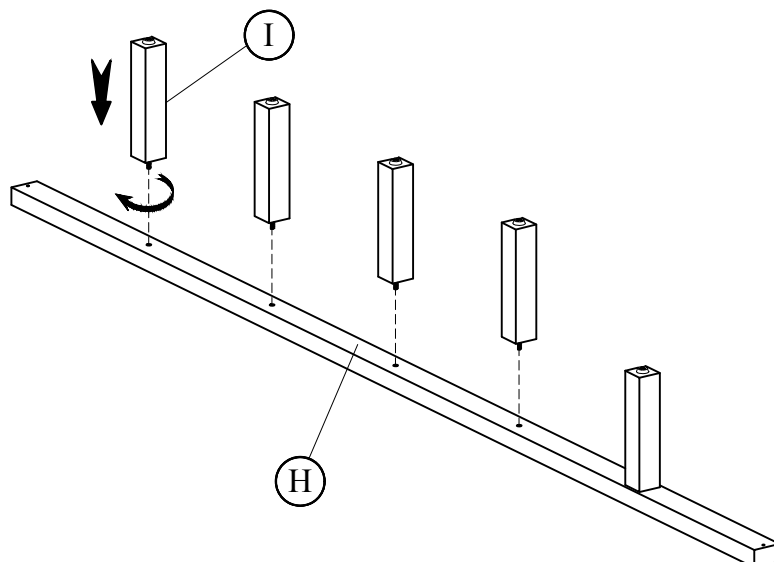


BOKA WOOD/UPH FULL BED


ASSEMBLY INSTRUCTIONS




STEP 9

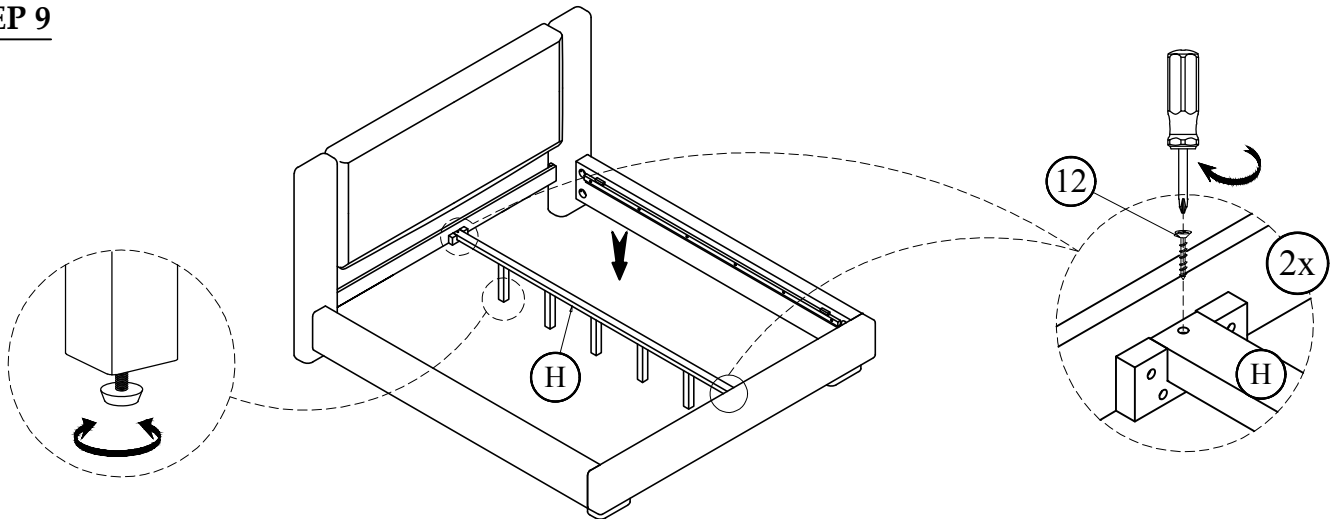

STEP 10

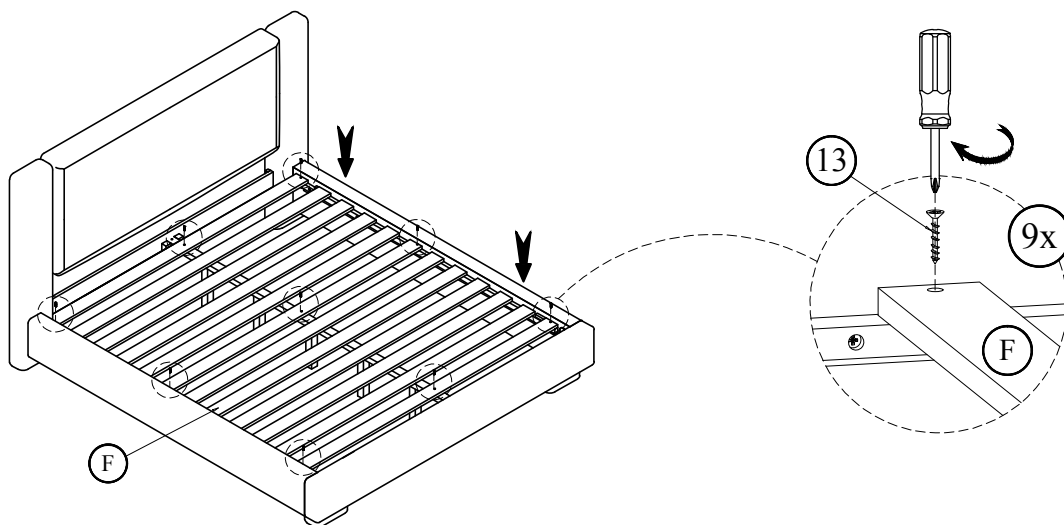

STEP 11

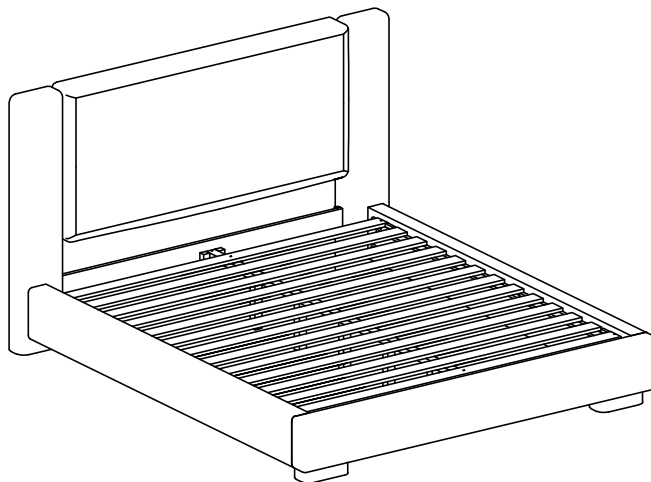

ASSEMBLY COMPLETE


PAGE 5 OF 6

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each leg support (I).

Turn the leveler counter-clockwise to extend and clockwise to retract it.

Adjust each leveler until each leg support is applying equal, upward pressure on the center slat.

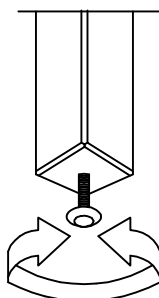

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

BOKA WOOD/UPH FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	: 1 SET	*WOOD SCREW (4x35mm)	: 2 PCS
H. CENTER SUPPORT	: 1 PC	*WOOD SCREW (4x25mm)	: 9 PCS
I. SUPPORT LEG	: 5 PCS		

STEP #1:

USE ALLEN KEY (14) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

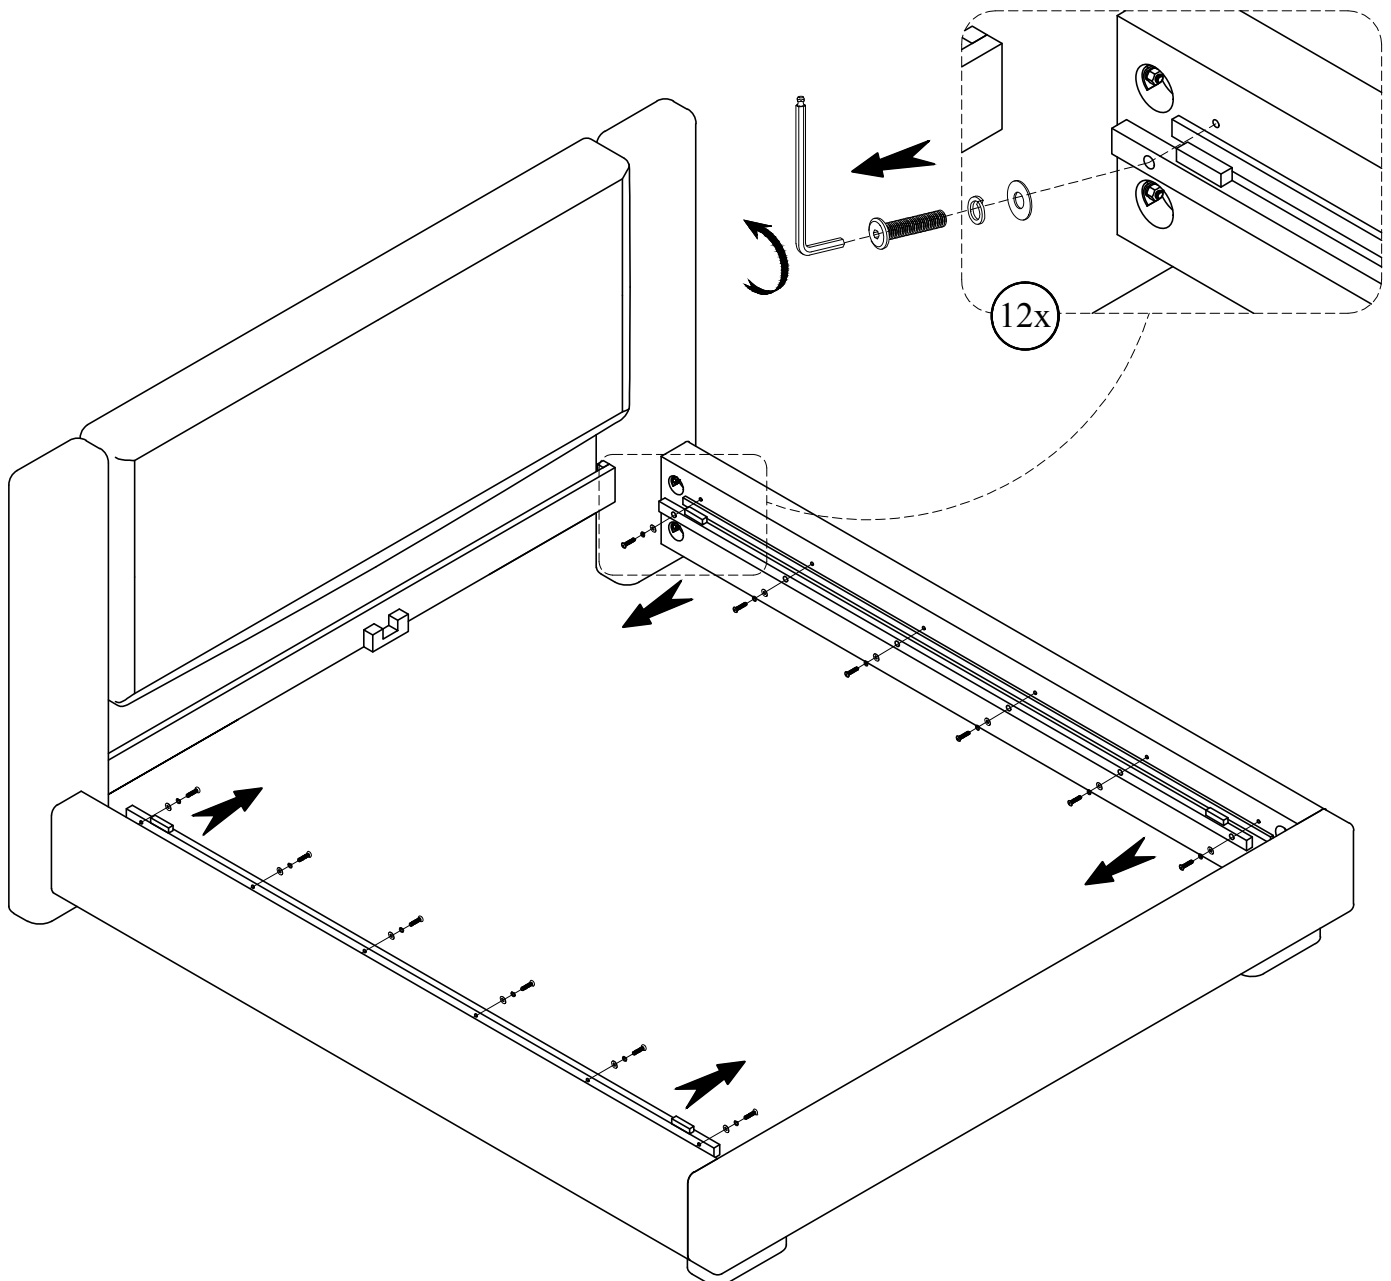

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.